



Product Maintenance Manual

Lenovo Tab M11&K11&K11Enhanced-Edition TB330FUXU&TB330FUPXUP

Issued by: T&SD WW Service
Date of issue: 2025/6/5
Document version: 1.0.0
Read this guide carefully before repair

Disclaimer

INFORMATION CONTAINED IN THIS DOCUMENT IS STRICTLY PRIVATE, PROPRIETARY, CONFIDENTIAL AND PERSONAL TO RECIPIENT ("CONFIDENTIAL INFORMATION") AND SHOULD NOT BE COPIED, DISTRIBUTED OR REPRODUCED IN WHOLE OR IN PART, OR DISCLOSED IN ANY MANNER TO ANY THIRD PARTY WITHOUT THE PRIOR WRITTEN CONSENT OF LENOVO.

RECIPIENT OF THIS DOCUMENT SHALL (A) ONLY USE CONFIDENTIAL INFORMATION FOR REPAIRING LENOVO OR MOTOROLA PRODUCTS ("THE PURPOSE"); (B) ONLY SHARE CONFIDENTIAL INFORMATION WITH INDIVIDUALS WHO NEED TO KNOW AND WHO AGREE IN WRITING TO KEEP THE INFORMATION CONFIDENTIAL ON SUBSTANTIALLY THE SAME TERMS AS THOSE CONTAINED IN THIS DISCLAIMER; (C) PROTECT AND PREVENT UNAUTHORIZED USE OR DISCLOSURE OF CONFIDENTIAL INFORMATION WITH THE SAME DEGREE OF CARE RECIPIENT USES FOR RECIPIENT'S OWN SENSITIVE INFORMATION, AND NO LESS THAN REASONABLE CARE BASED ON THE TYPE OF CONFIDENTIAL INFORMATION; (D) FULLY COOPERATE WITH LENOVO TO INVESTIGATE ANY UNAUTHORIZED USE OR DISCLOSURE OF THE CONFIDENTIAL INFORMATION, INCLUDING PROVIDING A LIST OF INDIVIDUALS WHO HAD ACCESS TO THE CONFIDENTIAL INFORMATION; AND RETURN OR DESTROY THE CONFIDENTIAL INFORMATION UPON LENOVO'S WRITTEN REQUEST.

RECIPIENT HEREBY ACKNOWLEDGES THAT UNAUTHORIZED DISCLOSURE OR USE OF CONFIDENTIAL INFORMATION MAY CAUSE IRREPARABLE HARM AND SIGNIFICANT INJURY TO LENOVO, THE EXTENT OF WHICH MAY BE DIFFICULT TO ASCERTAIN AND FOR WHICH MONEY DAMAGES MAY NOT BE AN ADEQUATE REMEDY. ACCORDINGLY, LENOVO SHALL BE ENTITLED TO IMMEDIATE INJUNCTIVE RELIEF TO ENFORCE THE OBLIGATIONS OF RECIPIENT UNDER THIS DISCLAIMER, IN ADDITION TO ANY OTHER RIGHTS AND REMEDIES IT MAY HAVE AT LAW.

CONFIDENTIAL INFORMATION REMAINS THE PROPERTY OF LENOVO. EXCEPT FOR THE RIGHT TO ACCESS AND USE CONFIDENTIAL INFORMATION IN FURTHERANCE OF THE PURPOSE, NO LICENSE OR OTHER RIGHT TO CONFIDENTIAL INFORMATION OR TO LENOVO'S INTELLECTUAL PROPERTY IS GRANTED OR IMPLIED BY THIS DISCLAIMER.

ALL INFORMATION IN THIS DOCUMENT IS PROVIDED "AS IS" AND WITHOUT ANY WARRANTY WHATSOEVER, WHETHER EXPRESS, STATUTORY, OR IMPLIED, AS TO ITS ACCURACY, COMPLETENESS, OR PERFORMANCE.

BY ACCESSING THIS DOCUMENT, RECIPIENT ACKNOWLEDGES, ACCEPTS AND AGREES TO THE FOREGOING.

Revision History

Revision	Date	Notes
1	1/3/2024	Initial Release
2	6/5/2025	Add EU regulation information

Contents

Revision History	3
1. About this manual	5
2. Safety Information	6
2.1 General safety	7
2.2 Electrical safety	8
2.3 Safety inspection guide	9
2.4 Handling devices that are sensitive to electrostatic discharge	10
2.5 Grounding requirements	11
2.6 Safety notices multilingual translations	12
3. Product Introduction	12
3.1 Product Appearance	13
3.2 Product Location	14
3.3 Product Spec	15
3.4 Accessory	16
3.5 What's in the box	17
4. Warranty Information	17
4.1 How to find SN	17
4.2 Warranty lookup	18
5. Diagnostic	20
5.1 Web Trouble Shooting	20
5.2 Built in Hardware diagnostic	23
5.2 .1 Factory Reset	24
5.2 .1 Diagnostics	27
6. Software Fix	28
7. Lenovo APP	80
8.1 Repair Tool	80
8.2 Common Repair Tips	81
8.3 Key Tips	82
8.4 Disassembly SOP	83
9. Part Replacement Repair	100
9.1 Explosive View	100
9.2 How to Order PN	102
10. Accessories	106

1. About this manual

This **Product Maintenance Manual (PMM)** is a service handbook provides outlines and details on product service business operation from a service engineering perspective, which will be helpful to Lenovo service support functions globally as reference.

For content that are mentioned but not elaborated in this handbook will be highlighted where to find in sub files.

Important:

This manual includes technical instructions for replacing genuine parts in this product.

Read the entire manual before your repair.

Always use the latest version of this product service manual for repair.

Cautions and Warnings

Failure to follow the repair instructions or not to use genuine parts or proper tools may damage the device or compromise the device's functionality or water resistance.

The tablet components may be damaged by electrostatic discharge (ESD). Always use an ESD mat and ground strap when working with internal components.

Turn off the device before repair.

Loose screws, extra screws, or small parts inside the device can cause safety issue. Set aside all parts and screws removed during repair.

Marketing Name

Lenovo Tab M11&K11&K11 Enhanced-Edition

Model Name

TB330FUXU

TB330FUP&XUP

2. Safety Information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo product:

- **“General safety”**
- **“Electrical safety”**
- **“Safety inspection guide”**
- **“Handling devices that are sensitive to electrostatic discharge”**
- **“Grounding requirements”**
- **“Safety notices: multilingual translations”**

2.1 General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Place removed covers and other parts in a safe place, keeping them away from all personnel, while you are servicing the machine.
- Keep your tool case away from walk areas so that other people will not trip it over.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.

- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

2.2 Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch for disconnecting the switch or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.

— Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

— When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.

— Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

2.3 Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify

potential safety hazards according to the attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the product. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

2.4 Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Notes:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

2.5 Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

2.6 Safety notices multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder Splitters können Kurzschlüsse erzeugen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לסלק את הסוללה בנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altre parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりする可能性があります。

3. Product Introduction

3.1 Product Appearance




3.2 Product Location

TB330FUXU




- 1. Touch Lens
- 2. Front cover
- Audio jack
- 3. VOL. Button
- 4. Sim tray
- 5. Power Button
- 6. Speaker Mesh*4

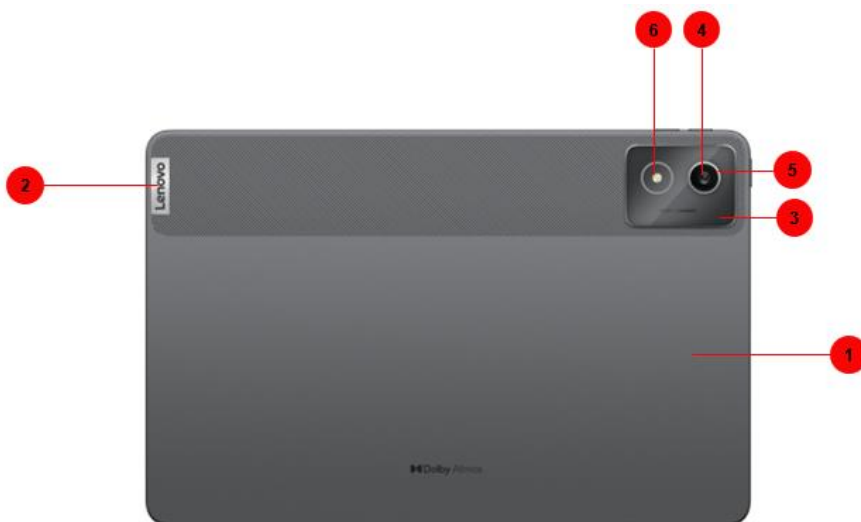

- 1. Back cover
- 2. LOGO plate
- 3. Camera Deco
- 4. Camera Lens*1
- 5. Camera ring*1
- 6. Flash Lens

TB330FUPXUP

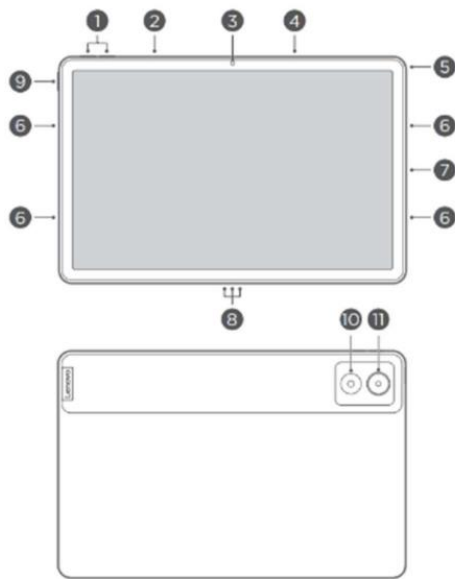

- | | | |
|-------------------|----------------------|----------------|
| 1 Volume buttons | 2 Microphone | 3 Front camera |
| 4 Card tray | 5 Audio jack | 6 Speakers |
| 7 USB-C connector | 8 Keyboard connector | 9 Power button |
| 10 Flash | 11 Rear camera | |

3.3 Product Spec

Dimension



Weight (for tablet only)

-465 g (1.03 lbs)

Operating System at Launch

Launched with Android™ 13
(Expect OS upgrades until Android™ 15 and security patches until January 2028)

Performance

Processor

MediaTek Helio G88; Octa-Core

Audio

4 Speakers Optimized with Dolby Atmos®
Single Microphone



Memory

RAM + ROM : LPDDR4x eMMC 5.1
4 GB + 64 GB / 4 GB + 128 GB /
8 GB + 128 GB

Card Slot : with Expandable SD Card Support
exFAT Up to 1 TB

Battery (for ROW SKU)⁵

Type : Li-ion Polymer
Capacity : 7040 mAh (Typical)
Video Playback : Up to 10 Hours
Web Browsing : Up to 10+ Hours
Music Playback : Up to 50 Hours



⁵ For optimal performance, ensure your compatible charger delivers between a minimum of 10 Watts required by the product, and a maximum of 15 Watts to achieve the fastest charging speed.

Display

Size : 11"¹
Screen : LCD
Resolution : 1920 x 1200
PPI : 207
Refresh Rate : 90 Hz
Color Gamut : 72% NTSC (Typical)
Brightness : Up to 400 nits (Typical)
Screen-to-Display Ratio : 85%



Colors

Luna Grey
Seafoam Green



Card Slot

Type : Single Card Slot
Slots : TF² / TF + Nano³



Connectivity

Wireless Connectivity

WLAN : 802.11 a/b/g/n/ac with
ax features
WiFi 2.4 GHz + 5 GHz



Bluetooth® : 5.1
WiFi Direct : Yes
WiFi Display : Yes
GLONASS/
GALILEO : Yes
GPS : Yes
A-GPS : Yes³

Bands Supported

GSM : B2/B3/B5/B8
WCDMA : B1/B2/B4⁶/B5(B6/B19)/B8
FDD LTE : B1/B2/B3(expanded Band3)/B4/
B5(B19)/B7/B8/B12/B13/B14⁶/
B17⁶/B25/B20/B26/B28(a+b)/
B66/B29⁶/B30⁶/B71⁶
TDD LTE : B38/B40/B41 Full Band

Integrated Camera

Rear
8MP / 13MP⁴
Front
8MP



Sensors

Accelerometer (G) Sensor
Ambient Light Sensor
Gyroscope
Hall Sensor

Login Security

Fingerprint : N/A Face Unlock : Yes

Buttons and Ports

USB Type-C™ 2.0
3.5 mm Audio Jack


Software

Preloaded Software⁷

- Google
- Chrome
- Gmail
- Google Maps
- YouTube
- Play Store
- YouTube Music
- Drive
- Meet
- Photos
- Message
- Contacts
- Gboard
- Assistant
- Calculator
- Calendar
- Clock
- Files
- Google One
- Home
- Pay (Wallet)
- Google News
- Podcast
- Google TV
- Play Games
- Play Books
- Nebo
- MyScript Calculator 2
- WPS Office
- YouTube Kids
- Kids Space⁸
- Entertainment Space
- Camera
- Find My Device
- Safety
- Lenovo Freestyle
- Settings
- Notepad
- Recorder
- Weather
- Lenovo Vantage
- Opera

3.4 Accessory


Accessories

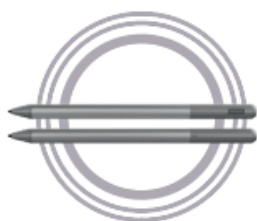

Lenovo Tab Pen
(bundle only)



Lenovo Tab
Pen Plus

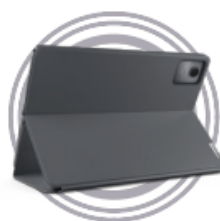

Lenovo Tab M11
Folio Case



Lenovo 68W USB-C
Wall Charger

Recommended Lenovo Services*

Lenovo Accidental Damage Protection One

Avoid the hassles of unexpected damage & repair costs. With coverage for drops, spills, electric surges, and broken LCD screens, accidental damage protection makes it easy to repair your Tablets, permitting a single repair during the coverage period.

Lenovo Premium Care

Premium Care is a hassle-free solution for all your technical support needs. Upgrade your Lenovo Tablet's standard warranty to our

front-of-the-queue customer support service and get 24/7 real-person support via phone, chat, or email from experts who provide solutions on your first contact.

Lenovo Premium Care Plus

Enjoy extra care, comfort, and peace-of-mind with Lenovo Premium Care Plus – a comprehensive support solution with personalized hardware and software support from experts and accidental damage coverage, with you as our priority 24/7.

3.5 What's in the box

TB330FUXU

What's in the Box¹

- 1 x Lenovo Tab M11
- 1 x USB Type-C™ 2.0 Charging Cable
- 1 x 5V/2A Charging Adapter²
- 1 x Quick Start Guide & Safety, Warranty
- 1 x SIM Tray Pin



¹ Actual in-box items may vary depending on markets, resellers, configurations, and more.

² In-box charger availability may vary by country. In compliance with EU regulations, our product in certain EU countries no longer includes an in-box charging adapter. We encourage you to re-use your existing USB Power Delivery (PD) compatible charger. The Lenovo 68W USB-C Wall Charger is recommended for this product. However, other compatible USB PD chargers can also be used. For a detailed list of compatible chargers, please visit www.Lenovo.com/support.

TB330FUPXUP

What's in the Box¹

- 1 x Lenovo Tab K11 Enhanced Edition
- 1 x USB Type-C™ 2.0 Charging Cable
- 1 x 5V/2A Charging Adapter²
- 1 x Quick Start Guide & Safety, Warranty
- 1 x SIM Tray Pin



¹ Actual in-box items may vary depending on markets, resellers, configurations, and more.





² In-box charger availability may vary by country. In compliance with EU regulations, our product in certain EU countries no longer includes an in-box charging adapter. We encourage you to re-use your existing USB Power Delivery (PD) compatible charger. The Lenovo 68W USB-C Wall Charger is recommended for this product. However, other compatible USB PD chargers can also be used. For a detailed list of compatible chargers, please visit www.Lenovo.com/support.

4. Warranty Information

4.1 How to find SN

There are several ways to find your device ID, which determine by the serial number (SN) usually.


And the SN is important for product warranty identify. Lenovo T&SD product's SN is usually composed 34 based of 8-digit number.

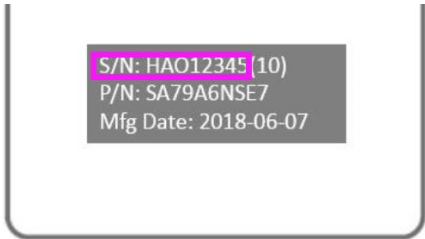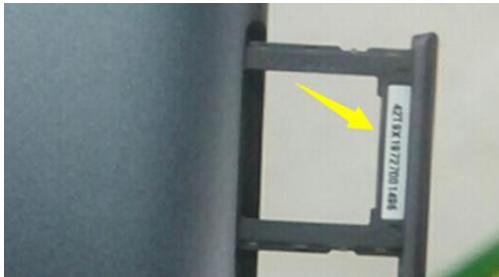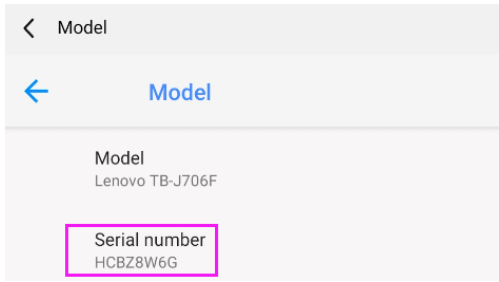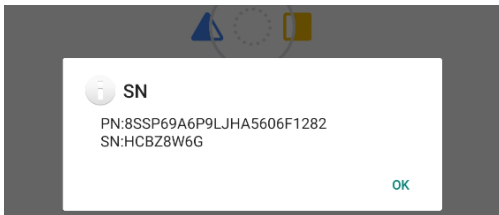Method for SN find	Demo
Method-1: Back of device product label	
Method-2: Find SN on SIM tray label	
Method-3: in Android OS PATH 1: [Settings /system /About tablet /Model /Serial number] PATH 2: [Settings /system /About tablet /Status /Serial number]	
Method-4: Input #####2222# in setting search bar to find PCBA SN (PN) and SN	


4.2 Warranty lookup

Go to <https://support.lenovo.com/us/en/>


Click **View PC Support**;

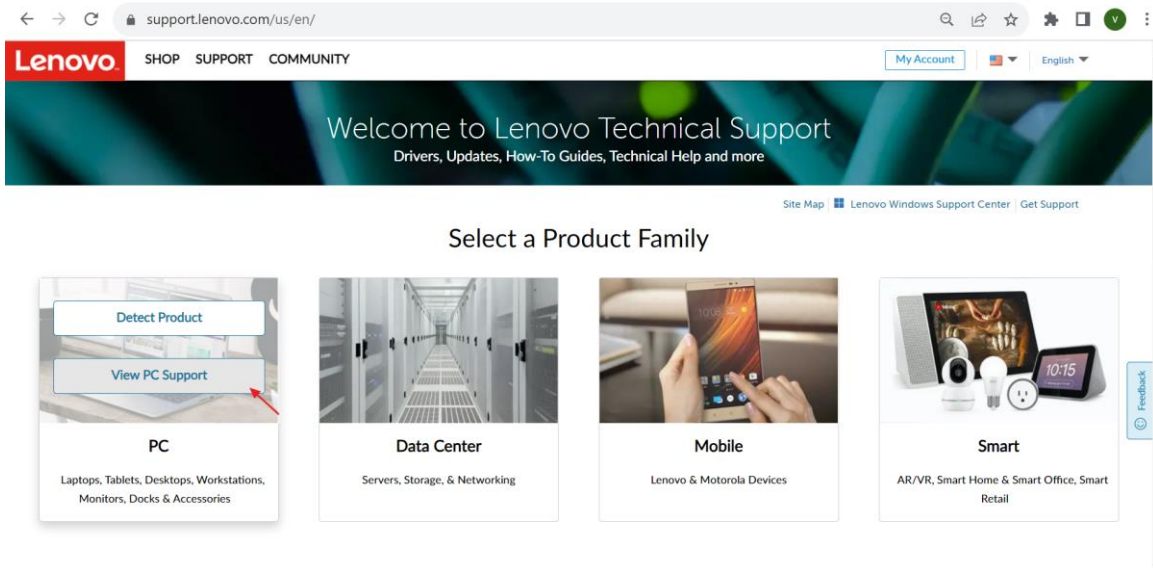

Input the SN then click search icon;

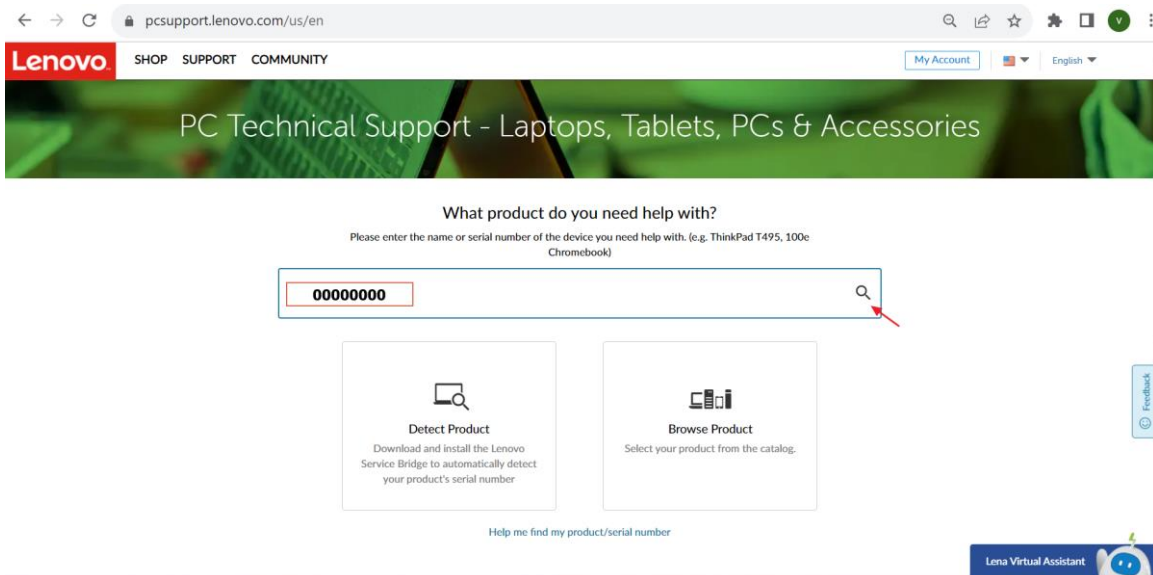

Then you can find the product's warranty information.

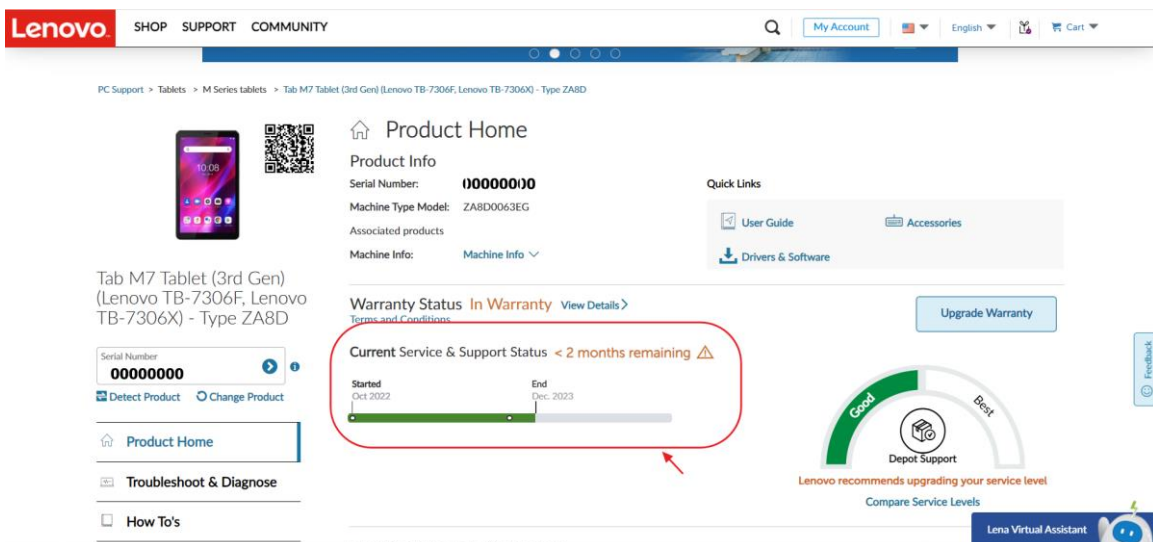


5. Diagnostic


5.1 Web Trouble Shooting

1. Go to <https://support.lenovo.com/us/en/>


Then click **View PC Support**;

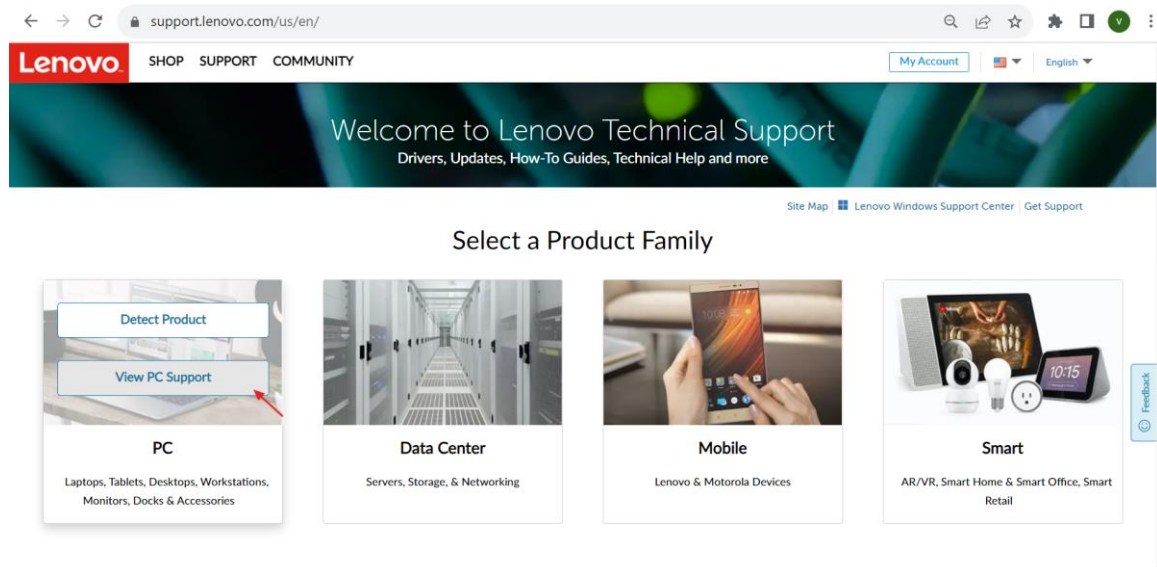


2. Input the SN then click search icon;

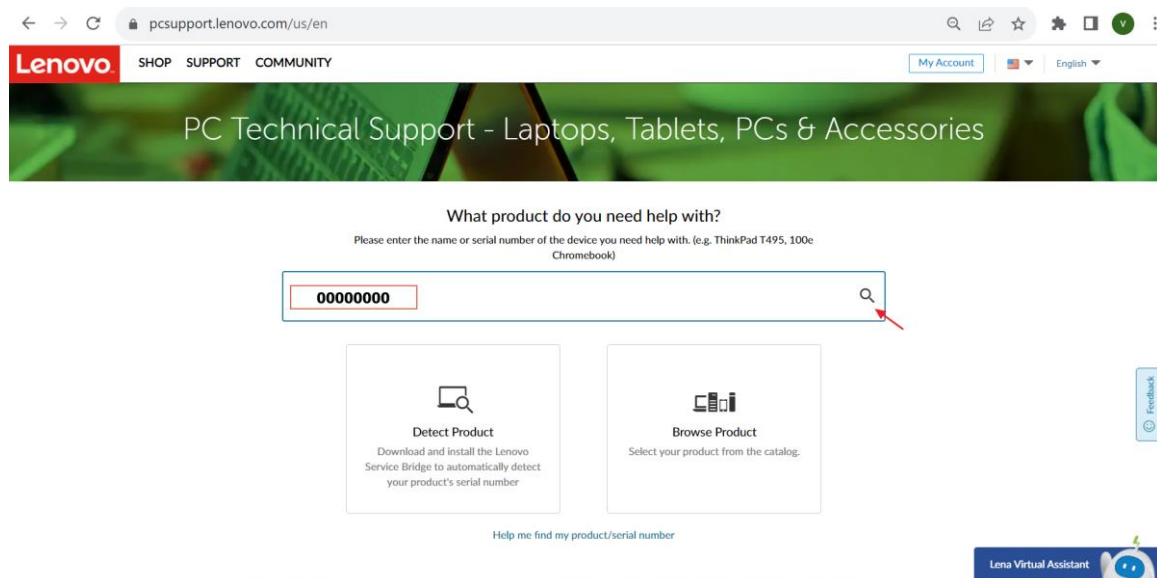

3. Click "Troubleshoot & Diagnose" at the left panel, then select the icon "Operating System Diagnostics";

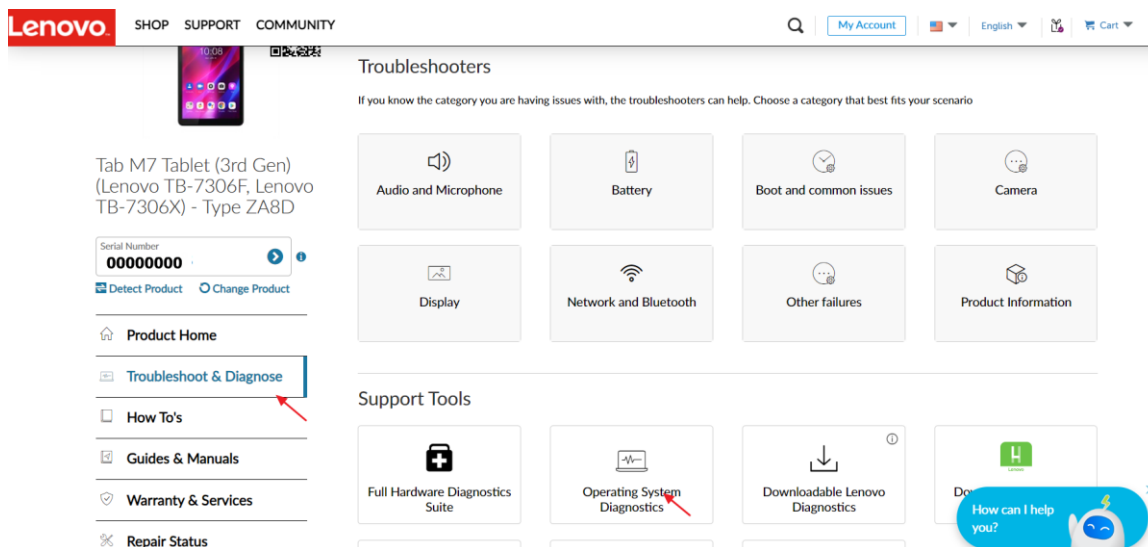

4. Follow the instruction, click the button “GET STARTED”;

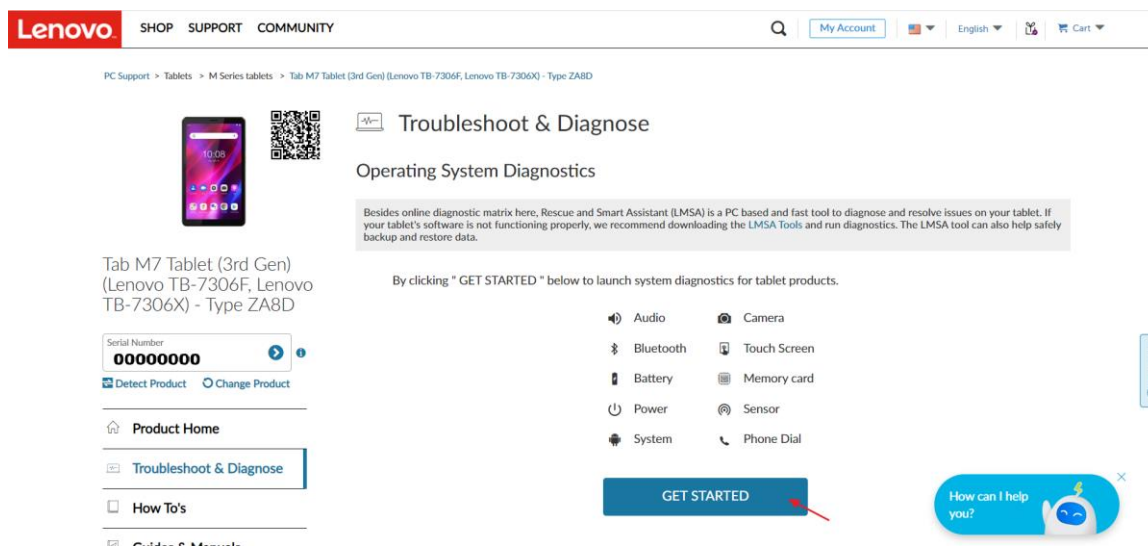


5. It will show the warranty information and then just click “Confirmed”;

System Summary			
Proof-of-Purchase : Product: IMEI:867442052052475	Product MTM:ZA8D0063EG Country:EG	Type:ZA8D Manufacture Date:2022-10-07	Serial Number: 00000000 Status:SH
Base Warranty			
Start Date:2022-10-11 Origin: Description:This product has a one year limited warranty and is entitled to parts, labor and carry-in repair service. In some countries, courier service will be provided. Many parts can also be delivered to you using the Customer Replaceable Unit (CRU) method.	End Date:2023-12-09	Warranty ID: 12C	Status:
Extend Warranty			
No extend warranty information.			



6. Click the failure you meet...

Select the failure you meet...

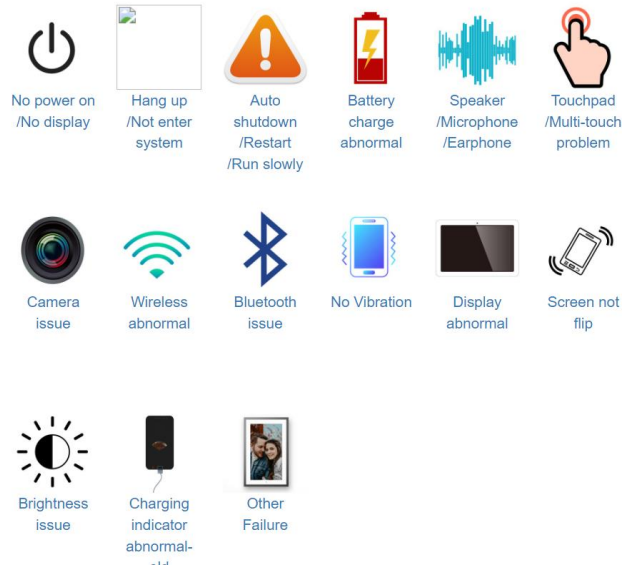

7. Follow the instruction step by step strictly.

Catalog > No power on /No display > Reset

 
Reset

Battery Charging
Check
Recovery Page Enter
Wipe Cache

Keep the **power** button pressing no less than **20 seconds**, show as below



If necessary, please repeat it **several times** and check if the battery is charged? Try to connect tablet to the USB charger at the same time.




Issue Solved

Not yet,continue

5.2 Built in Hardware diagnostic

By the preload quick factory recovery and hardware self-diagnosis module, to realize device factory reset or function diagnostics quickly.

Step-1. Enter the system (unlocked account status) and keep pressing the **Volume up** key no less than **10 seconds**.

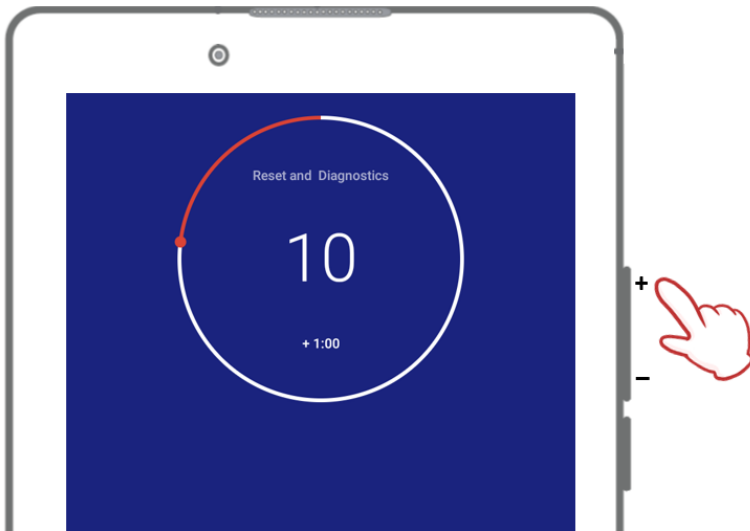


Step-2. The **Factory Reset and Hardware Diagnostics** Self-diagnosis page will appear.



5.2 .1 Factory Reset


Step-1. In the **self-diagnostics** page, click the **Reset** icon as demoed below, and make sure the battery volume is **no less than 30%** or keep the external USB charger connecting.

When you choose to do this, it means that all personal data in tablet have be backup or no need anymore.

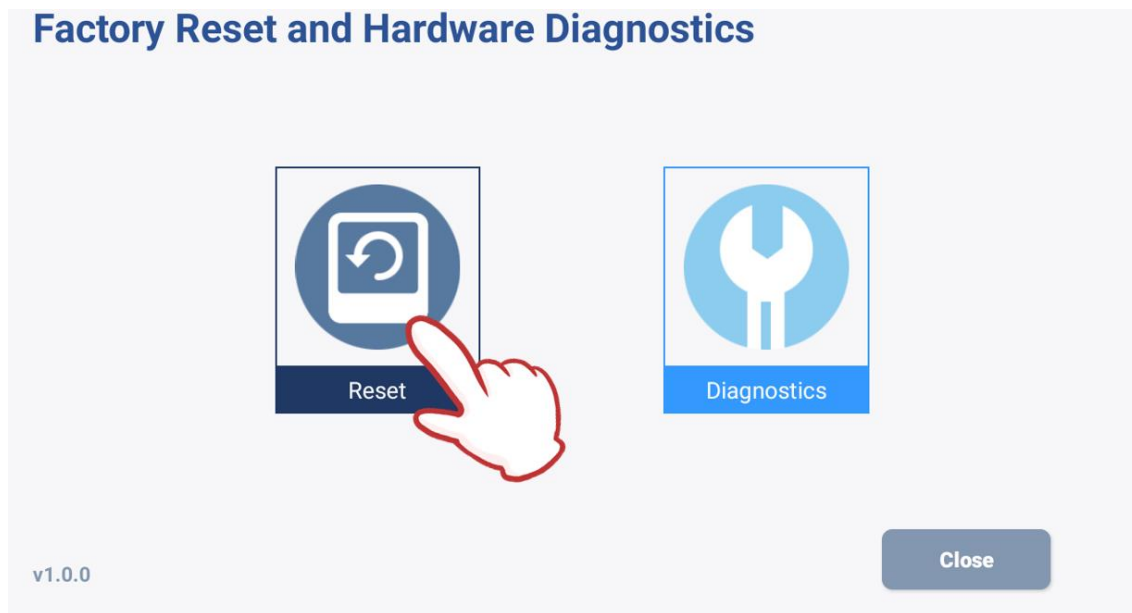


Step 2. The following data will be completely lost after system recovery...


- Your Google account
- System and app data and settings
- Download apps
- Music
- Photos
- Other user data
- Inner storage backup data

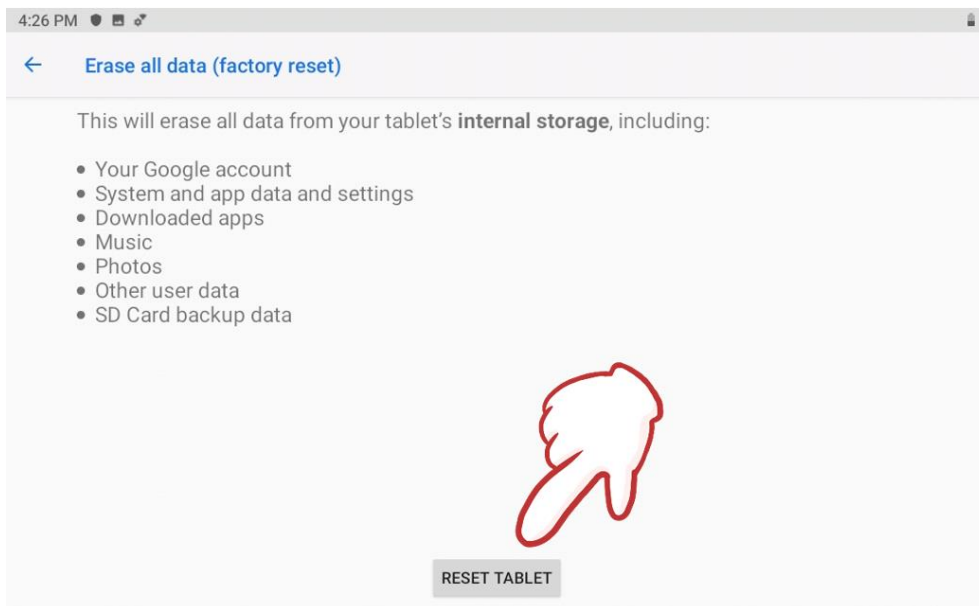

Step-3. To check to and perform this **ERASE EVERYTHING** operation step

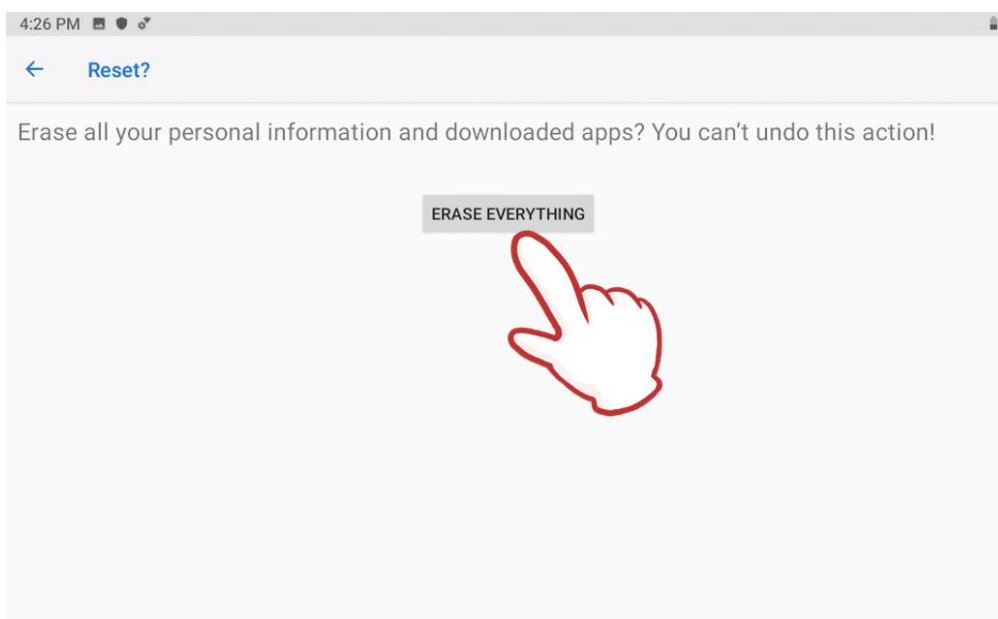


Step 4. The system will restart automatically and wait about 2 minutes.

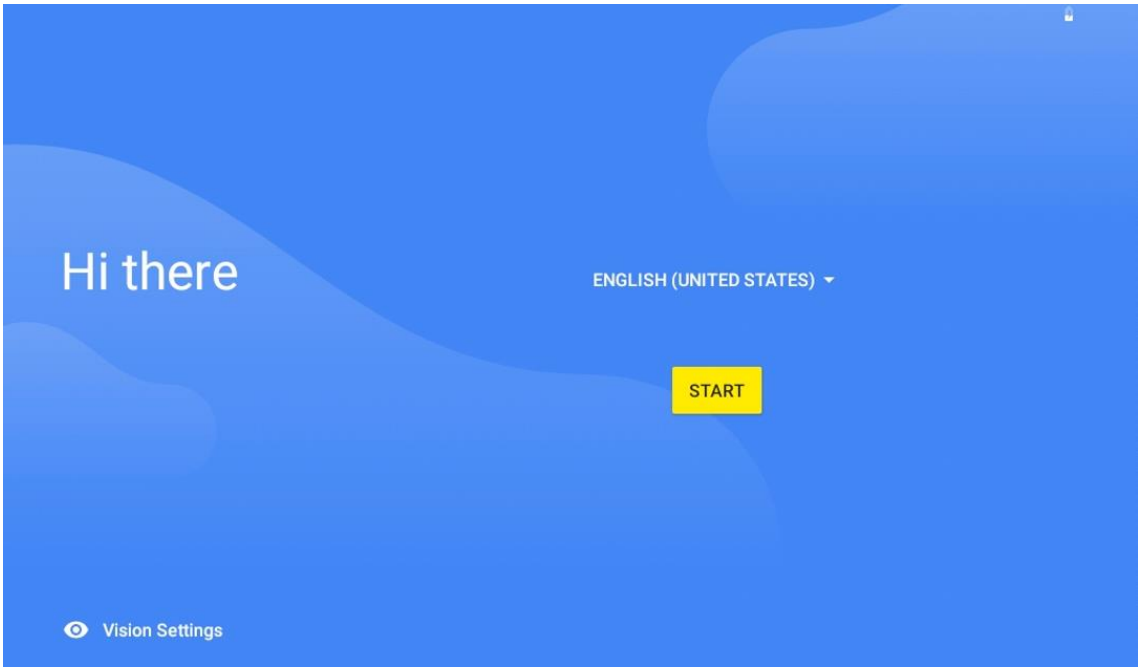


5.2 .1 Diagnostics

Step-1. In the **self-diagnostics** page, click the **Diagnostics** icon to start hardware diagnostics of the tablet.

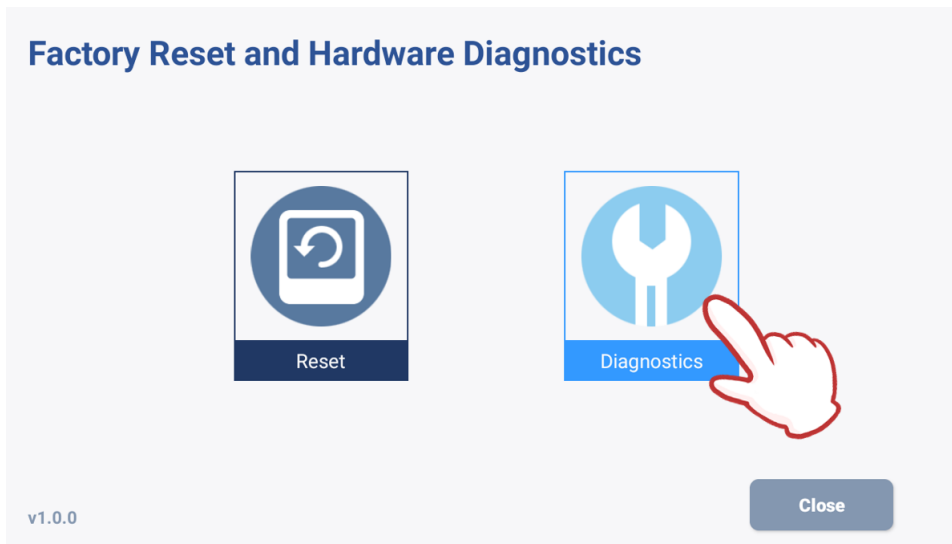

Step-2. Click the function icon to start test. **OR** click on **One Key Detection** to do all tests with only one click.

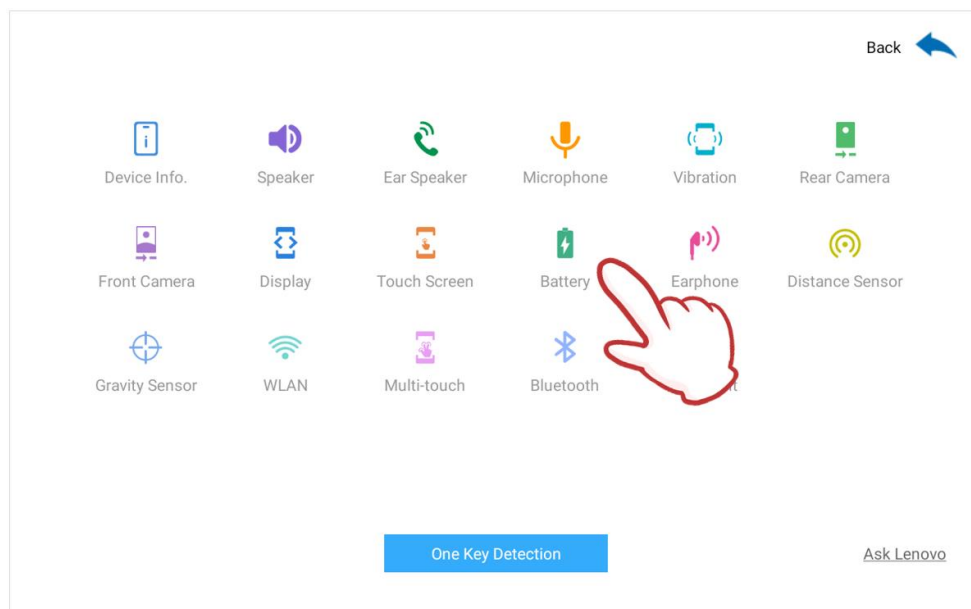

6. Software Fix

Software Fix Overview

Software Fix is a software tool that helps manage Lenovo and Motorola Android devices for end users. Its key functions include:


- a. *My Device*: Connect the device via USB cable or Wi-Fi and manage pictures, videos, music, contacts, file management, backup & restore, and one-click clone.
- b. *Rescue*: Rescue the device from a software-induced un-operational status.
- c. *Support*: It contains tips, forums, Moli, and warranty information. Tips provide online how-tos and solutions for devices; Forum allows users to submit questions, suggestions, and discuss with other users; Moli provides online support via chat; Warranty checks the device's warranty.
- d. *Toolbox*: Provides several tools such as GIF maker, ringtone maker, etc.

New functions are planned and will be available soon.

Software Fix is composed of 2 parts:

- 1) PC client: This part allows users to access the software on their computer.
- 2) Android APP: This part runs on the user's Android device and provides the main functionality of the software.

Software Fix Client Introduction

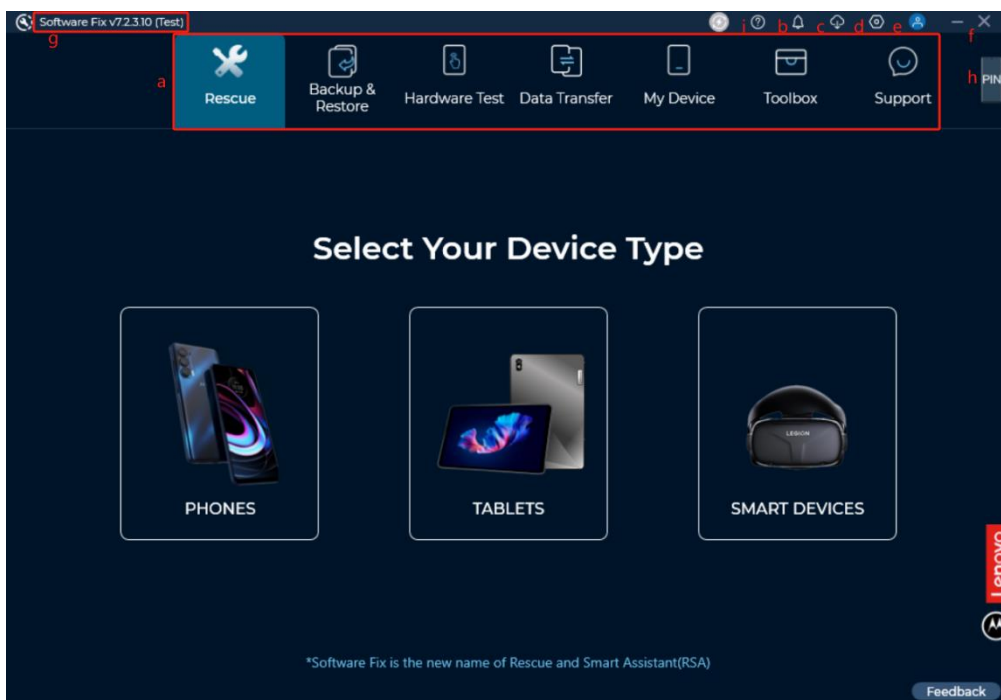

- a. Top function bar
- b. Notification
- c. Download
- d. Setting management (Software update, language change etc.)
- e. User (Register etc.)
- f. Client control (Minimize, exit)


- g. Software Fix version info
- h. The verification code for connected devices.
- i. The help includes guide and FAQ.

System Requirement

Software Fix supports the following Windows operating systems:

- Windows 11 (64 bit)
- Windows 10


Mobile Assistant App Introduction

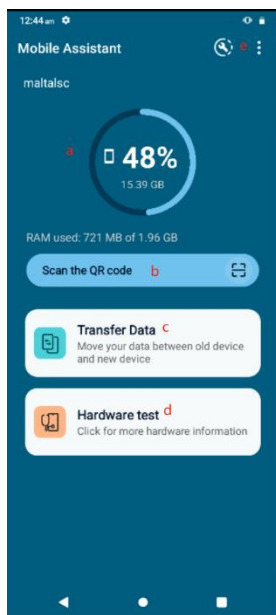


- a. Connection status indicator (Disconnected, connecting, USB/Wi-Fi connected)
- b. Scan button
- c. Transfer Data
- d. Hardware test
- e. About and Privacy

Connecting via USB


- 1) Connect device with USB cable.
- 2) Turn on USB debug mode on device.

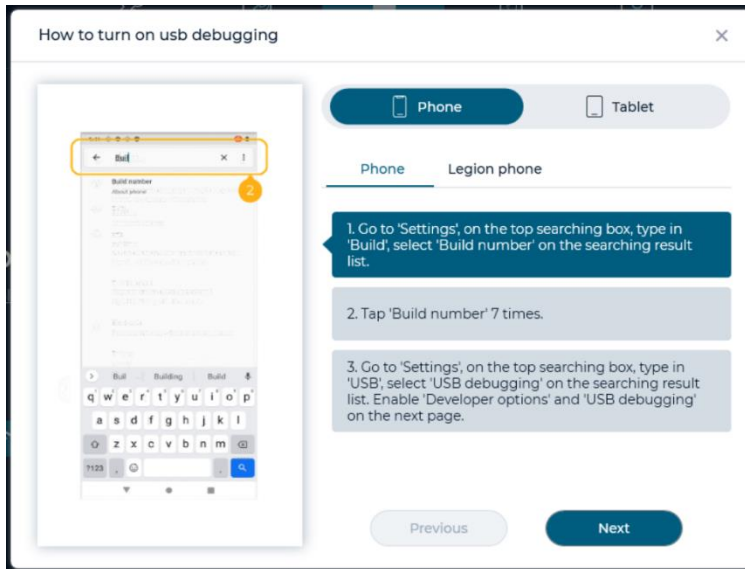

 - 3) Authorize.




- 4) Once connected successfully, the Software Fix client will automatically install the Mobile Assistant App on your device.
- 5) After installation, please ensure that you maintain the USB connection. Click 'I agree with Lenovo Privacy Policy'. Enter the verification code and the Software Fix client will establish a connection with the Mobile Assistant App.

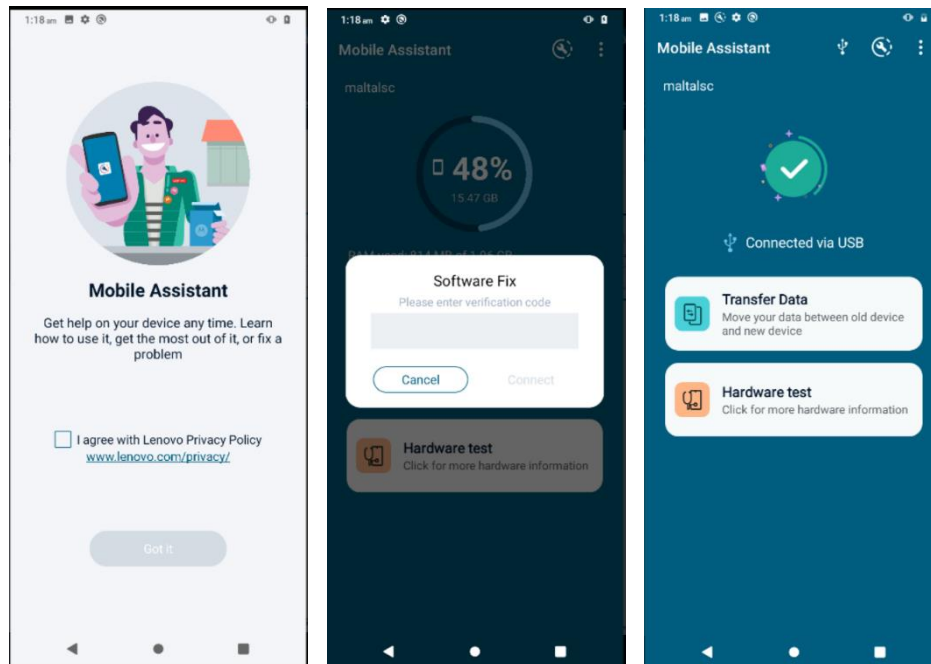


Connect via Wi-Fi

- 1) First, connect your device to the computer using a USB cable. The Software Fix client will then automatically install the Mobile Assistant App on your device.
- 2) Once you can see the Mobile Assistant App on your mobile device, safely disconnect the USB cable from your device.
- 3) Connect the device and PC to the same Wi-Fi network. On the Mobile Assistant App, tap the "Scan" button located at the top to scan the QR code displayed on the Software Fix PC client. Enter the verification code shown near the QR code on the PC client.

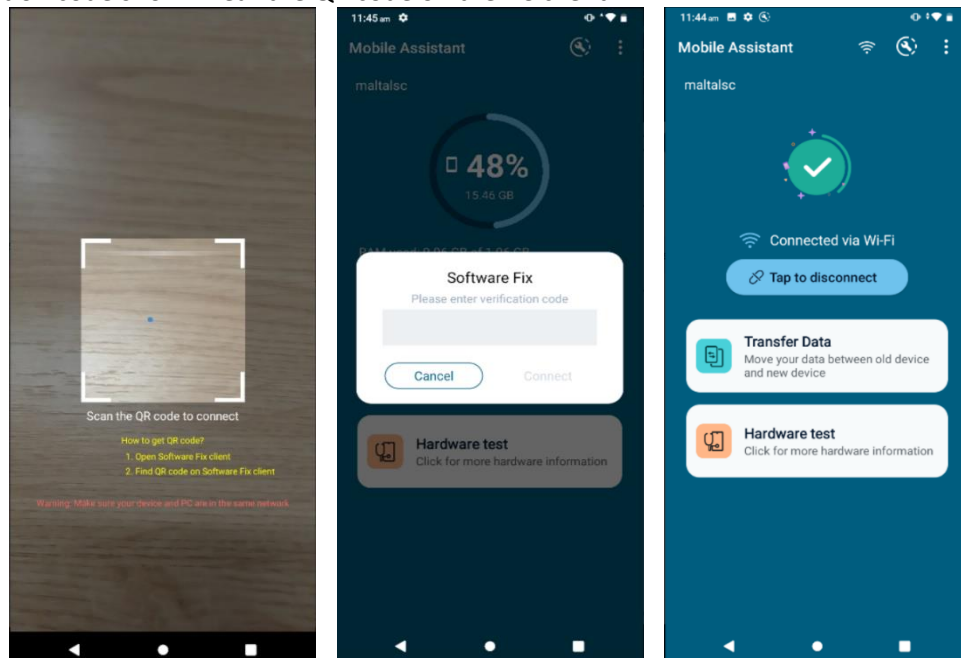

Hardware test


Click "Hardware test" to enter the hardware test page, hardware test will check if your device's hardware is functioning properly. It supports detecting Speaker, Ear Speaker, Microphone, Vibration, Rear Camera, Front Camera, Display, Distance Sensor, Touch Screen, Battery, Gravity Sensor and WLAN.

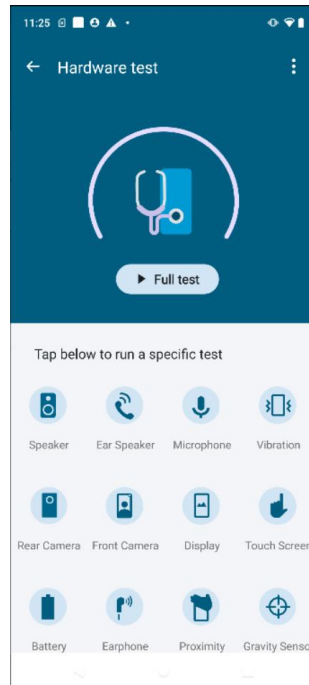


Click an item's icon to begin hardware detection for this device.

For example:

Click the Speaker icon to access the "Test" page. Then, click on the "Test" button to initiate the testing of your device's Speaker. Once the test is complete, a test result page will appear displaying the outcome of the Speaker test.

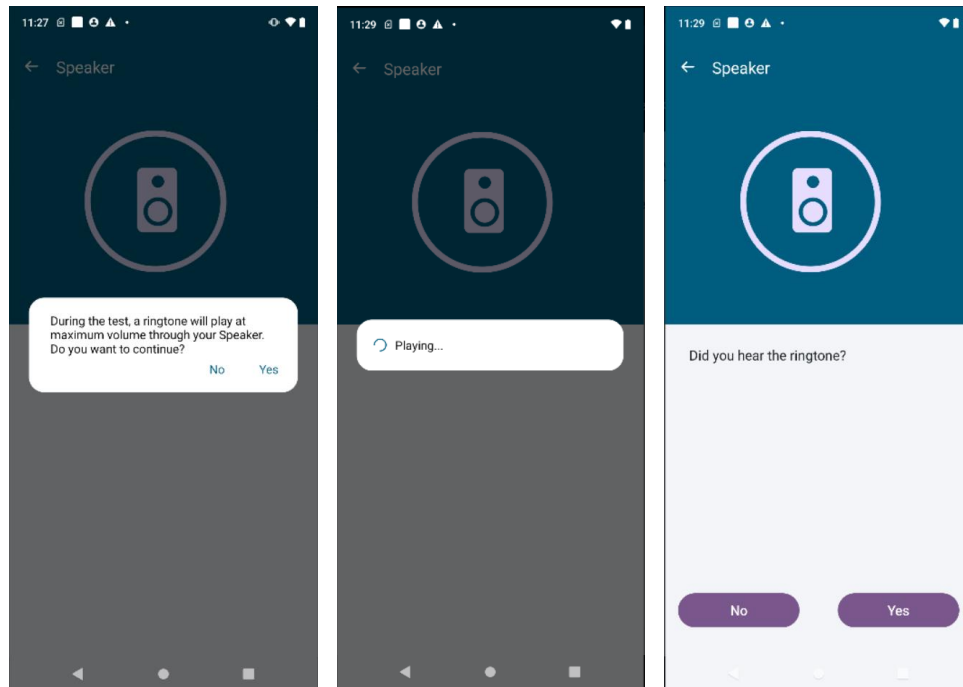


Click "Yes" to finish the inspection of your device's Speaker. If you wish to retest the Speaker, click "No", and then click on "Check Again" to begin the testing process once more.

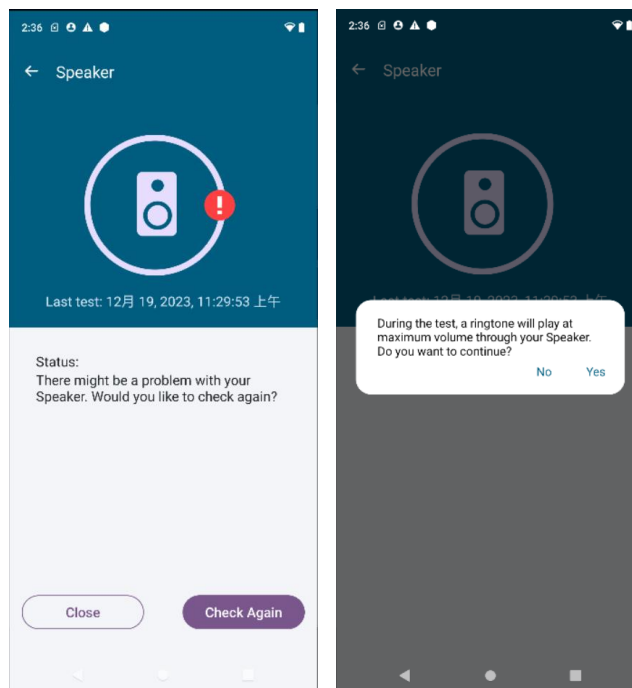


Transfer Data

Transfer data is used to transfer files between two devices, supporting the transfer of images, videos, music, files, contacts, SMS, and call logs.

1. Click on “Transfer Data” and select receive or send file. The sending device needs to select the receiving device OEM, which currently supports Samsung, Moto, Lenovo.

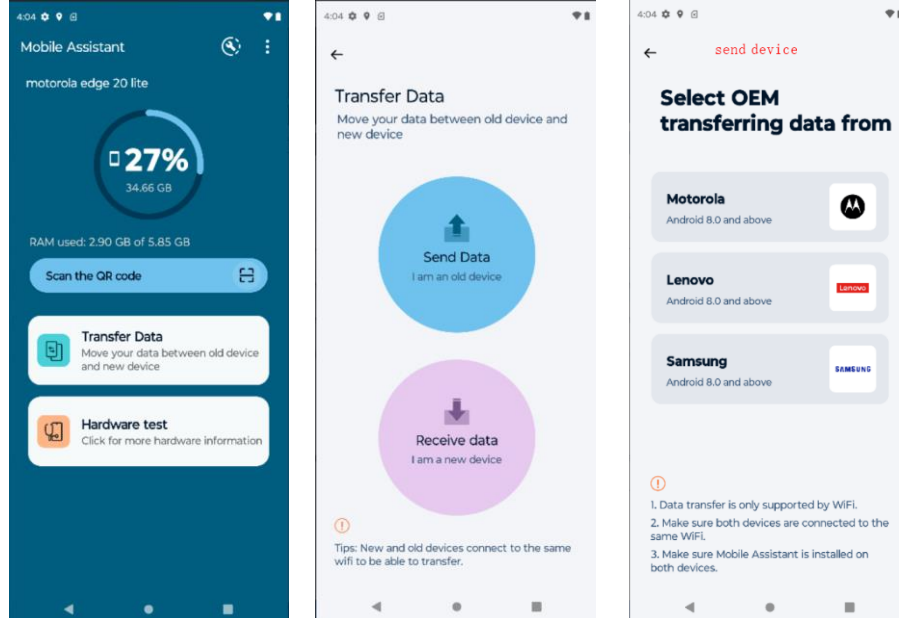


2. Enter the search device interface, the sending device is waiting to be connected, search for nearby enabled WLAN devices on the receiving device and click on the device name that needs to be connected.

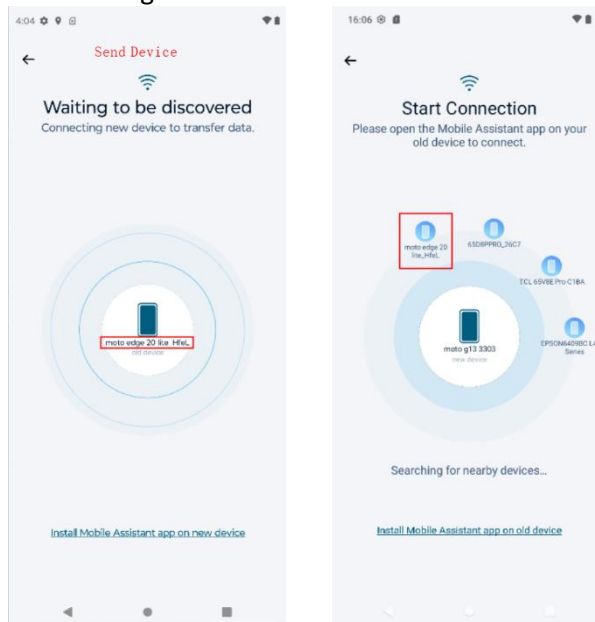


Note: a. The receiving and sending devices need to open WLAN.


b. The first connection to the sending device requires approval of the connection request.

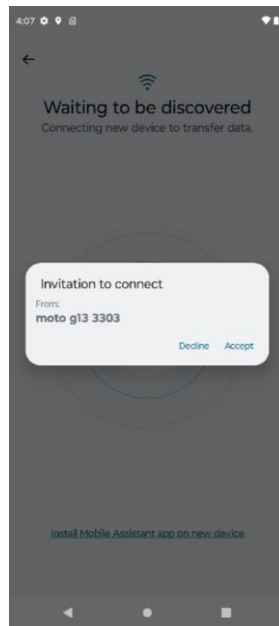


- Two devices start to establish a connection. After successful establishment, the sending device displays the connection code, enter the connection code on the receiving device, click on “Connect”.

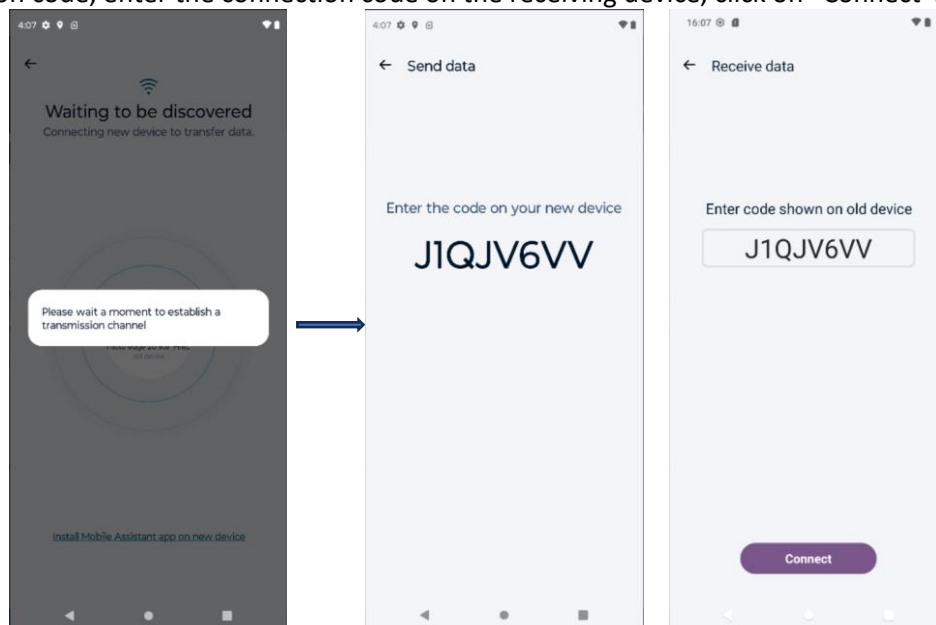


- Enter the transmission homepage. The sending device displays the file list, and the receiving device displays the successful connection'.

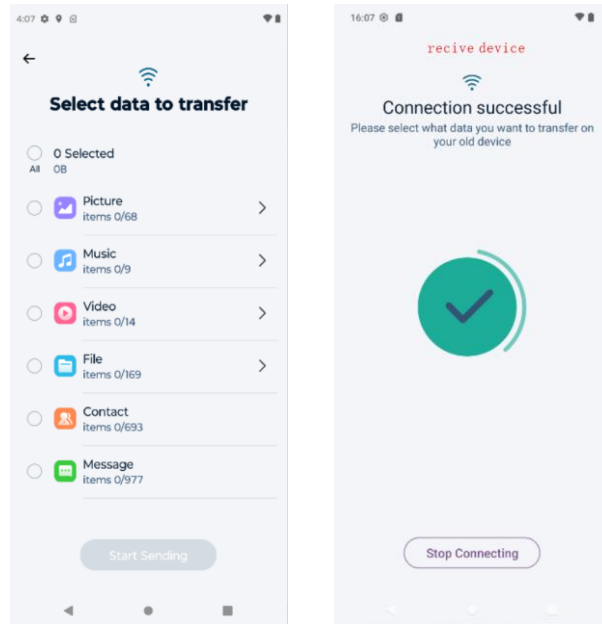

5. Select the file, click on “Start sending”, and start transferring files.

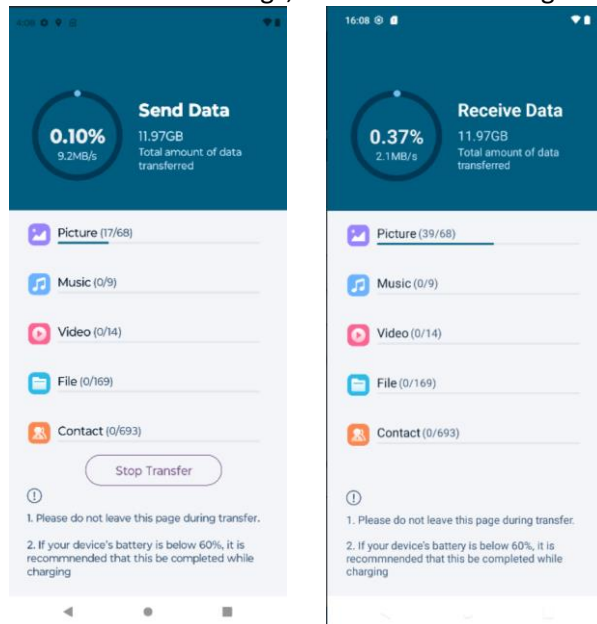


6. Transfer completed, click on 'Completed and Exit' to return to the transfer homepage

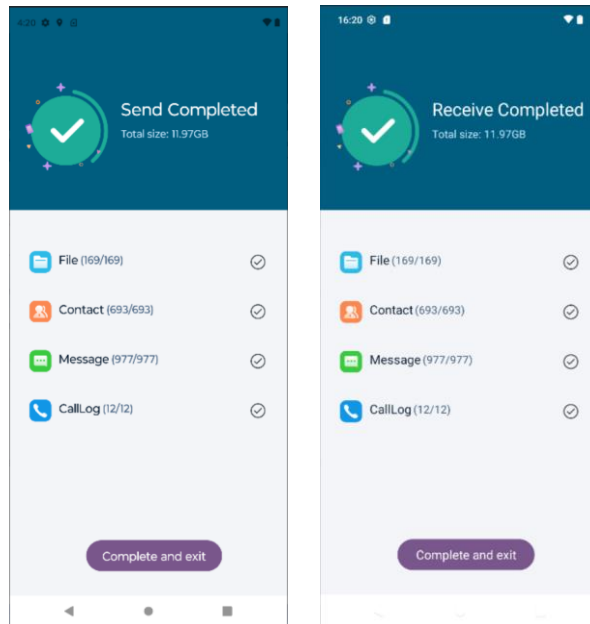


Setup

Setup Details


1. Double click the installation file “Software Fix_setup.exe” to open the installer, you can click drop-down list to set client’s language. And then click “Ok”.

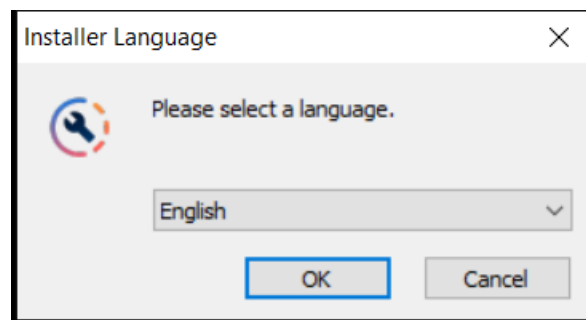


2. Click “Next” to enter the next page.

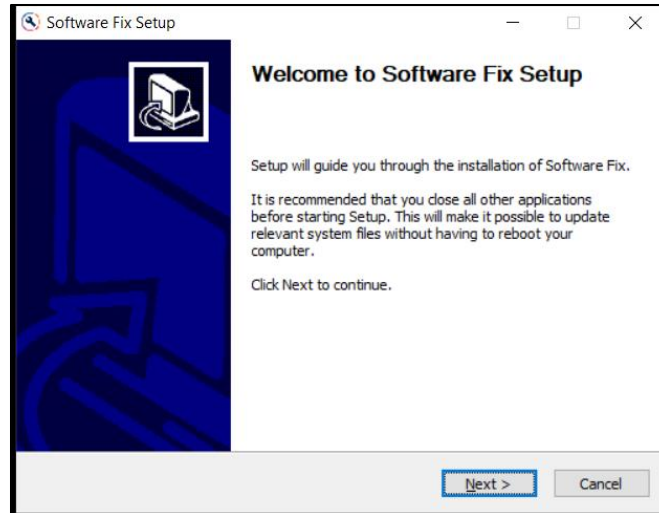


3. Accept license agreement and click “Next”.

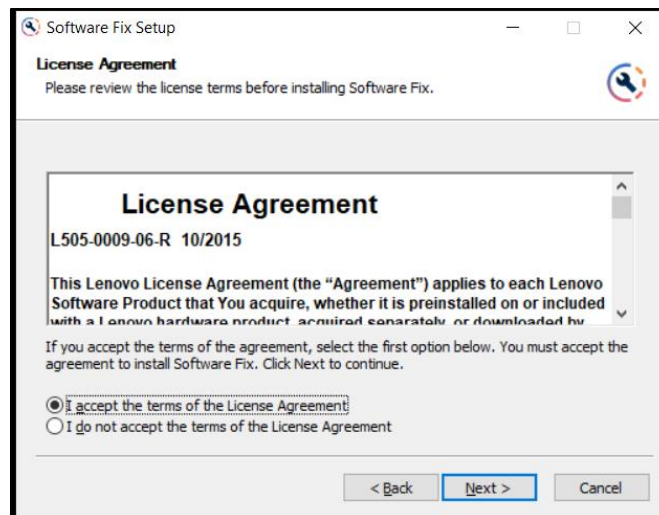

4. Change the installation path by click “Browse...” if you want, and then click “Install”.

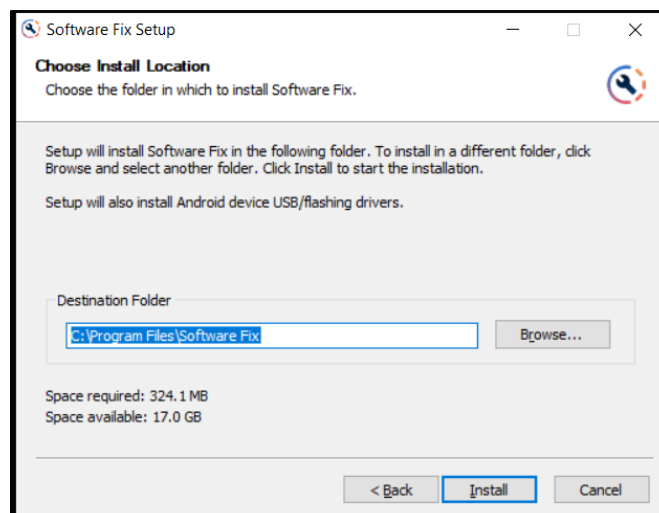


5. Wait for the installation to finish, and then click “Finish” to complete the installation.

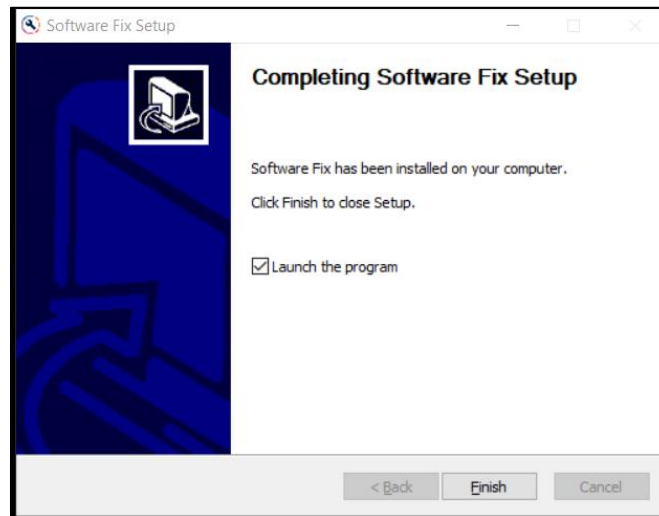


Software Upgrade

Recommended Upgrade


1. Click  at the top right and select “Software update” to click.

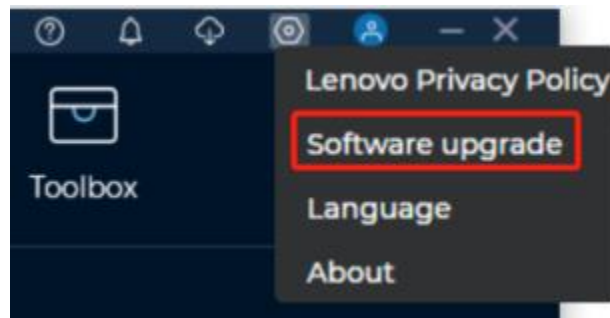

2. The new version available dialog box will appear.

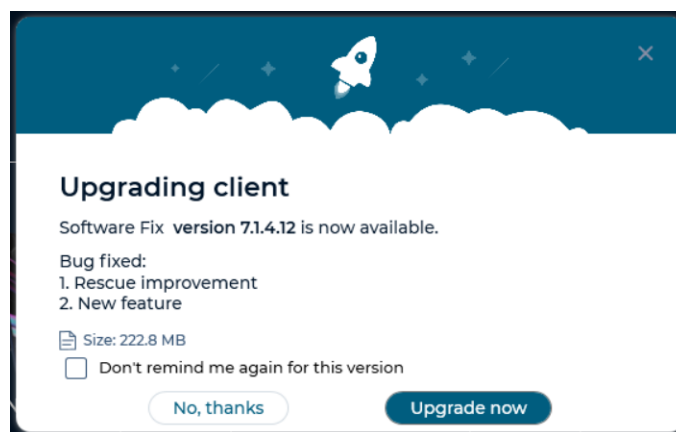


3. Click "Upgrade Now" to download the latest version of the installer. The installation process will then begin automatically. If you do not wish to download the new version, click "No, thanks" to cancel the download.

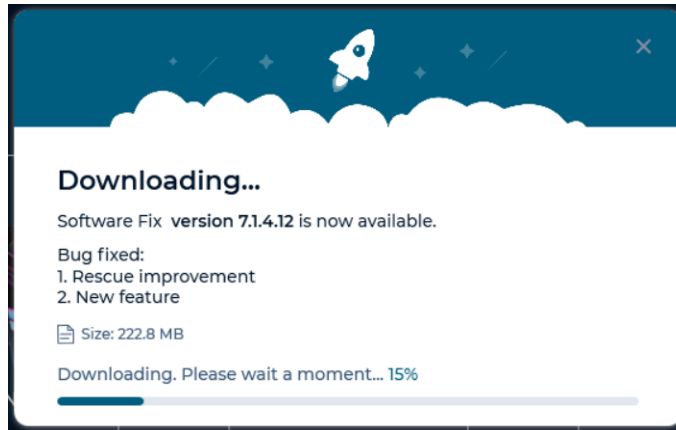


Mandatory Upgrade

If a critical patch is released, it will be labeled as mandatory, and the Software Fix client will be required to apply this upgrade. A dialog box displaying the availability of a new version will appear automatically. To download and install the new version, please click on "Upgrade Now".

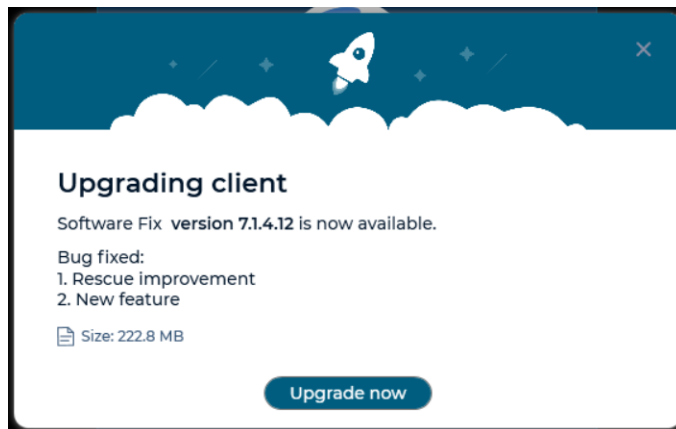

Start page


Launch Software Fix, it will enter it's start page.

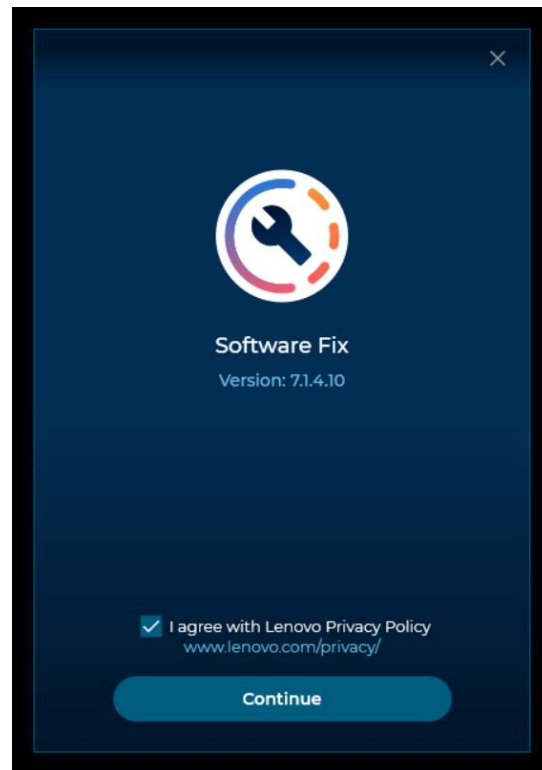

User


Logout user

Click  to logout.

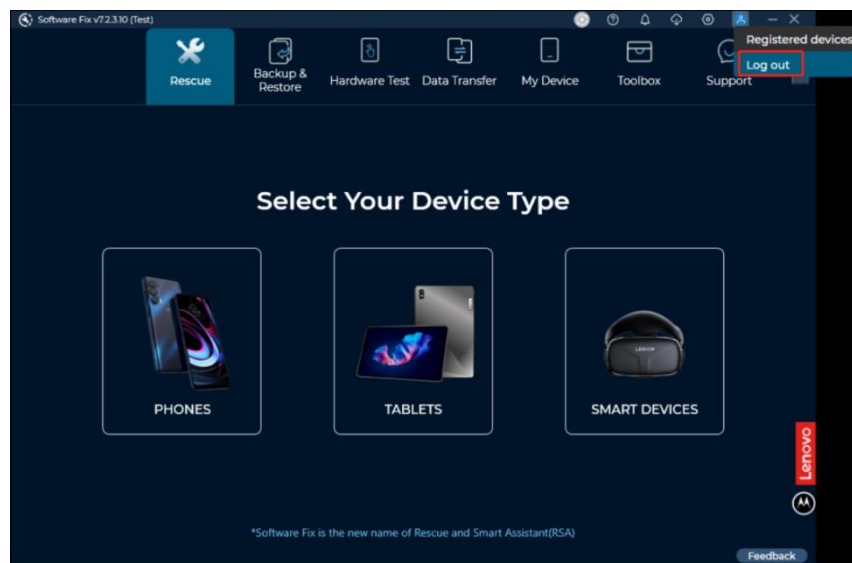


User management

Click  icon at the top right of page, the login dialog box pops up. You can login to Software Fix Client by Lenovo ID.

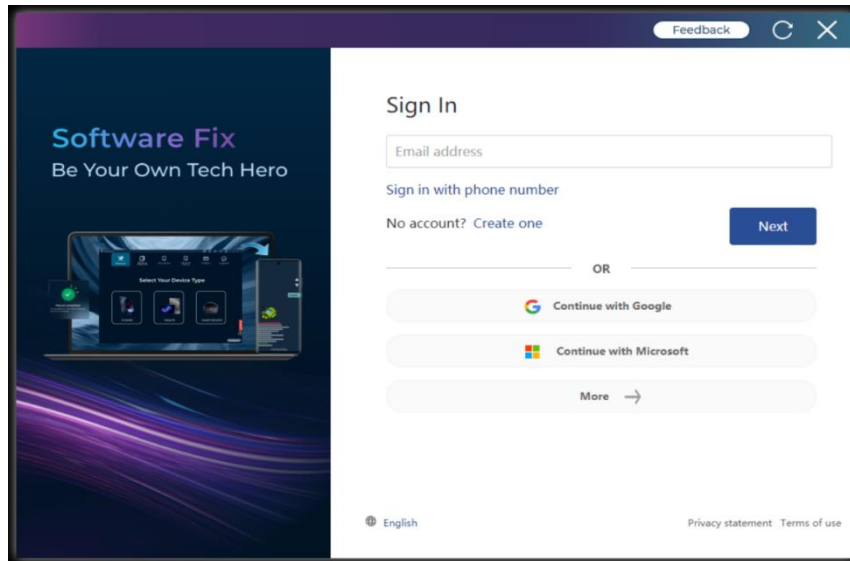


Registered devices

Login to your account, and then connect your new device. Once connect success, the prompt box will pop up as follow:

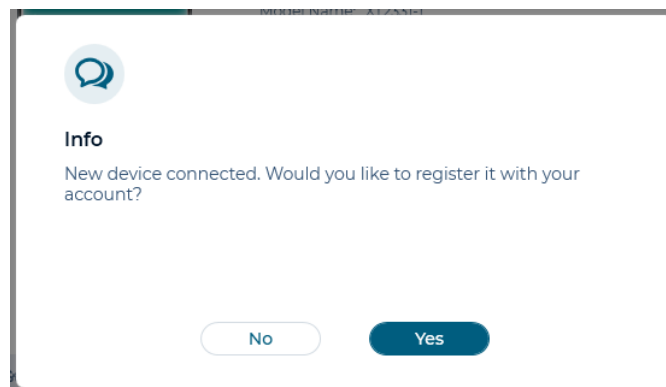


Click “Yes” button, your device information will be collected. Click the  icon and “Registered devices”, you can view your connected device. You can unregister the device when clicking the  icon.

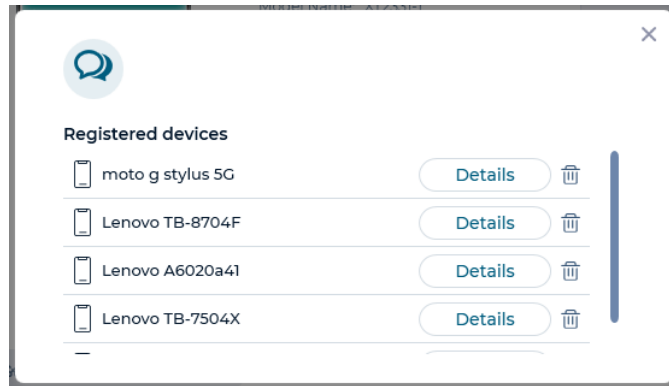

Setting

Click  icon at the top right of page, and then you can view the Lenovo privacy policy, Software upgrade, Language and About.

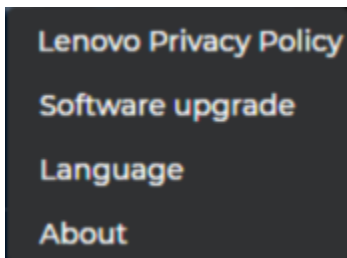


a. Lenovo Privacy Policy


Click the Lenovo Privacy Policy, you can see the privacy policy of the RSA on the web page.

b. Language Option


Click Language, and then select “Portugues” and OK, you can switch the client’s language to Portuguese.

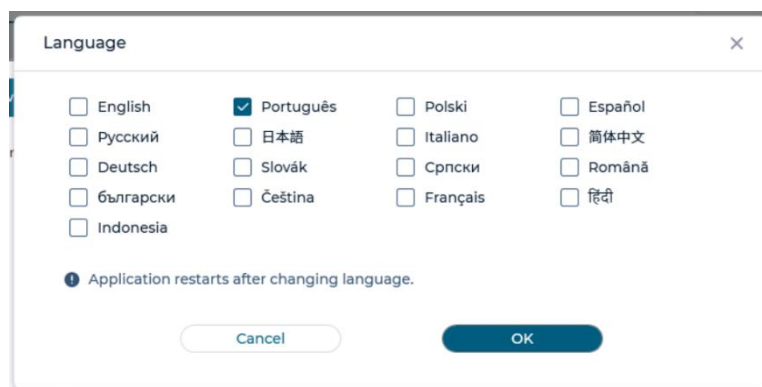

Click Ok button, the following page will appear. Click Restart Now, the Client will be restarted now and its language will be changed.

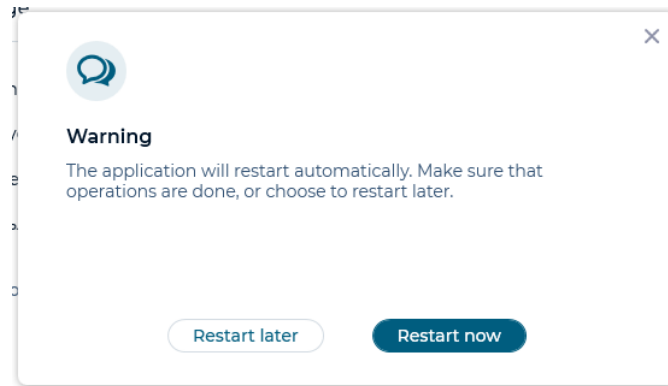


Click the icon , you can view the FAQ and guide.

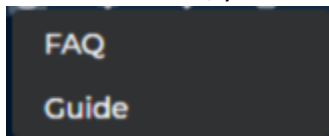


Notification

Launch Software Fix client, the unread notification will pop up automatically.

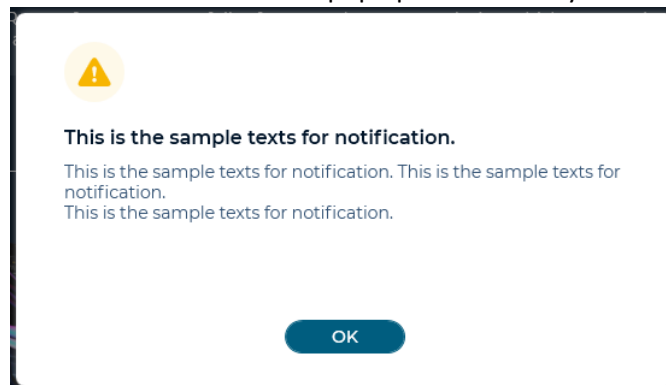


Click  icon, it will list all notification. Here, you can click 'delete' icon to delete the notification. You can also view historical notifications.

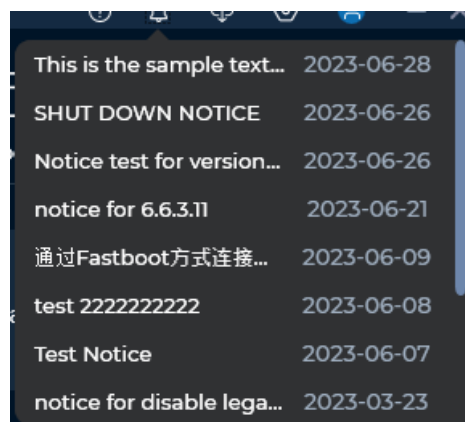

Download Center

Click  icon to access the download center. All downloading resources, such as ROM packages and Country code packages, will be added to the "In progress" page.


- Click the pause icon to temporarily stop the download process.
- Click the start icon to resume the download process.
- Click delete icon to delete the downloading or pause resource.
- Click "Change" option to modify the resource storage path.

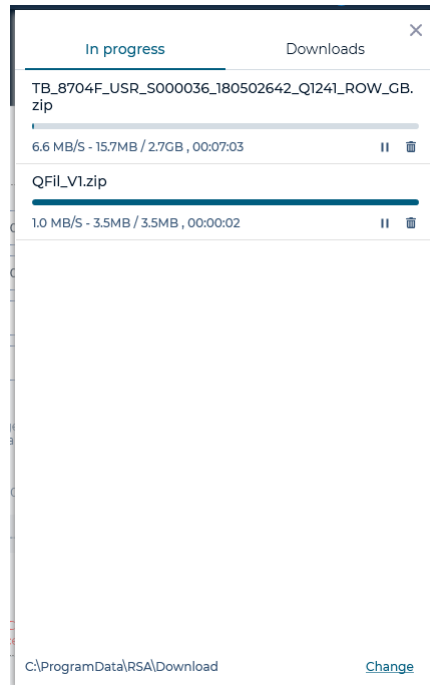

All downloaded resources will be moved from the "In progress" page to the "Downloads" page. To delete a downloaded resource, simply click on the Delete icon. Once you have entered the "select a Device" page, select the firmware for the desired device and initiate the download. Once the firmware download is complete, the firmware will be listed on the "Downloads" page.




Clicking the "Go to Rescue" button will switch you back to the "select a Device" page and automatically match you with the corresponding firmware that you previously downloaded.

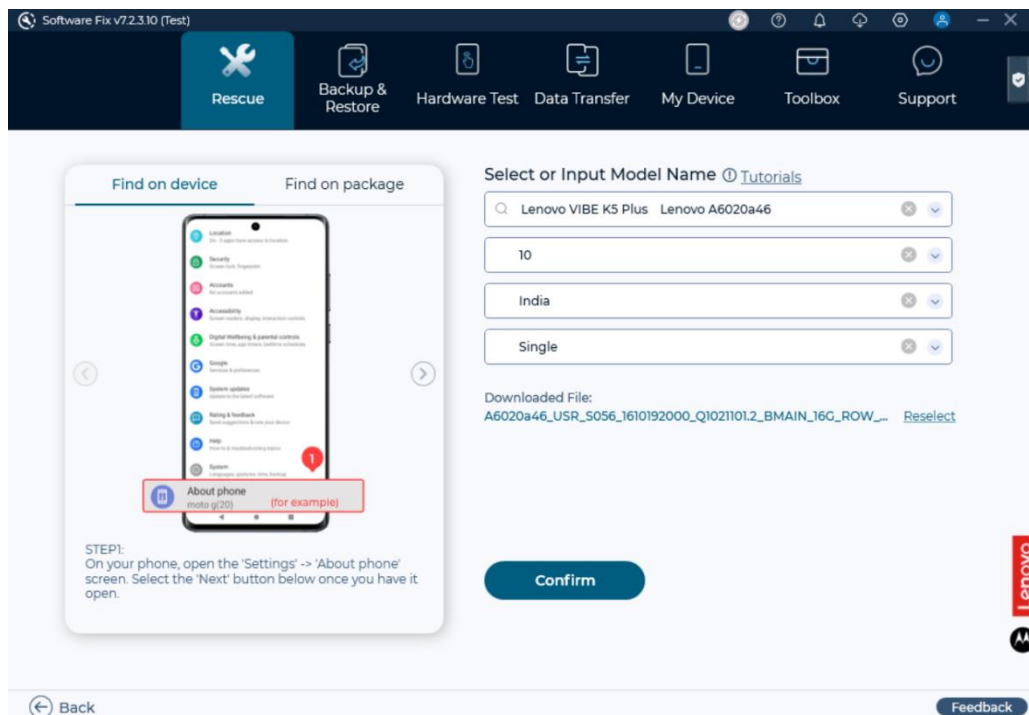


Plug-in Introduction

Driver Check


The driver installation status button  is displayed at the top of the rescue Page.

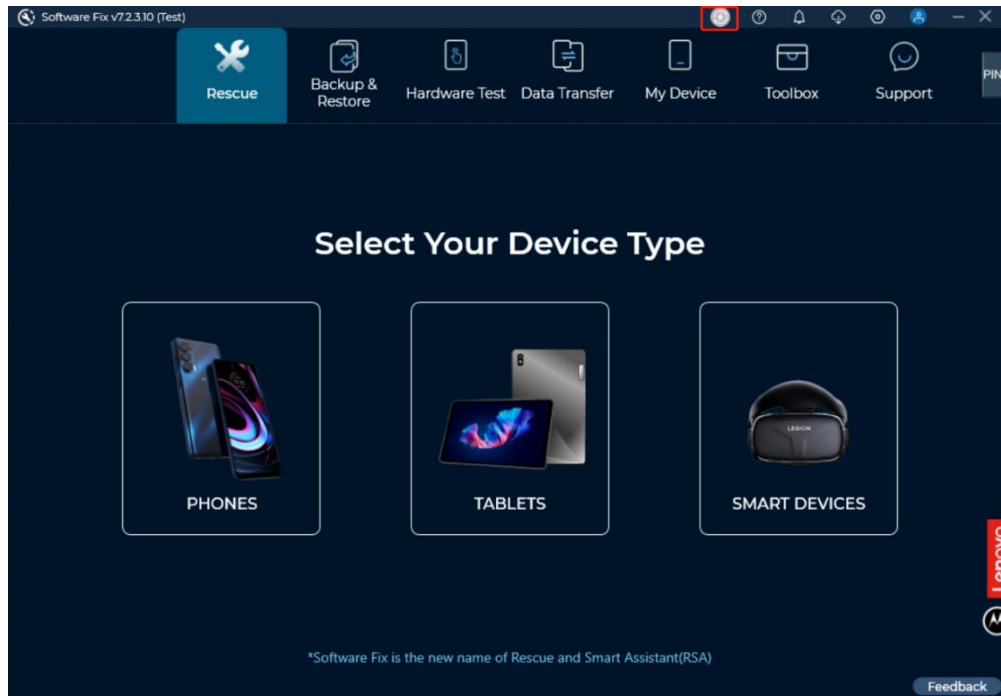


When no device is connected, hover on the button, it shows 'waiting for device to connect'.

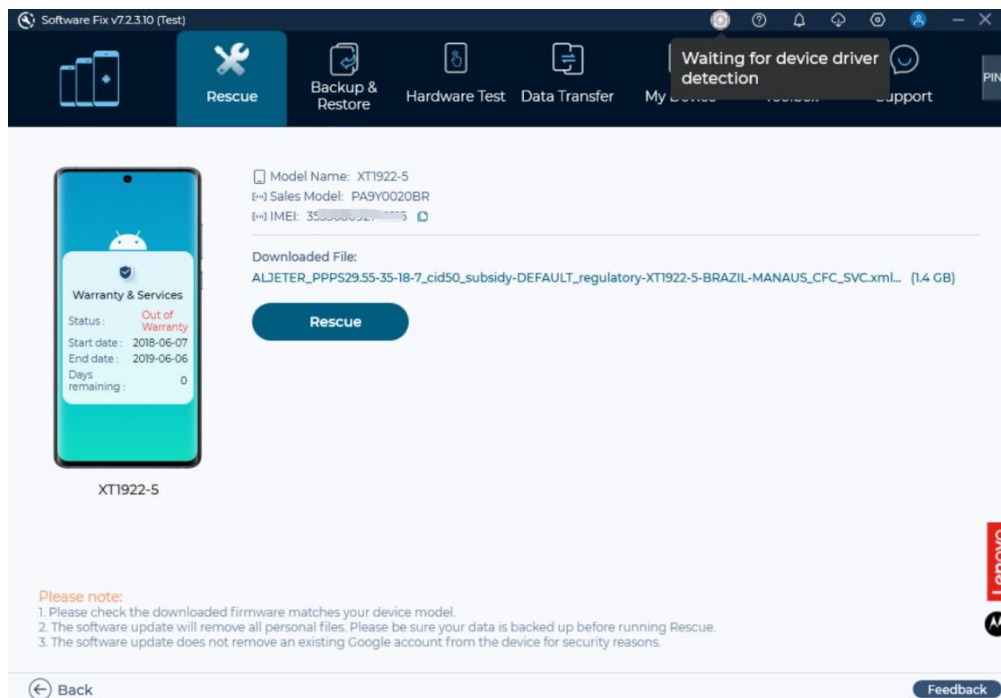

When the driver is detected as not installed after clicking the 'Rescue' button, hover the mouse to display 'Installing device driver...'.

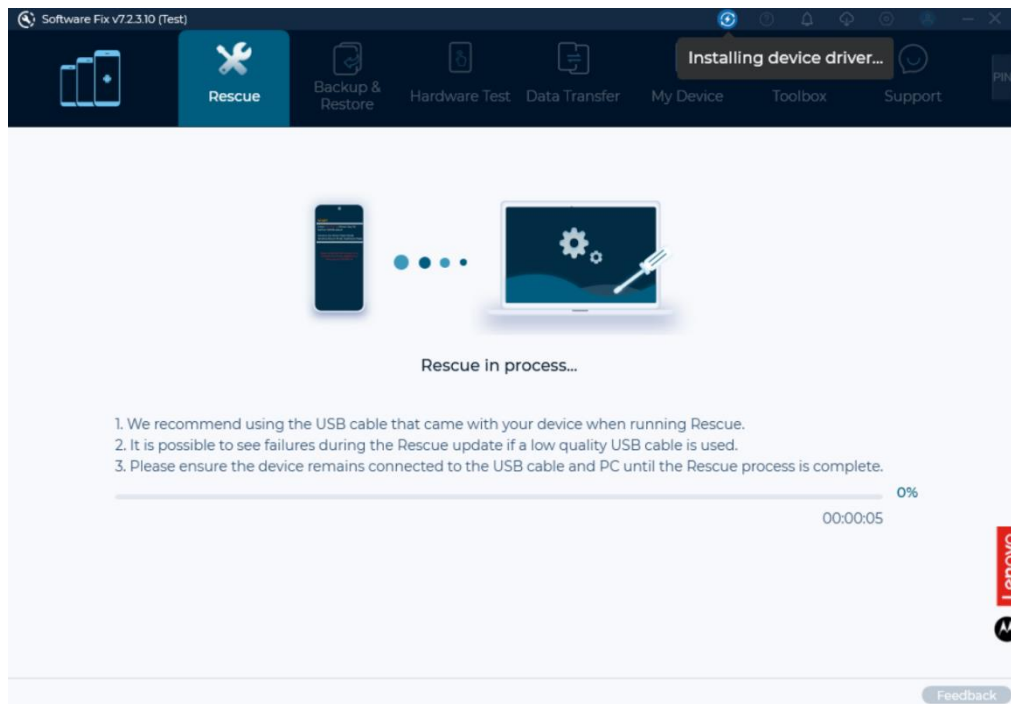

When the driver is detected as installed after clicking the 'Rescue' button, hover the mouse to display 'PC driver installed'.

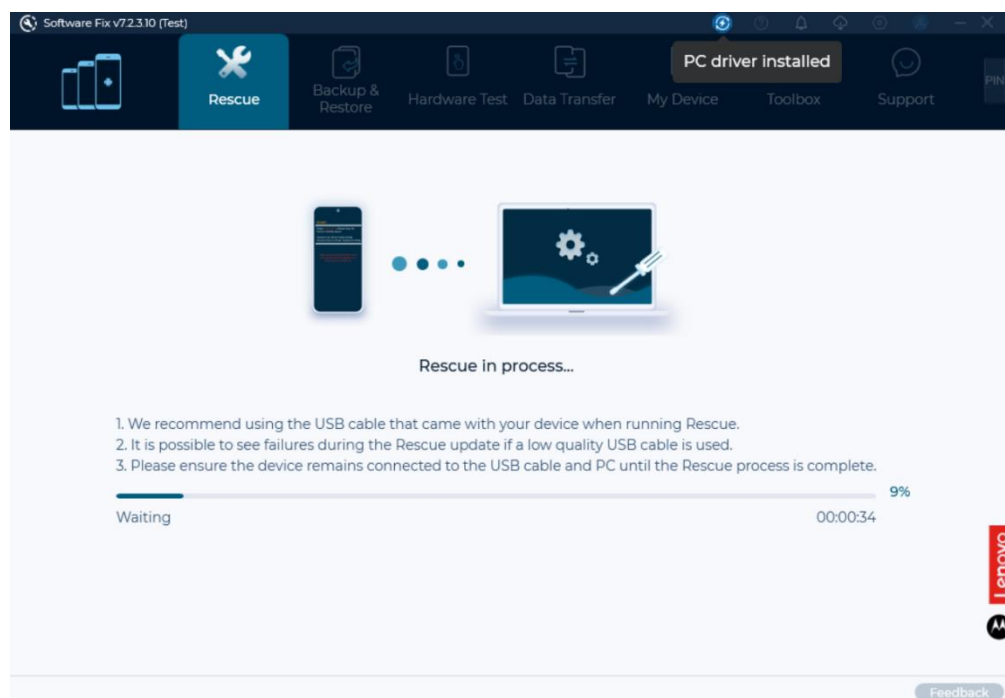


Rescue

Click the “Rescue” plug-in button:




Once loading is completed, the following page will appear:

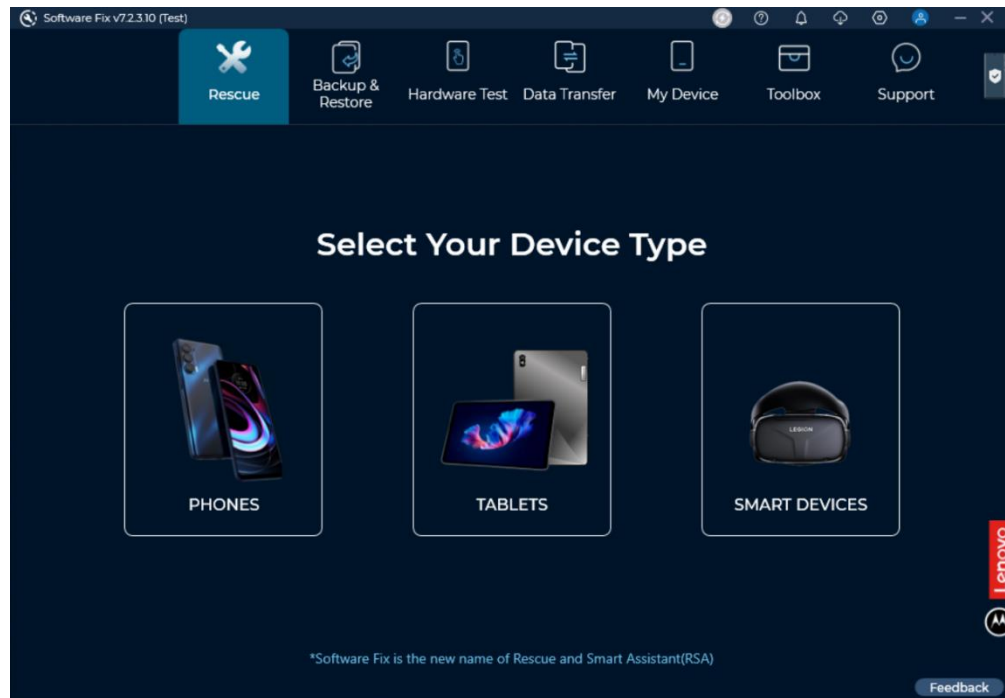


Phone Rescue

Click the 'Phones'. It will show the match type to select.

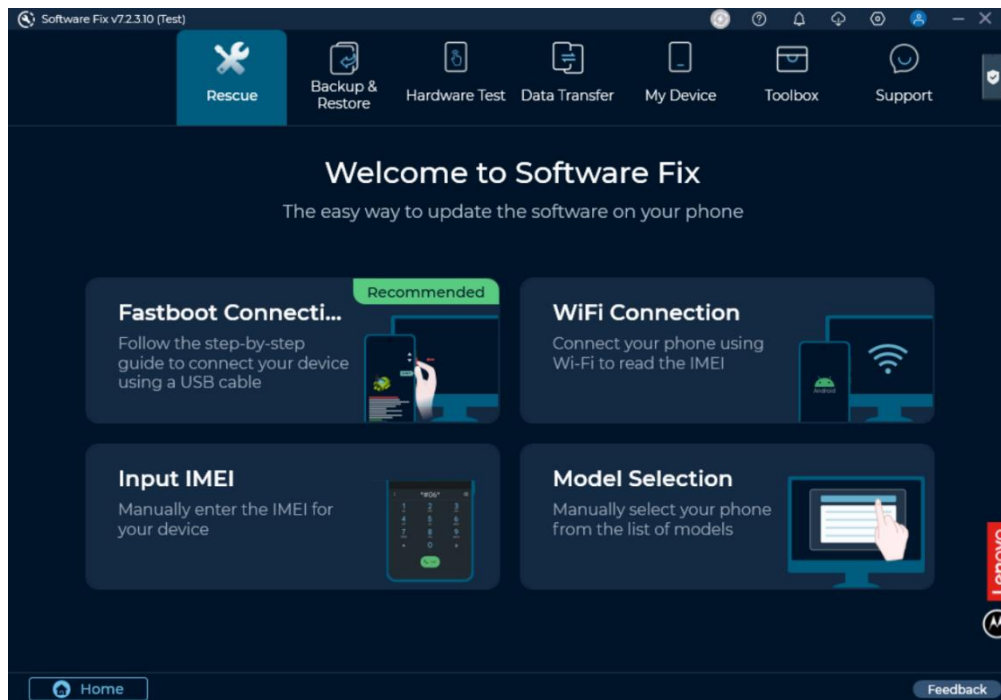


IMEI matching Rescue

Click on the "Input IMEI" button to display the IMEI detection page. Then, enter the IMEI number of the device that you wish to rescue into the input box provided.

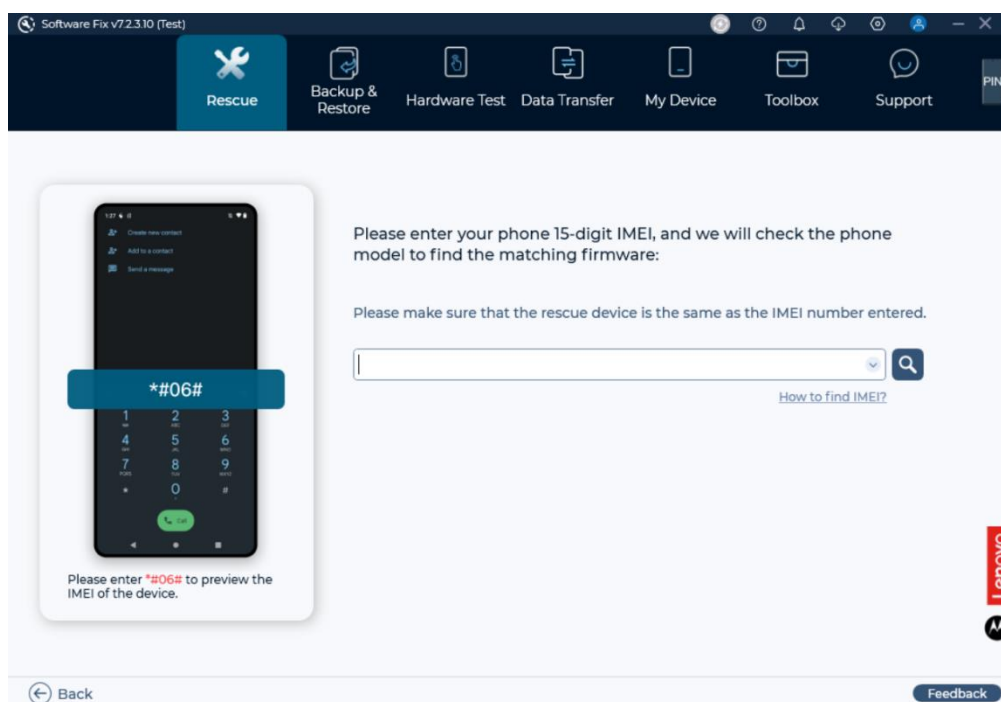


Note: If the region of the PC is setting to China and the language of the RSA Client is Chinese, then the IMEI matching page will be disabled.


Click  to search, it will show the result of matching if it can match a firmware.

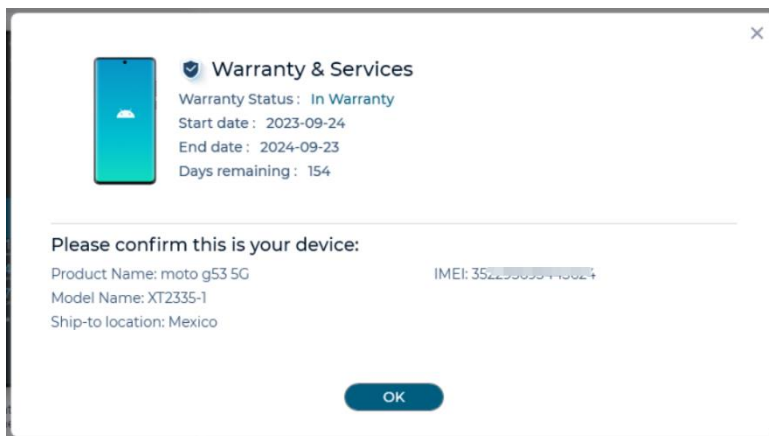


Click “OK” will enter the rescue page, click “Download” button to download the firmware.

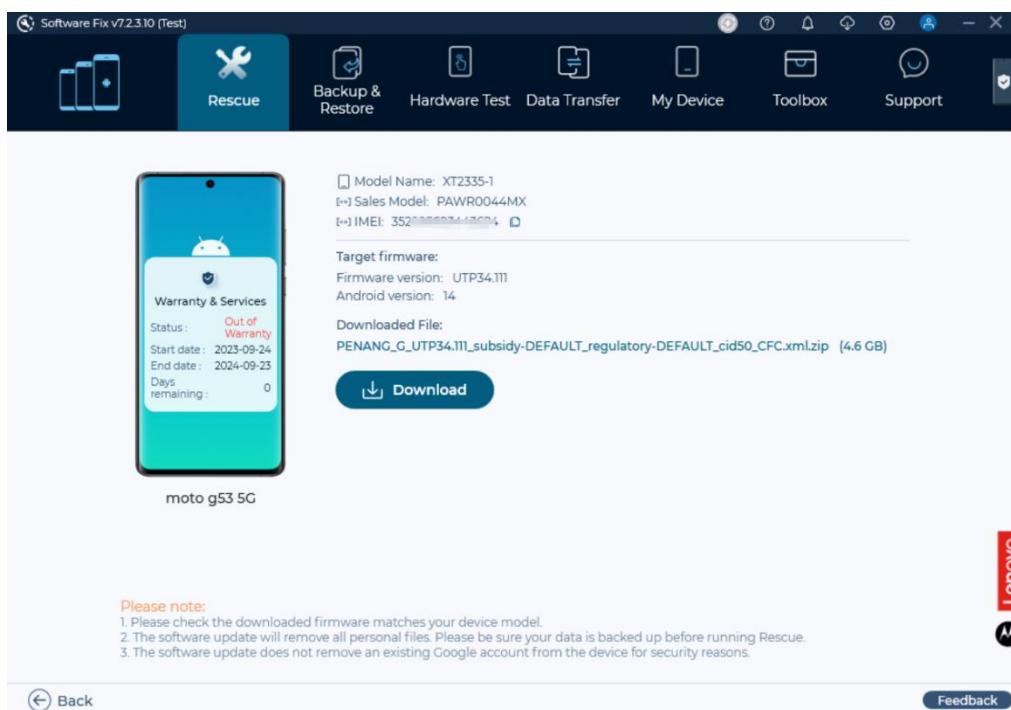


Downloading the firmware...

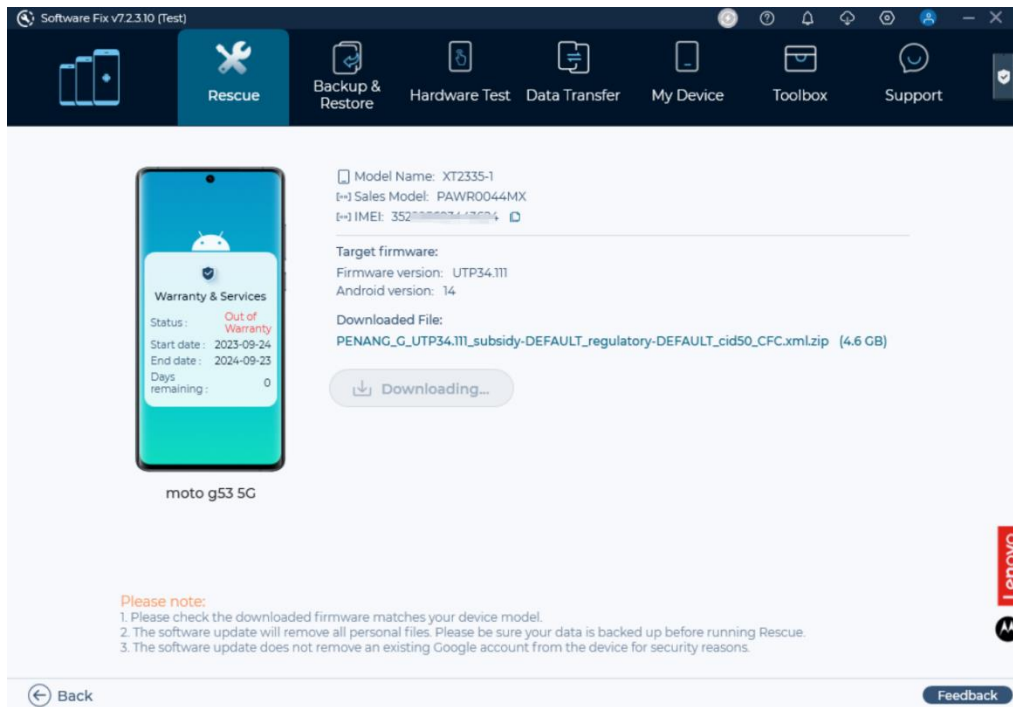


When firmware downloaded, the “Rescue” button will be displayed.

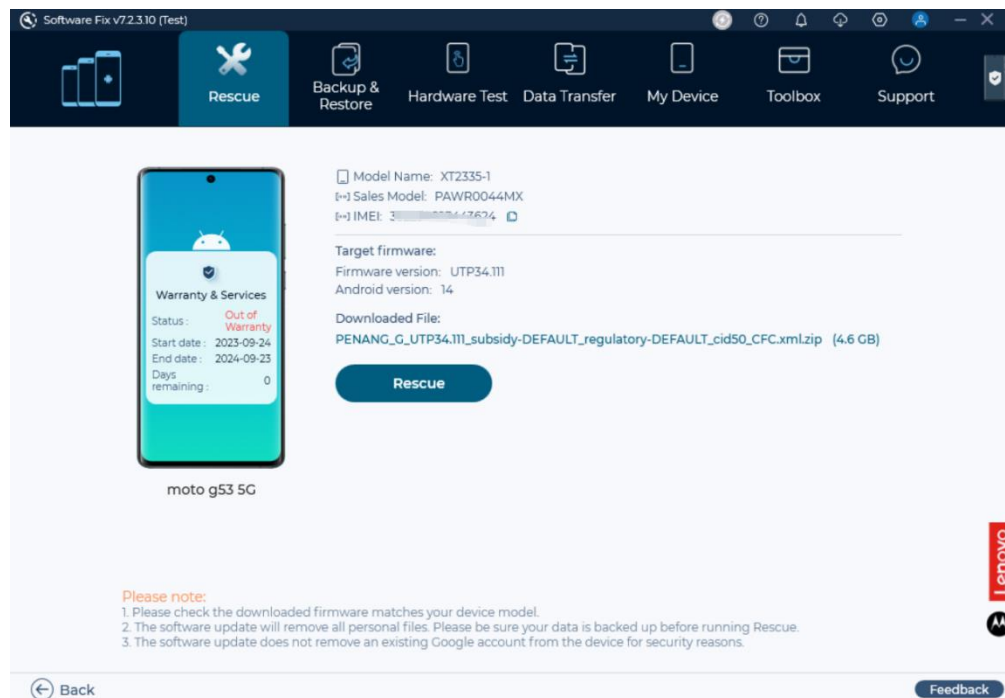


Click the “Rescue” button, it will begin to rescue. The progress bar will appear.

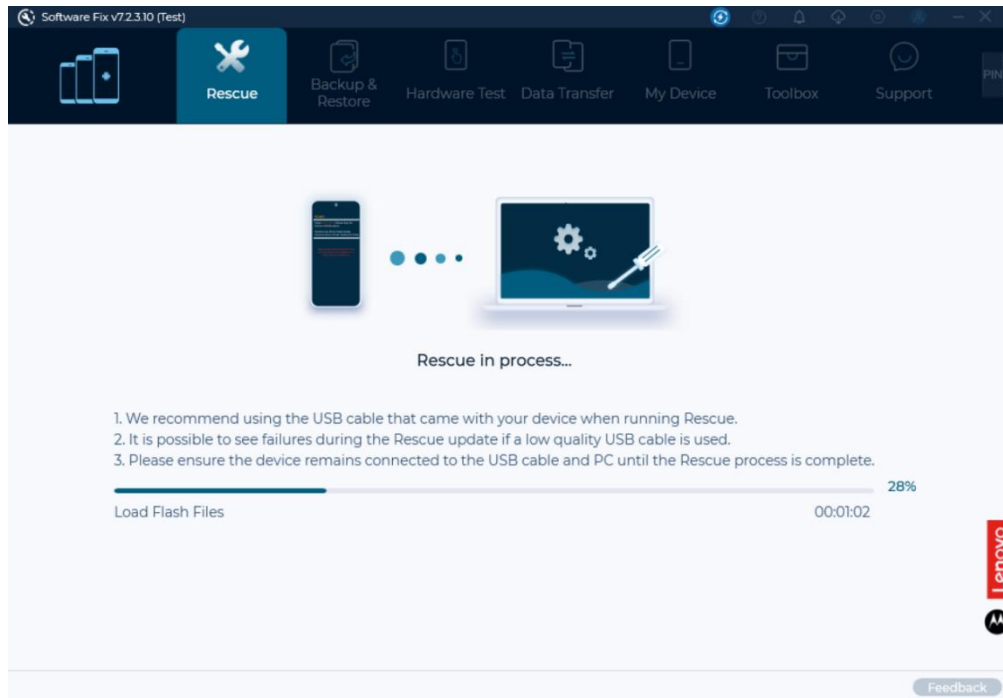

Once the rescue is completed, the following pop-up box will appear.

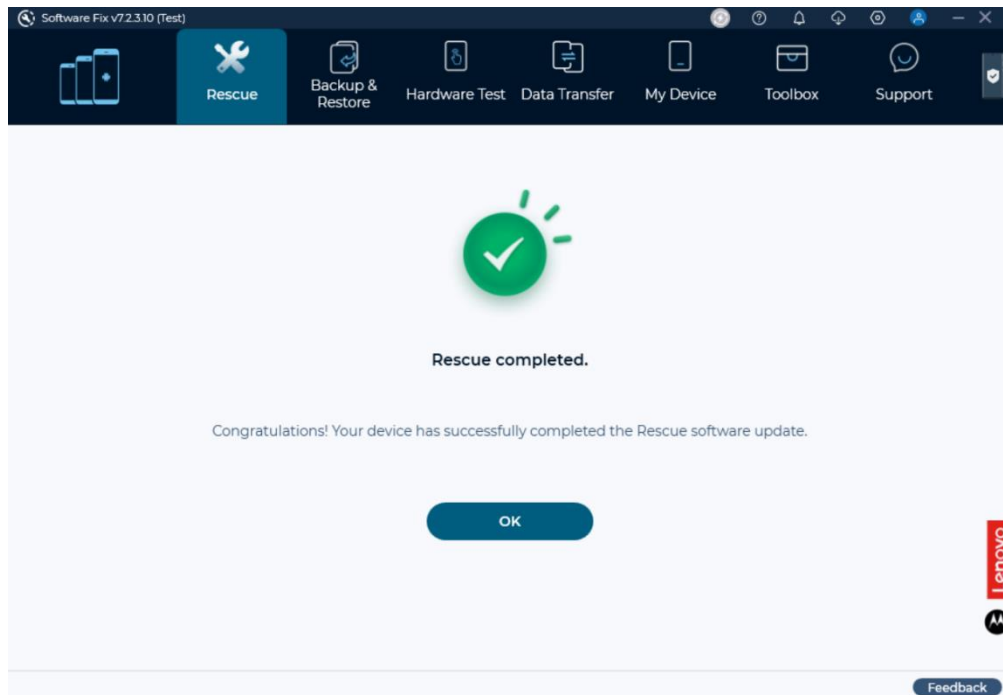


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

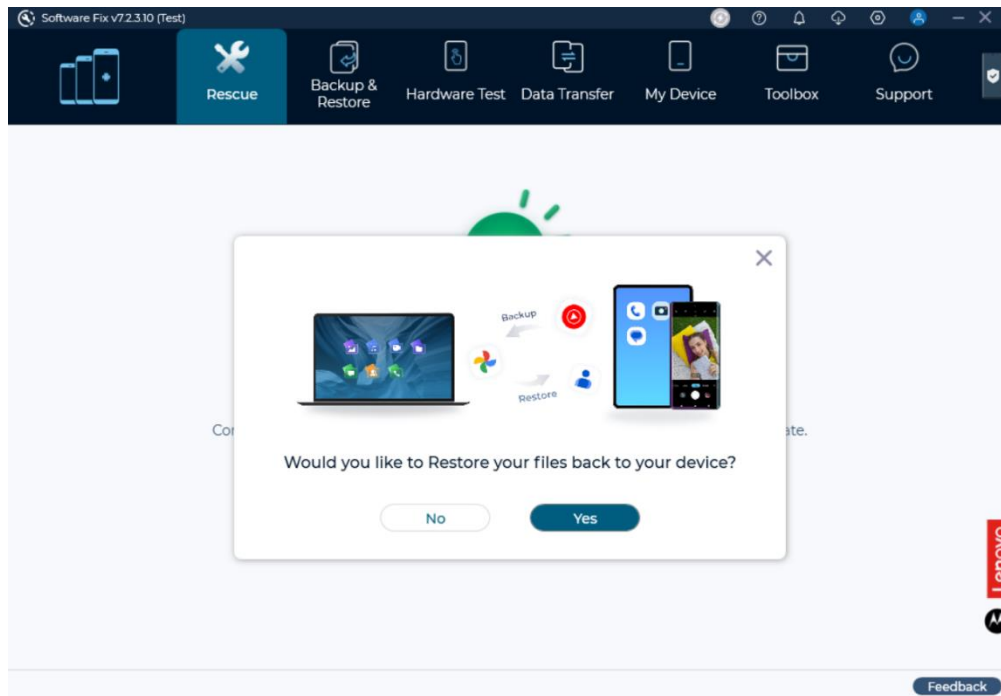


Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.

Fastboot Mode Rescue


Click on the "Fastboot Connection" button on the Phone Rescue page. This will display the instructions for connecting a fastboot device.

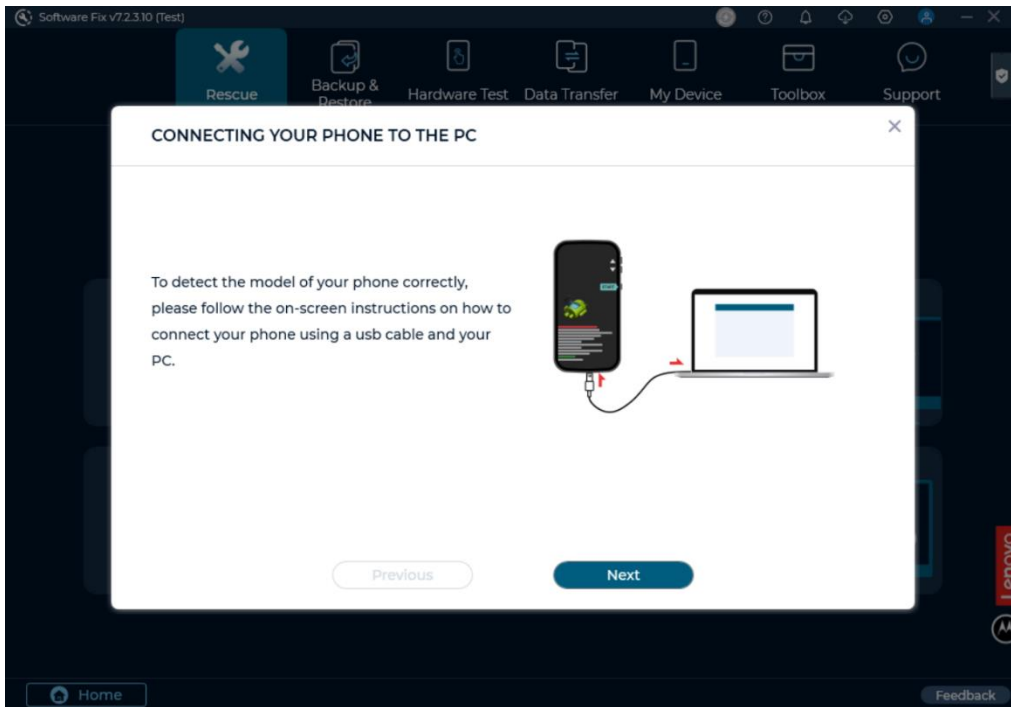


If it is a supported model and there is one matched firmware, a similar display will appear as follow:

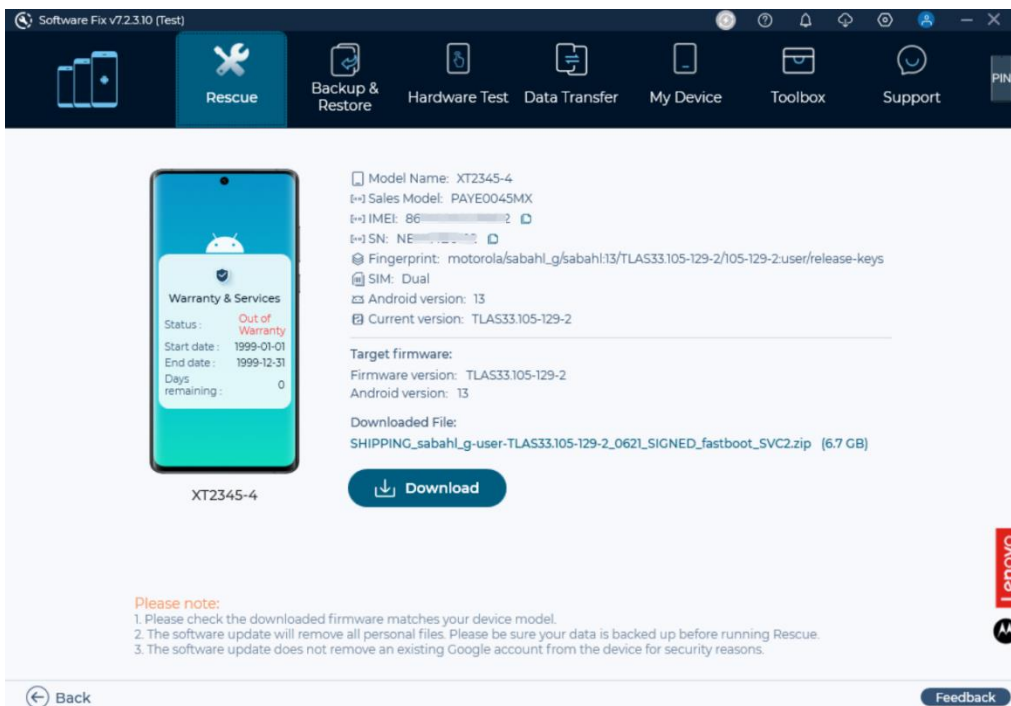


Click on the "Download" button to initiate the download of the firmware. Once the download is complete, click on the "Rescue" button to proceed with the device rescue process.

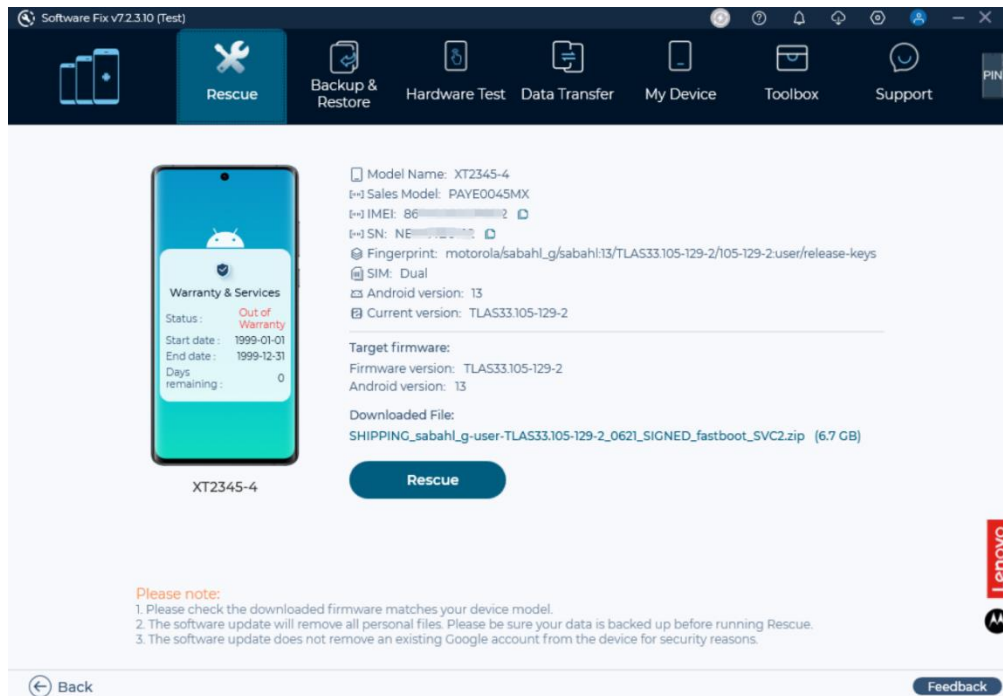


Click “Rescue”, it will begin to rescue, and the progress bar will appear.

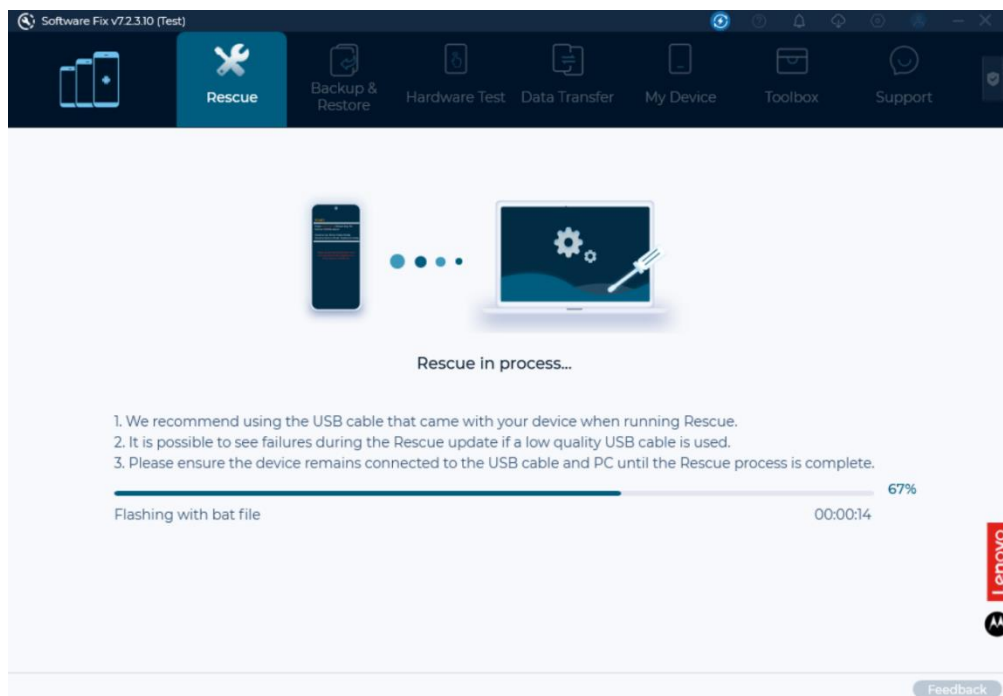

Once the rescue is completed, the following pop-up box will appear.

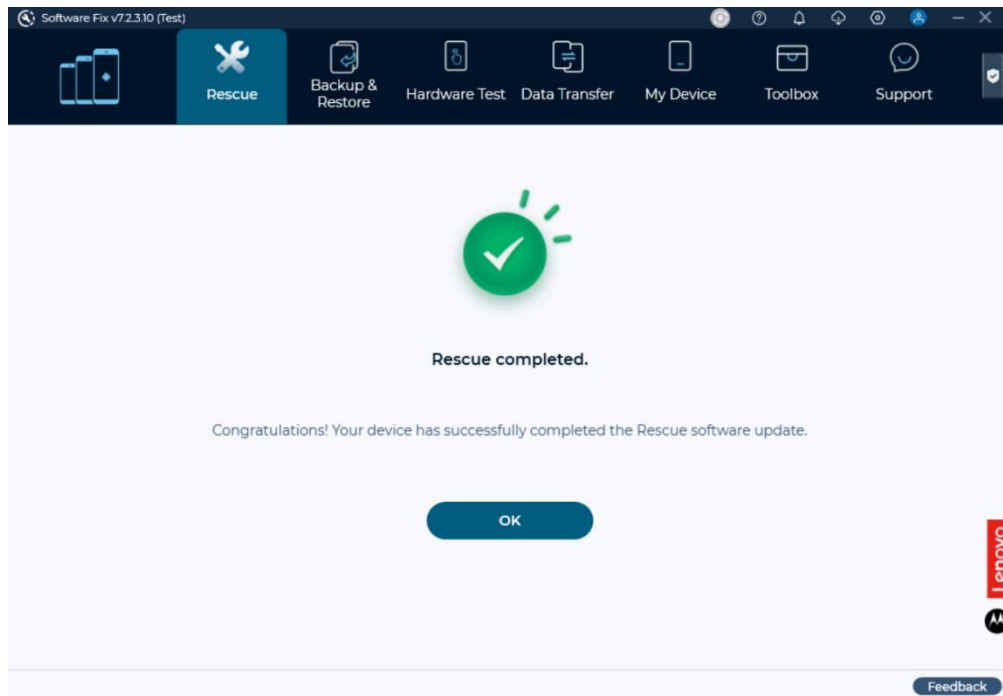


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

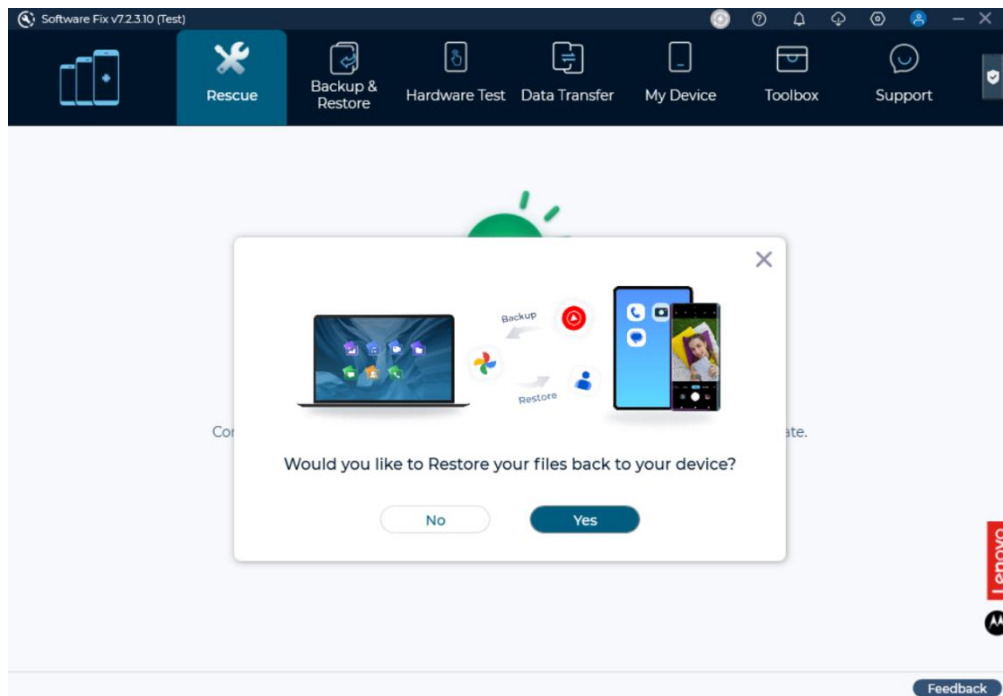


Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.

Manual selection Rescue

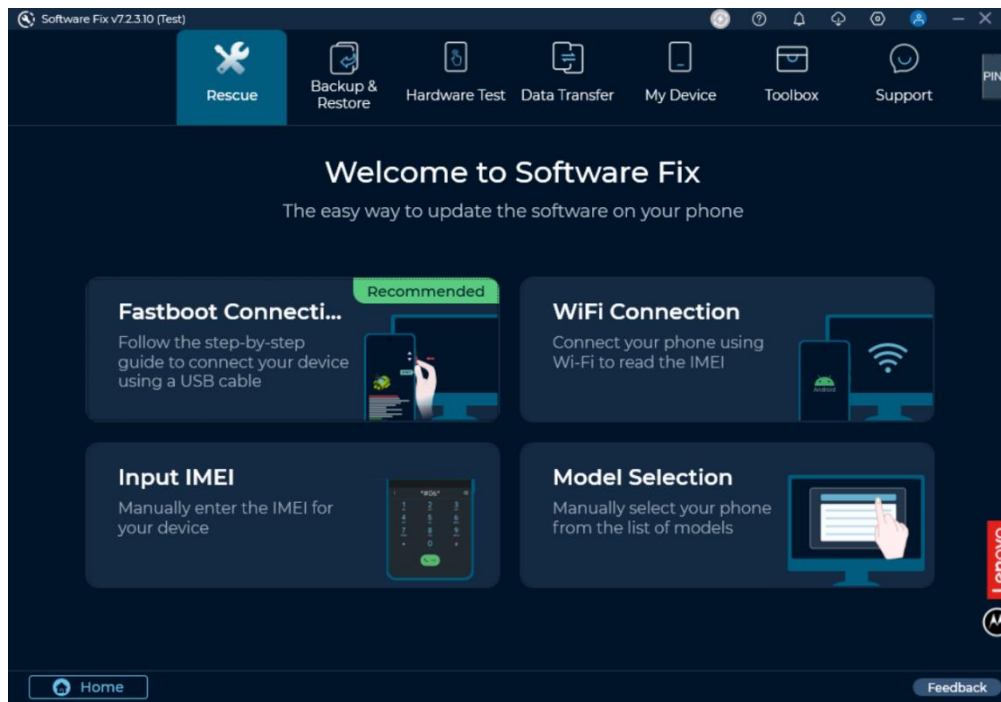


Click on "Model Selection" to access the Phone's Manual Selection page.

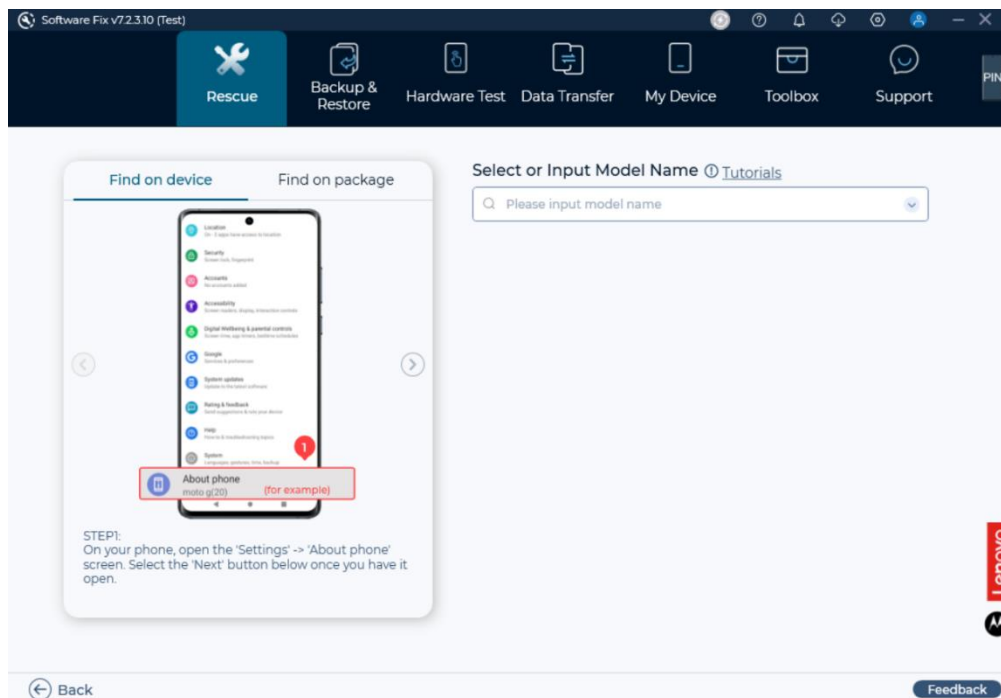


When you first enter the Manual selection page and have registered any device(s), a pop-up box titled "You used these devices recently. Would you like to rescue one of these?" will appear. Select the device that you wish


to rescue from the list provided. The Software Fix client will then automatically match the selected device's product name and model name.

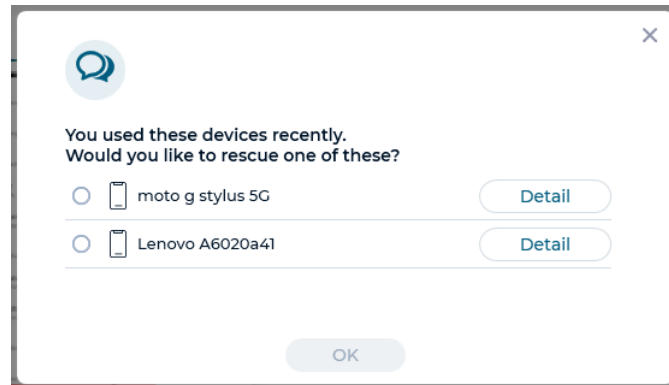


To enter the Phone's manual selection page, select the product name and model name in the "Product Name" and "Model Name" boxes. If it cannot match the ROM image, enter other parameters such as HW Code, SIM count, or country. Once the ROM image is matched, click the "Download" button to initiate the download process.

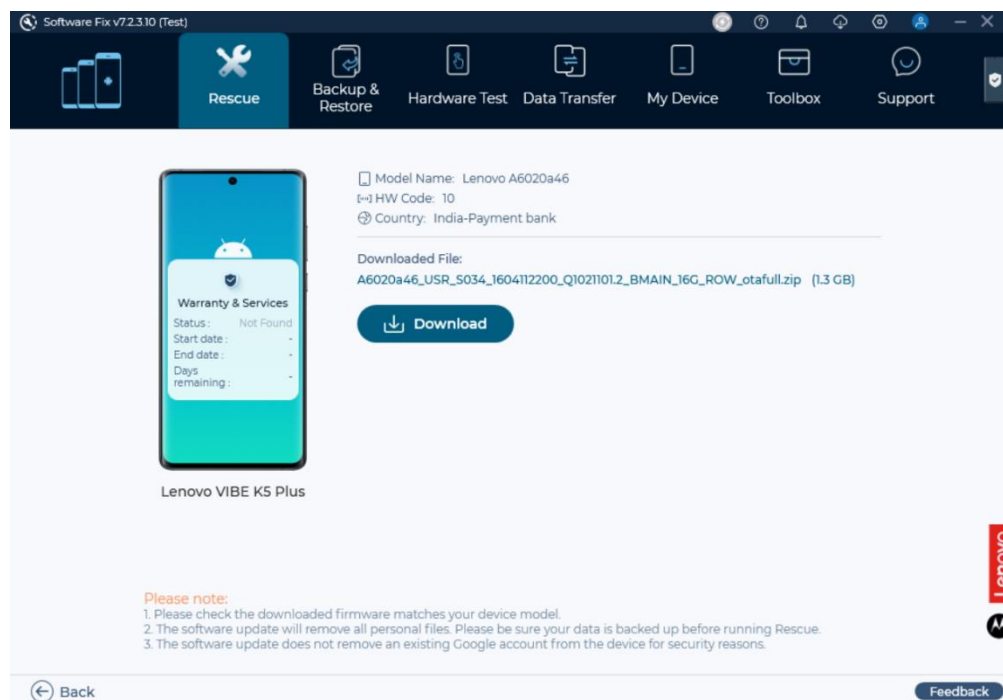


The "Rescue" button will be highlighted after the firmware is downloaded completely.

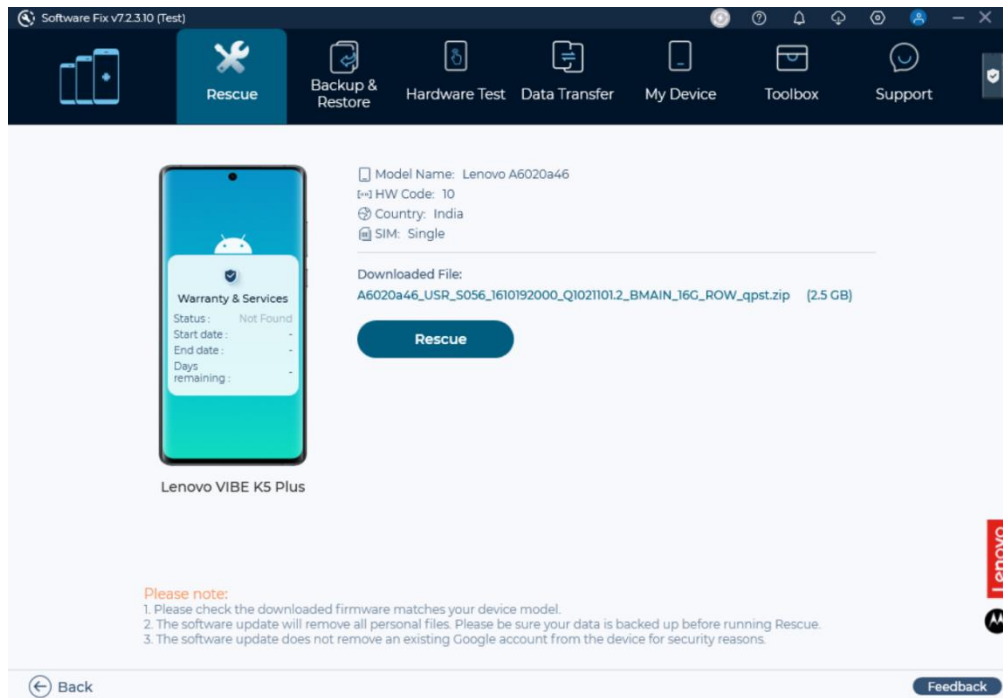


Click “Rescue” button, it will begin to rescue, and the progress bar will appear:

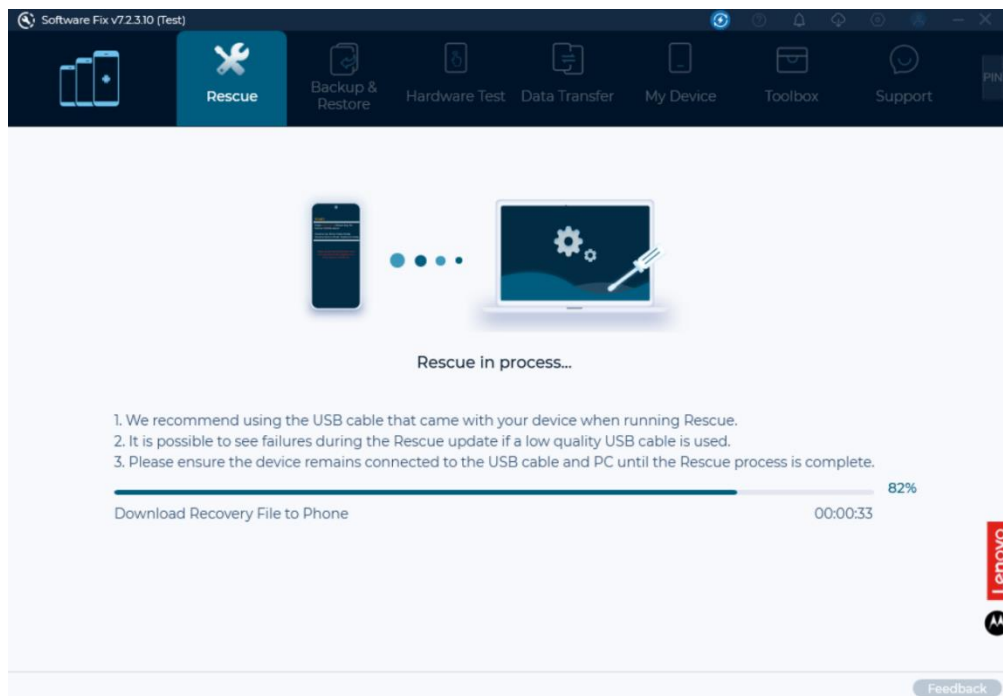

Once the rescue is completed, the following pop-up box will appear.

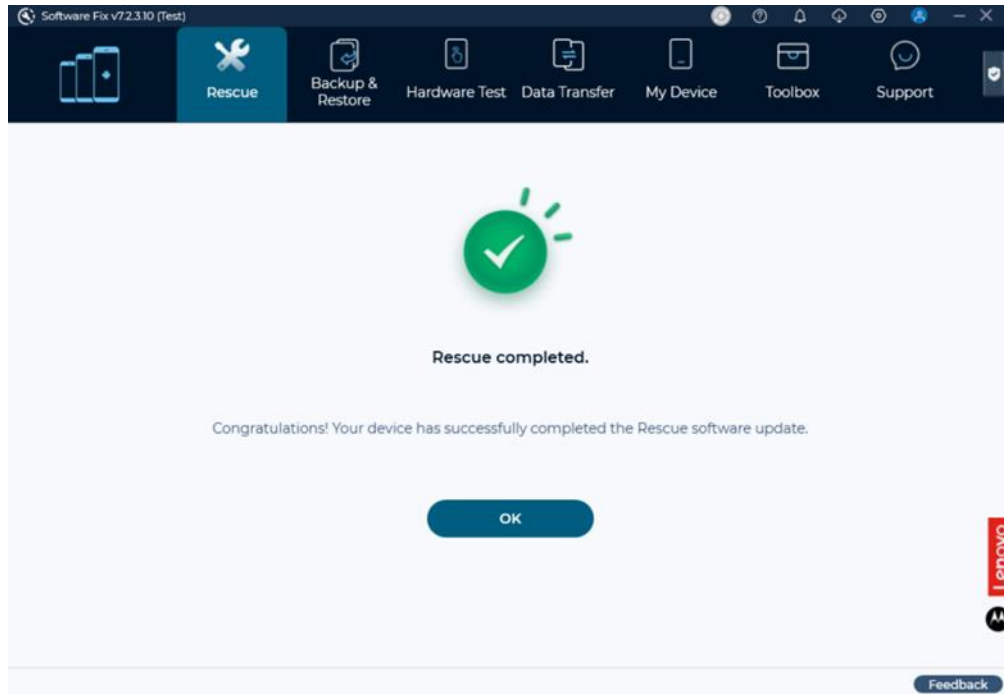


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

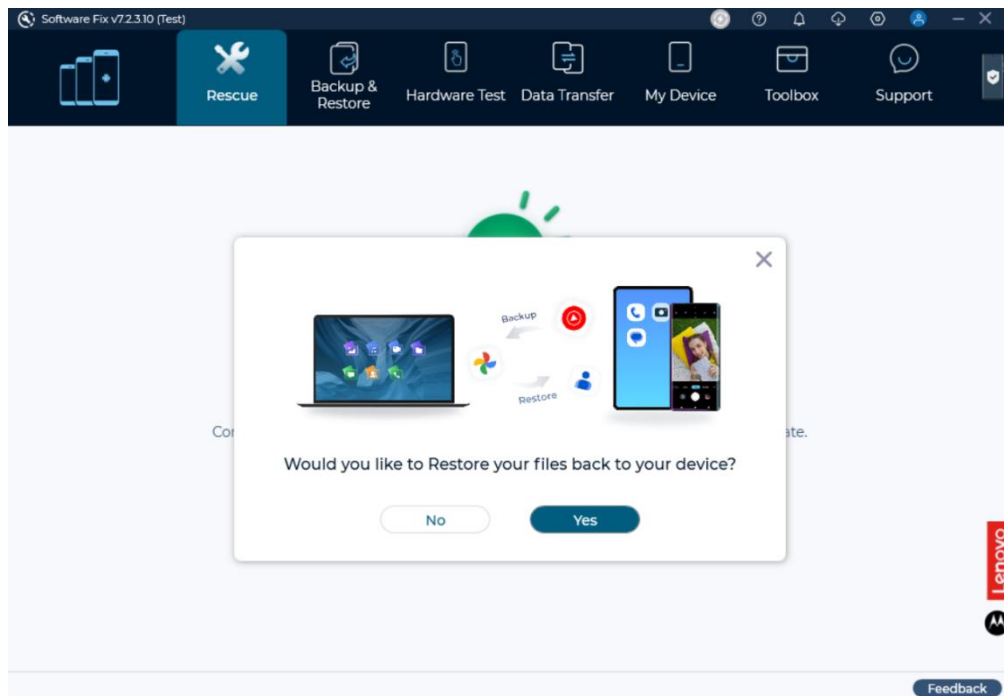


Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.

Country Code Setting:

If the device requires a country code, the following dialog box will appear. Follow the on-screen instructions to operate the device and set the country code.

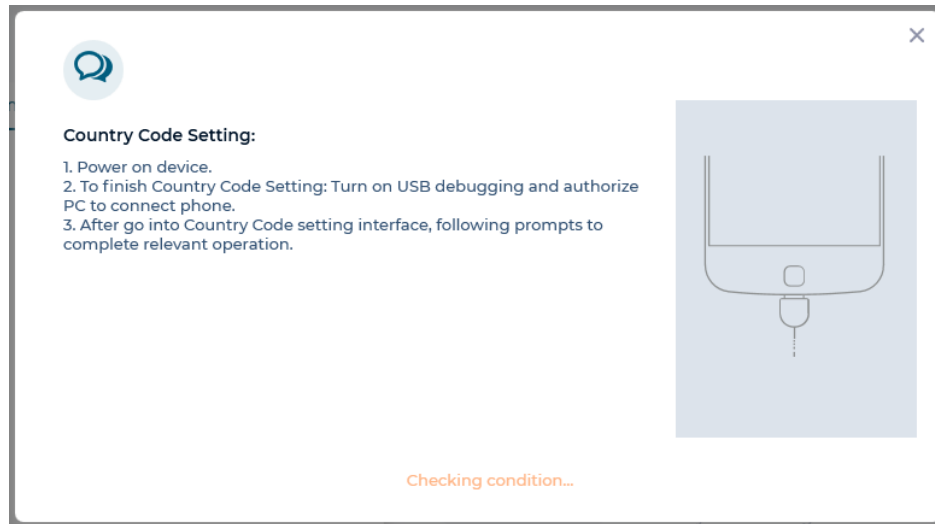


Note: After the device has been rescued, its product name will be displayed in the first line. You can click on the "Unpin from top" button to remove it from the top.

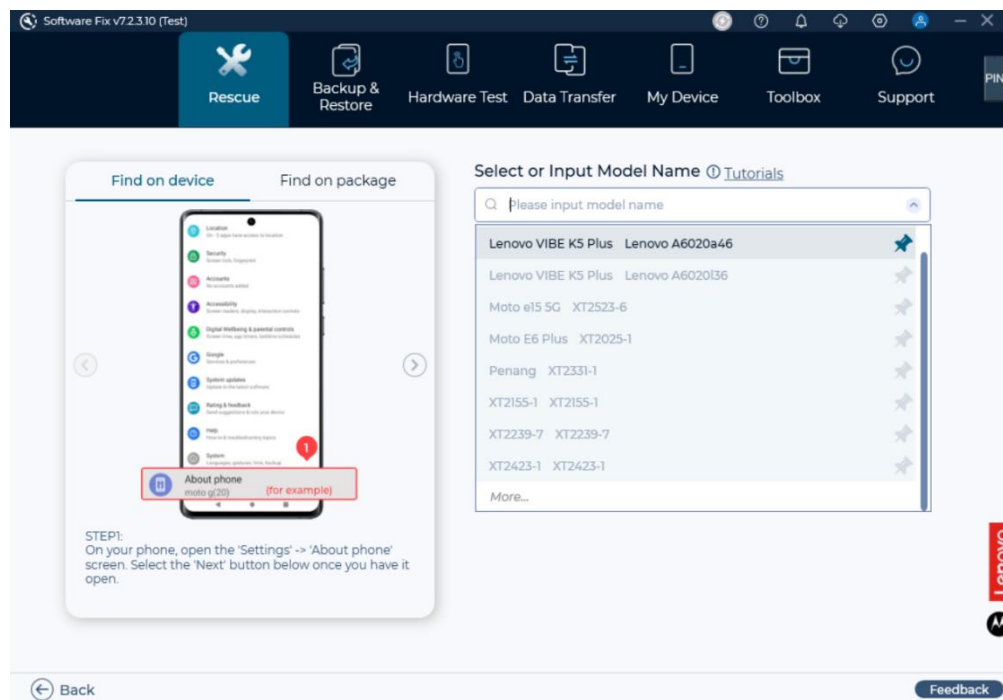


Wi-Fi Matching Rescue


Click on "Wi-Fi Connection" on the match type page, and it will display the connection steps as follows:

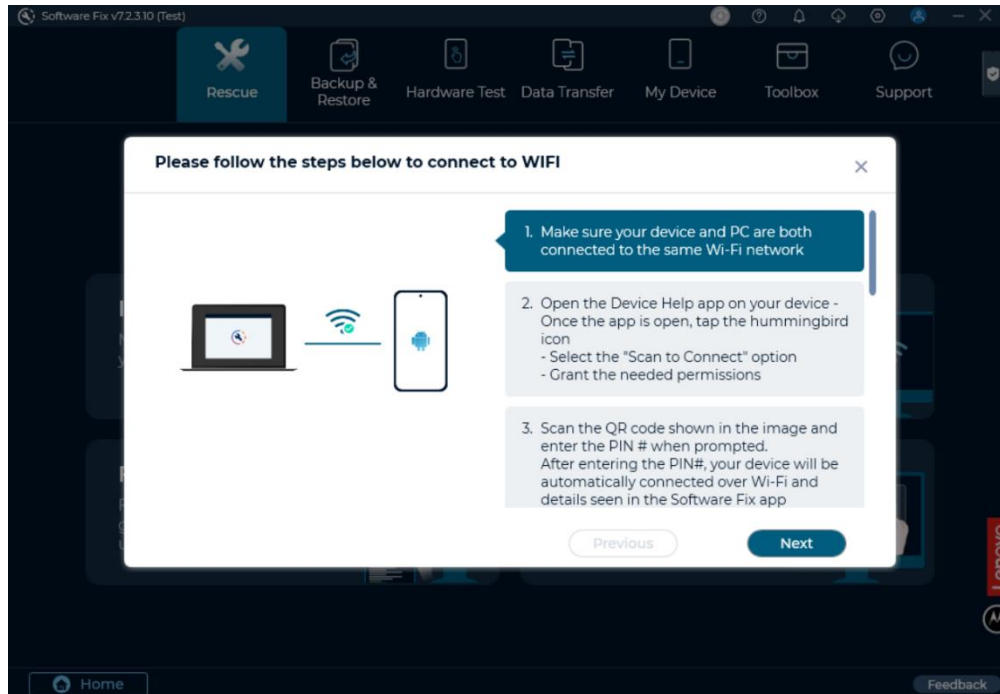


Connect the device to RSA over Wi-Fi, it will match the firmware automatically.

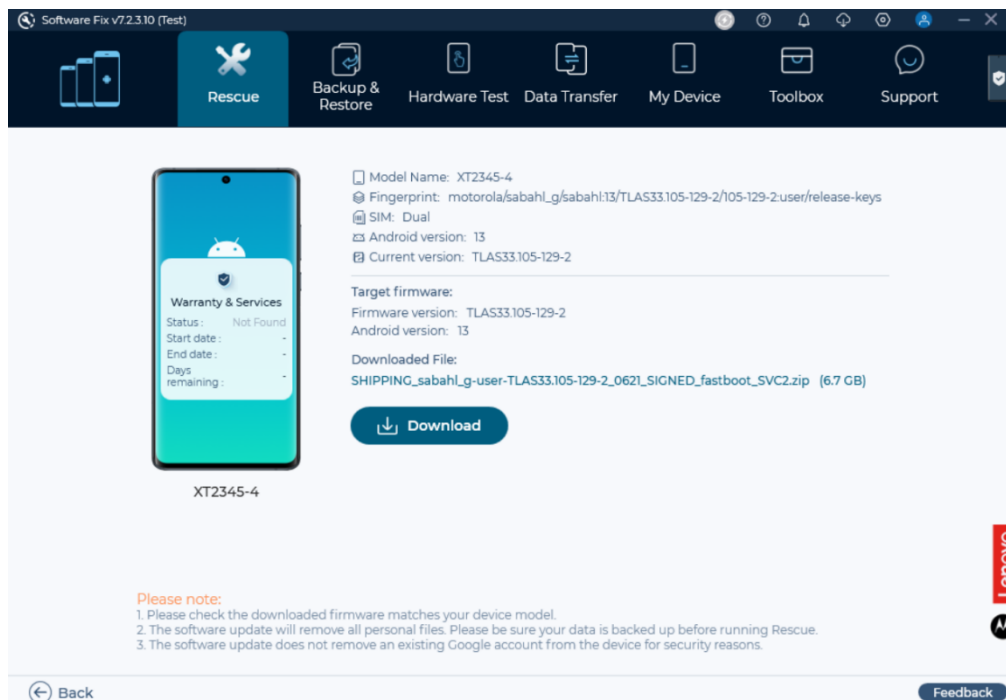


Click the "Download" button to download the firmware. Once the download is complete, the button will change to "Rescue".

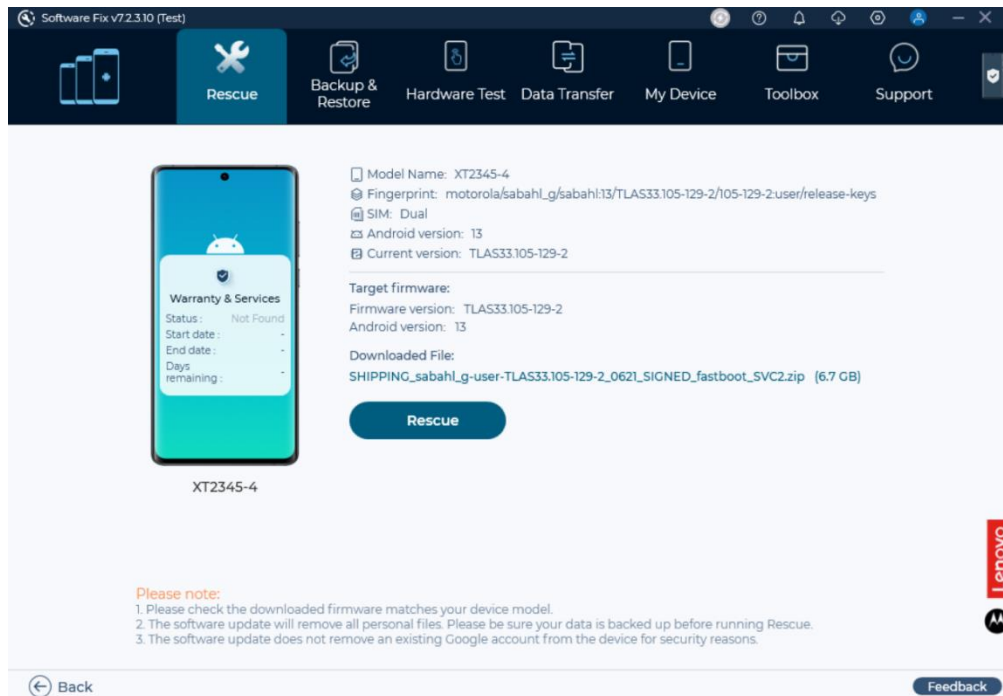


Click 'Rescue' and connect the device as instruction to flash device.

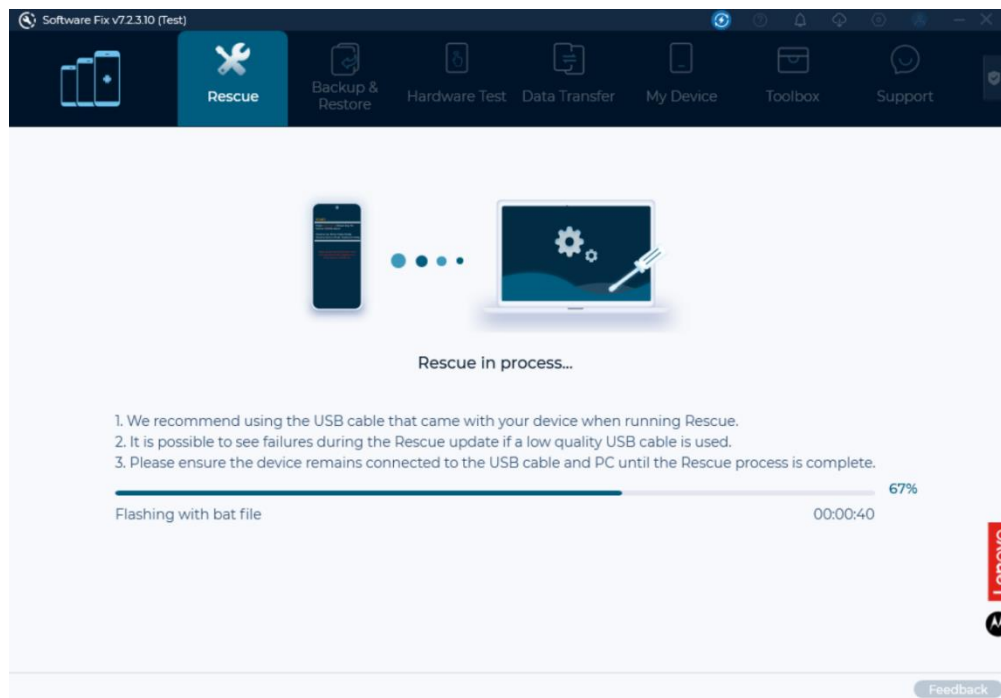

Once the rescue is completed, the following pop-up box will appear.

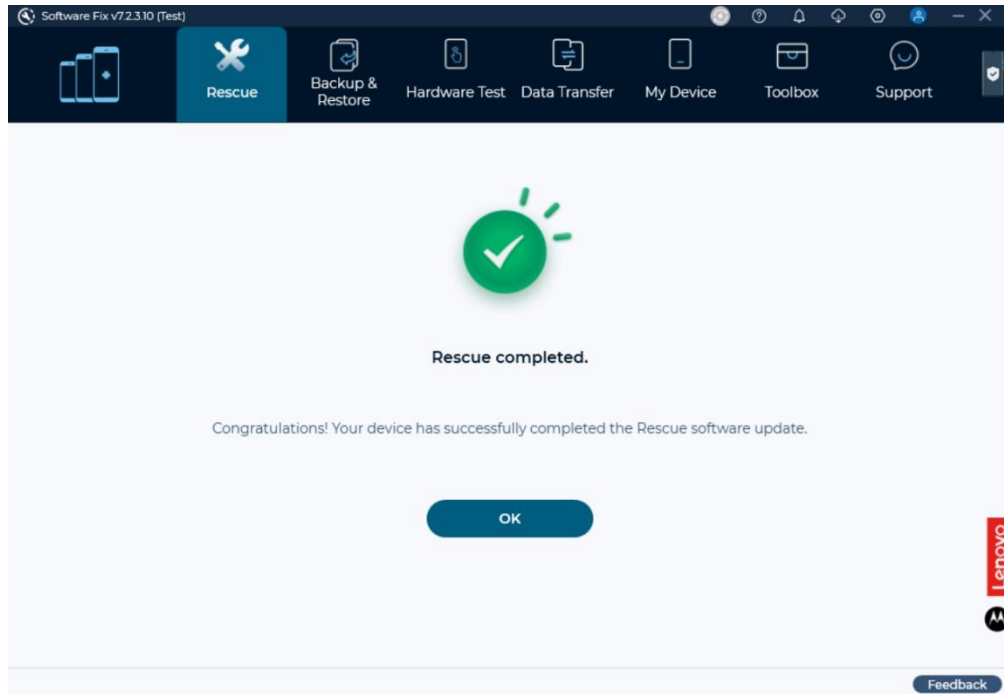


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

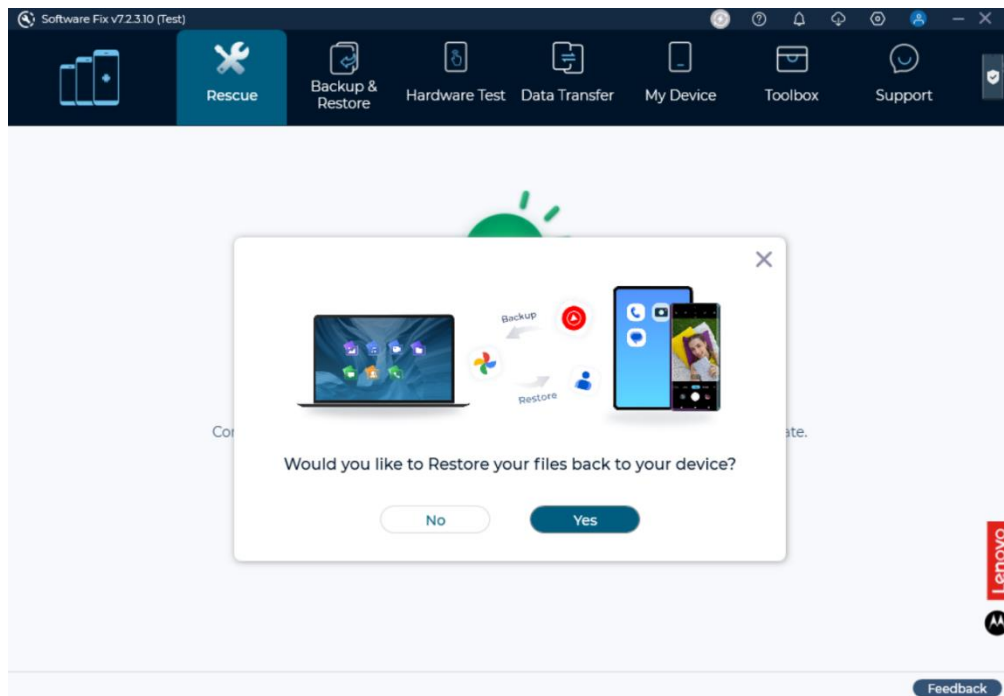

Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.


Tablet Rescue

Click "Tablet" button, it will show the match type to select.

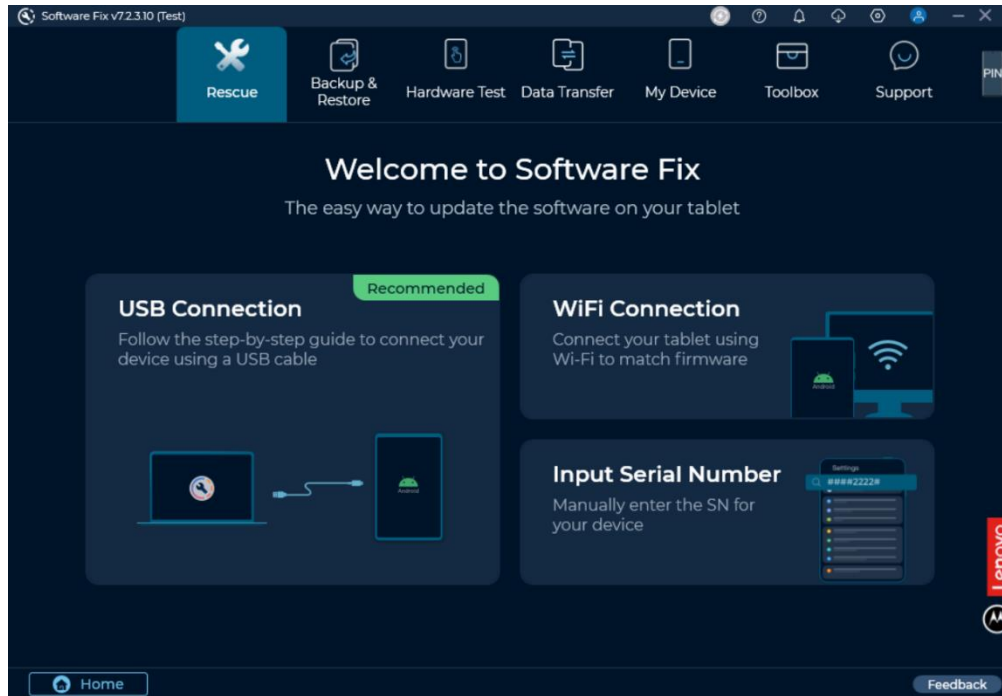


SN matching Rescue


Click on the "Input Serial Number" button to display the SN detection page. Then, enter the SN number of the device that you wish to rescue into the input box provided.

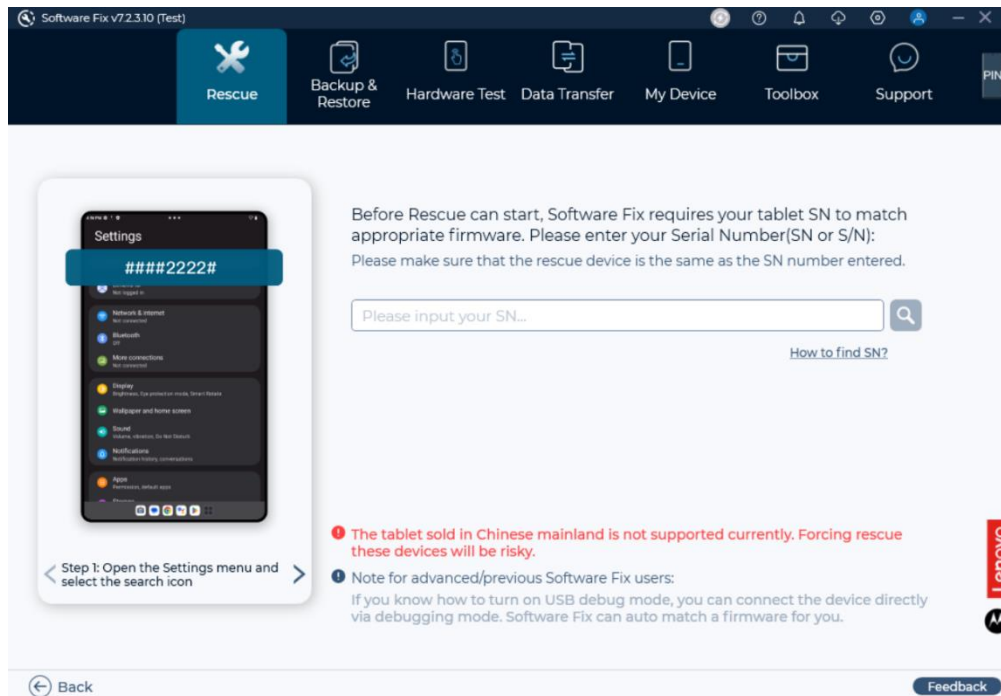


Enter the Serial Number of the device to be rescued in the input box. Click  to search, it will show the result of matching if it can match a firmware.

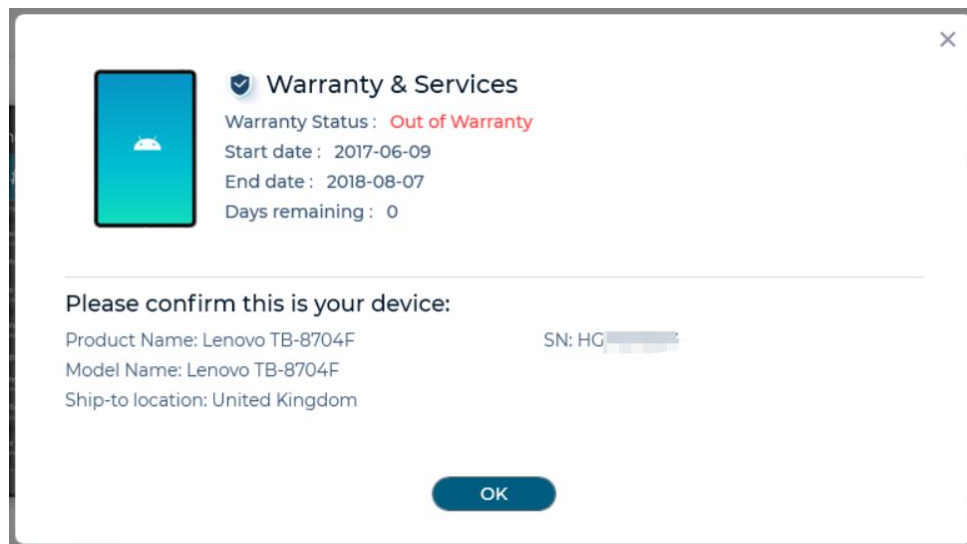


Click “OK” will enter the rescue page, click “Download” button to download the firmware.

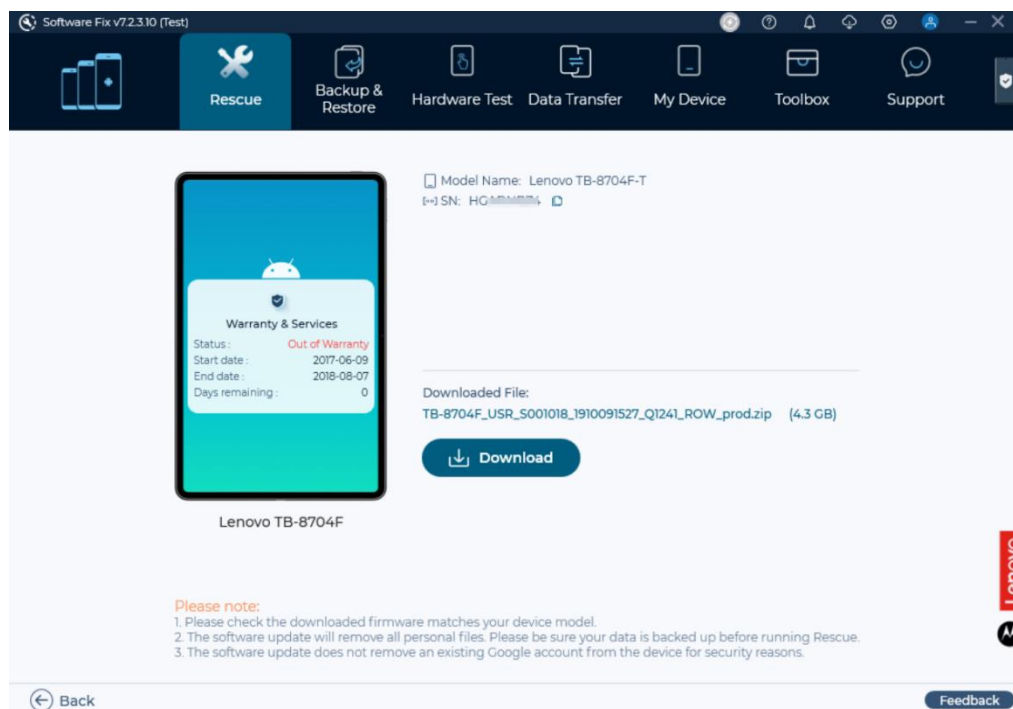


Downloading the firmware...

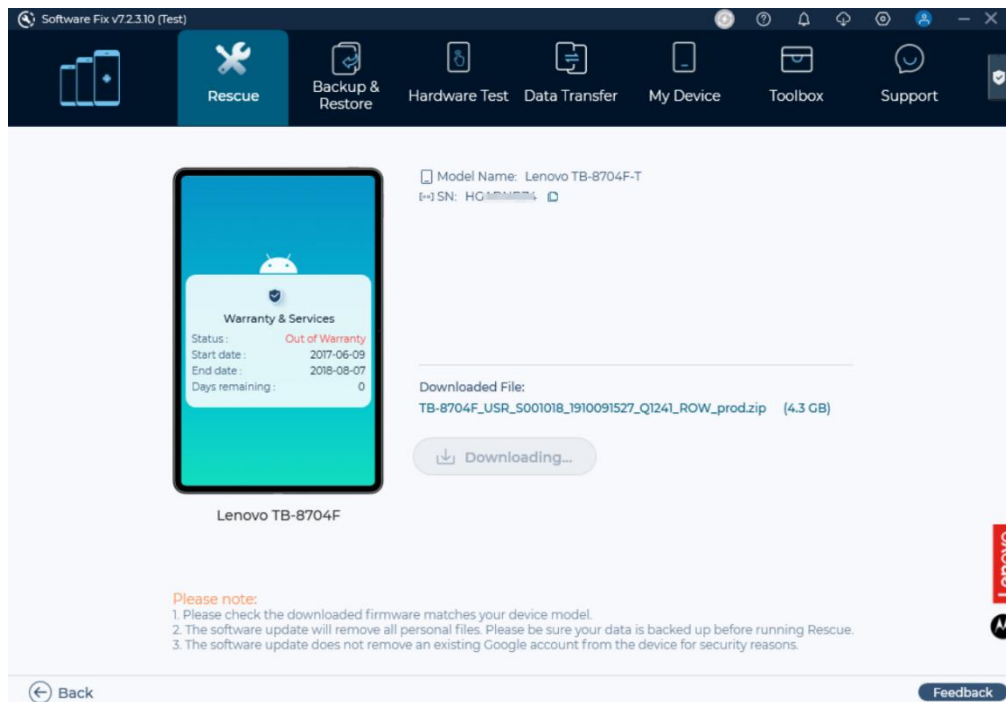


When firmware downloaded, the “Rescue” button will be displayed.

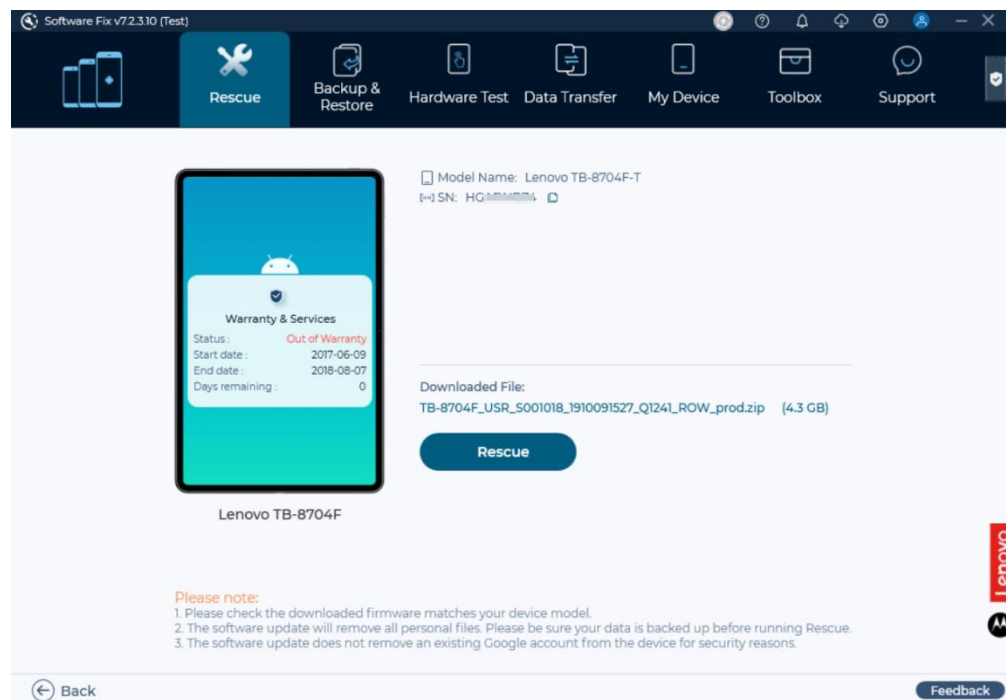


Click the “Rescue” button, it will begin to rescue. The progress bar will appear.

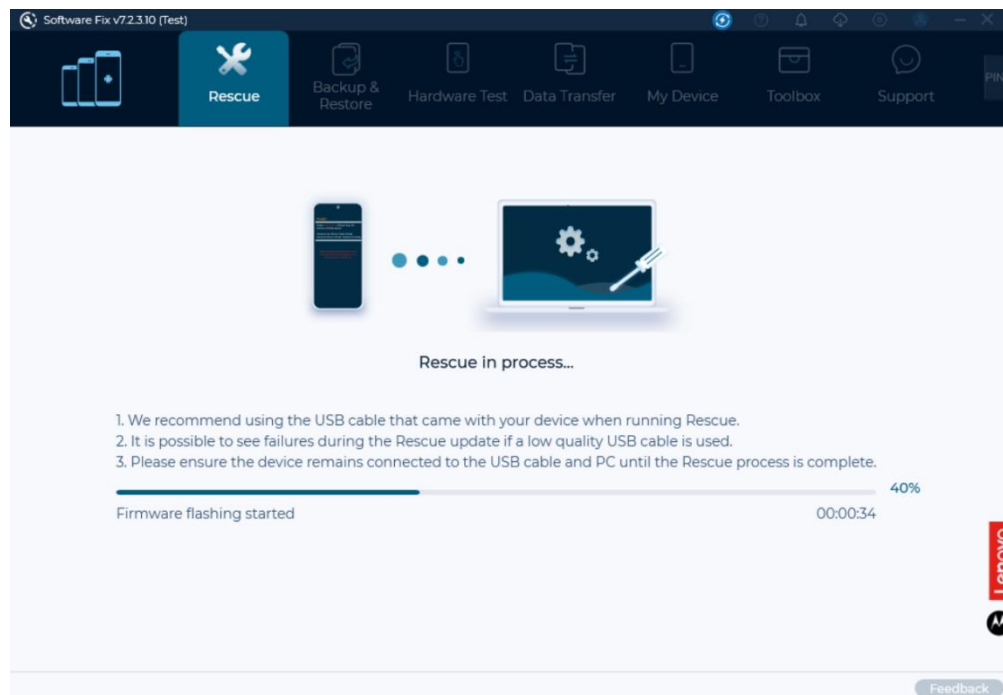

Once the rescue is completed, the following pop-up box will appear.

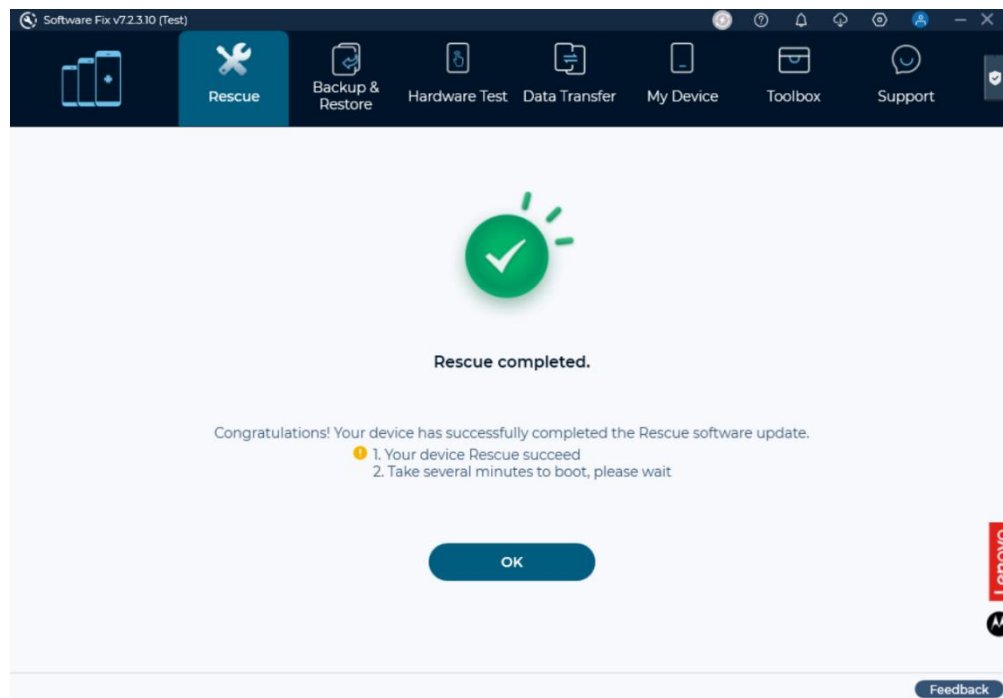


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

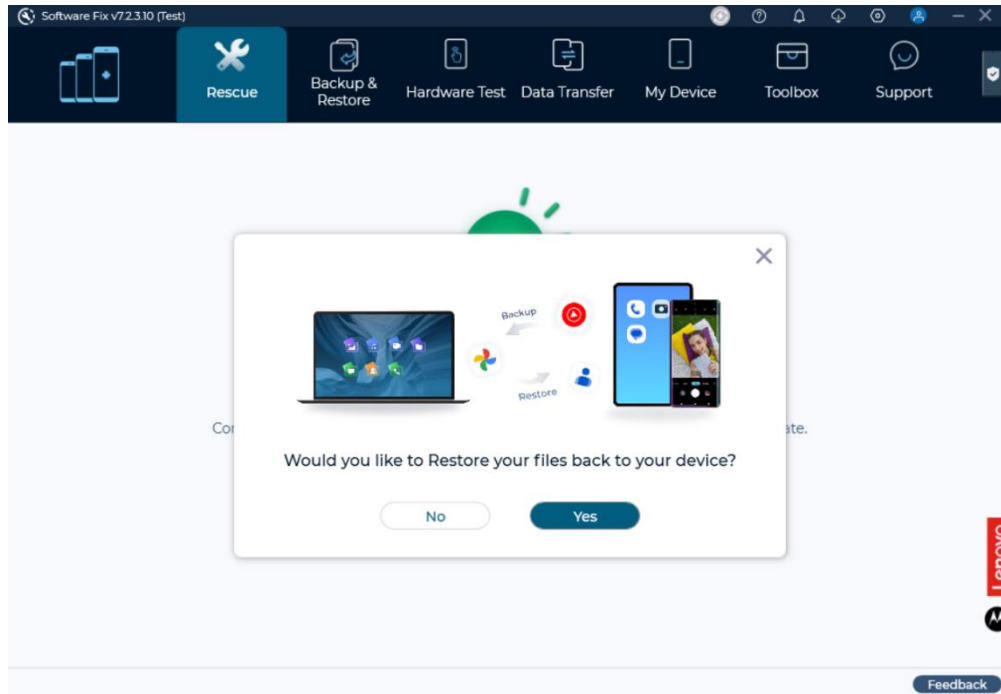


Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.

USB Debugging Mode Rescue


Click 'USB Connection' and follow the steps to connect to the device. A display like the following will appear. You can click the download button to download the firmware.

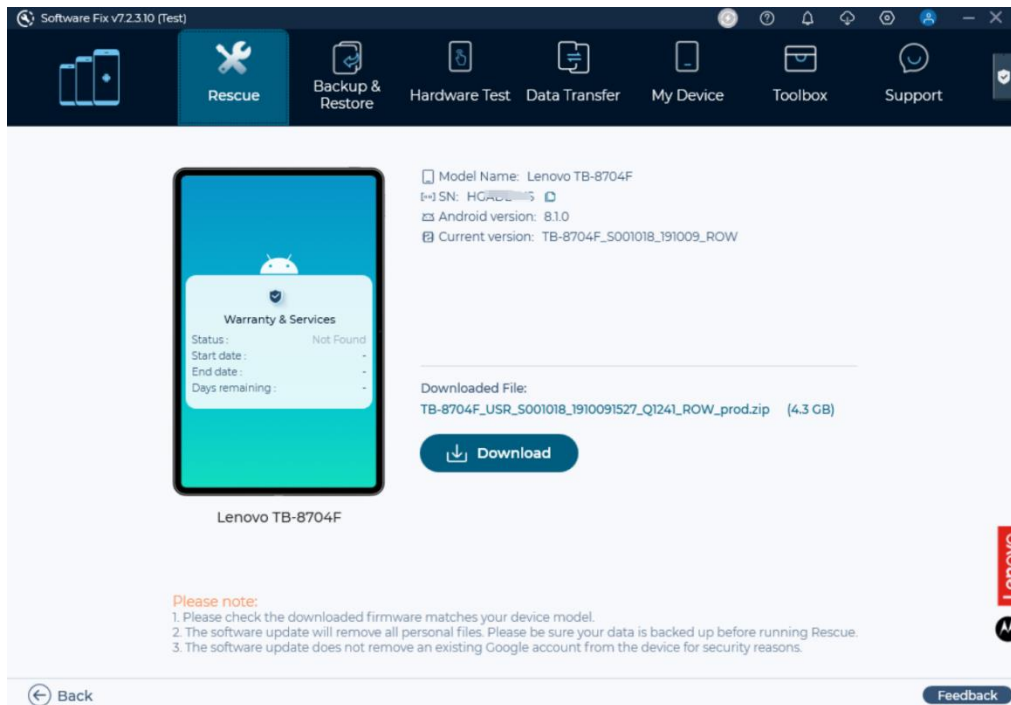


When the firmware downloads complete, you can click the “Rescue” button to rescue device.

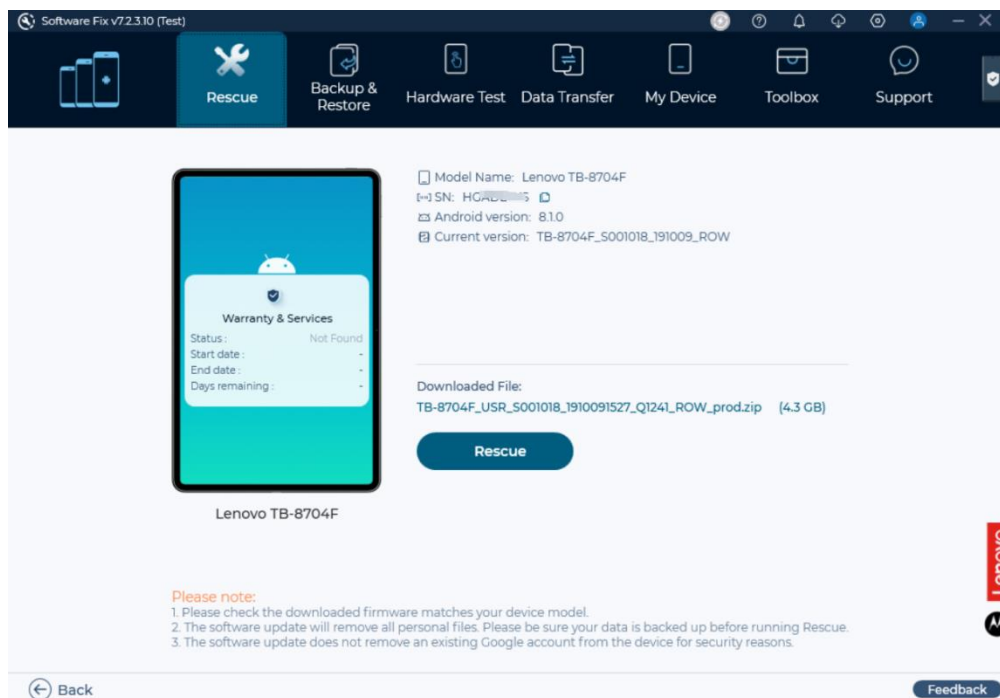


Disconnect your device and reconnect it following the on-screen prompts. The flashing process will commence, followed by the appearance of a progress bar as shown below:

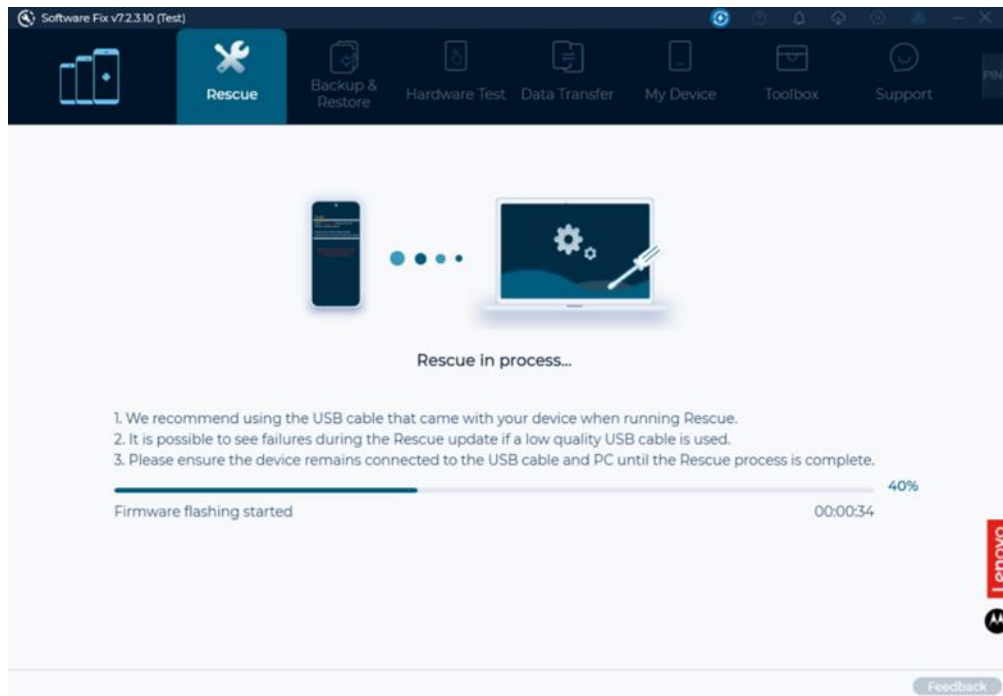

Once the rescue is completed, the following pop-up box will appear.

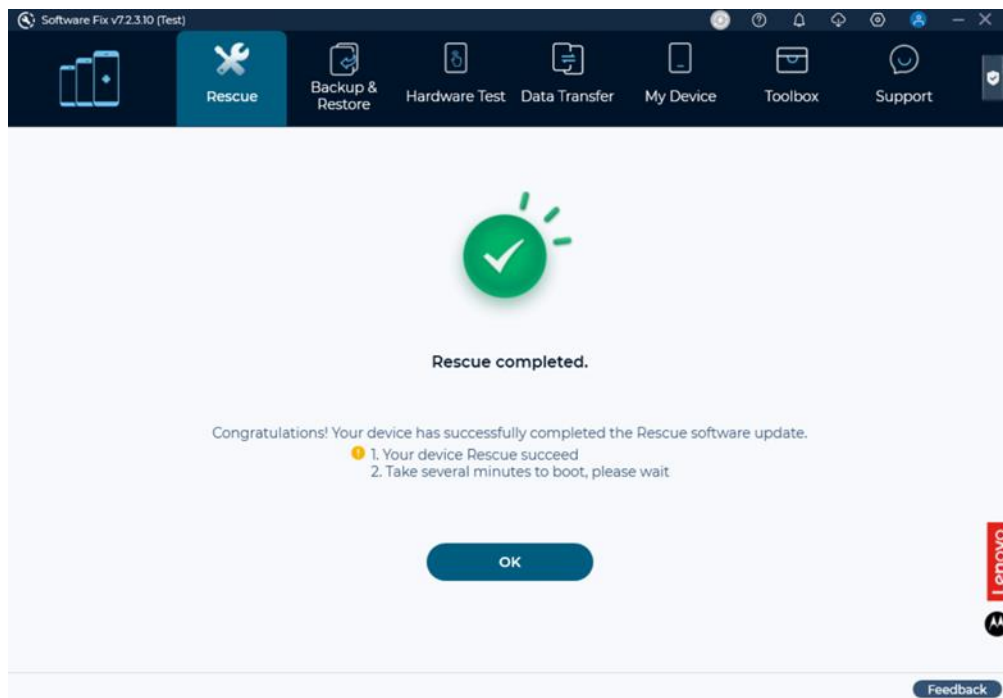


If you have successfully backed up the files within 24 hours, click the OK button on the Flashing Finish screen, and the Restore Files prompt box will pop up.

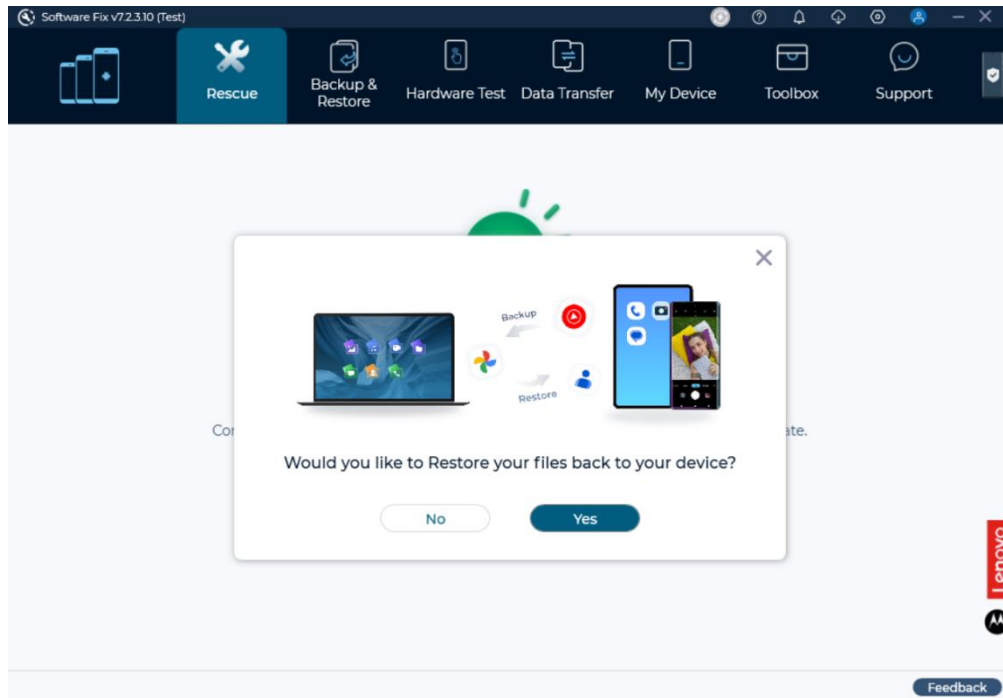


Click the Yes button in the restore pop-up window to switch to the backup and restore page to restore the backed-up files.

Manual selection rescue

Click “Tablet” button, it will show the match type to select.

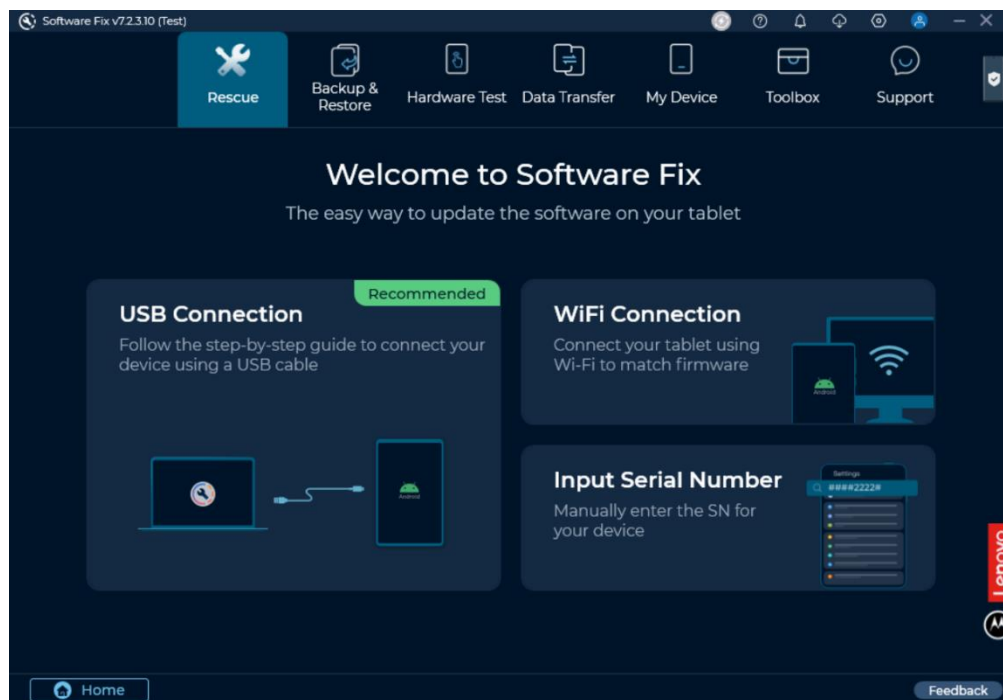

Click 'Input Serial Number' and then click 'How to find SN?' → 'Manual Selection', it will enter tablet manual selection page.

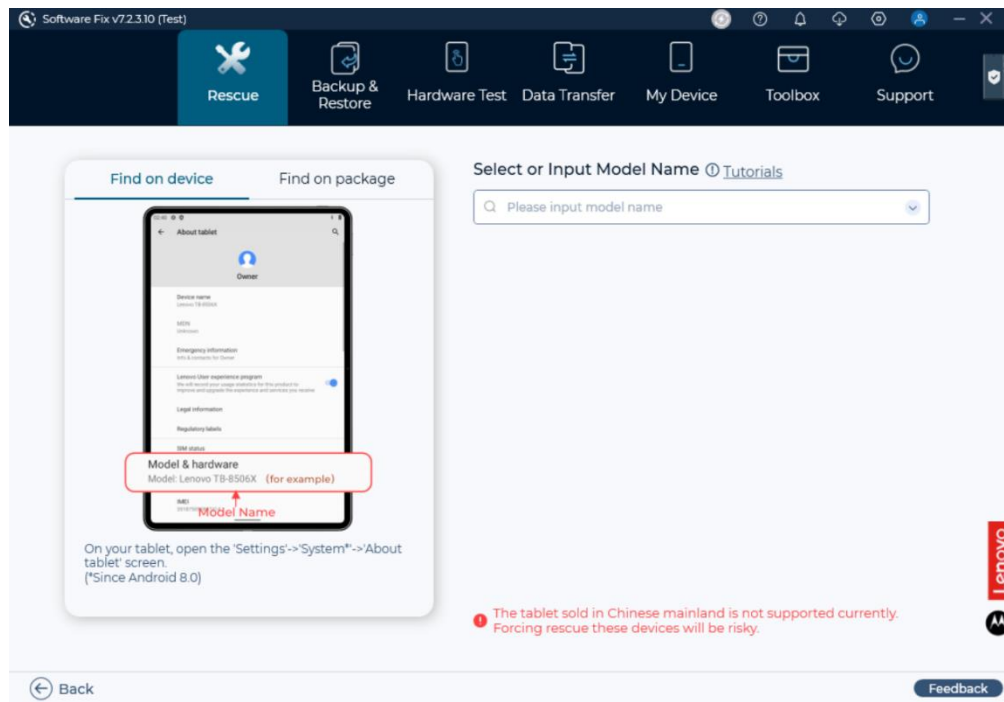


The rescue step is similar with the manual selection rescue of phone rescue. The specific content is in 5.1.1.3.


Smart Device Rescue

SN matching Rescue


Click on the "Smart Device" button to access the SN detection page. Then, enter the serial number of the device you wish to rescue into the input box.

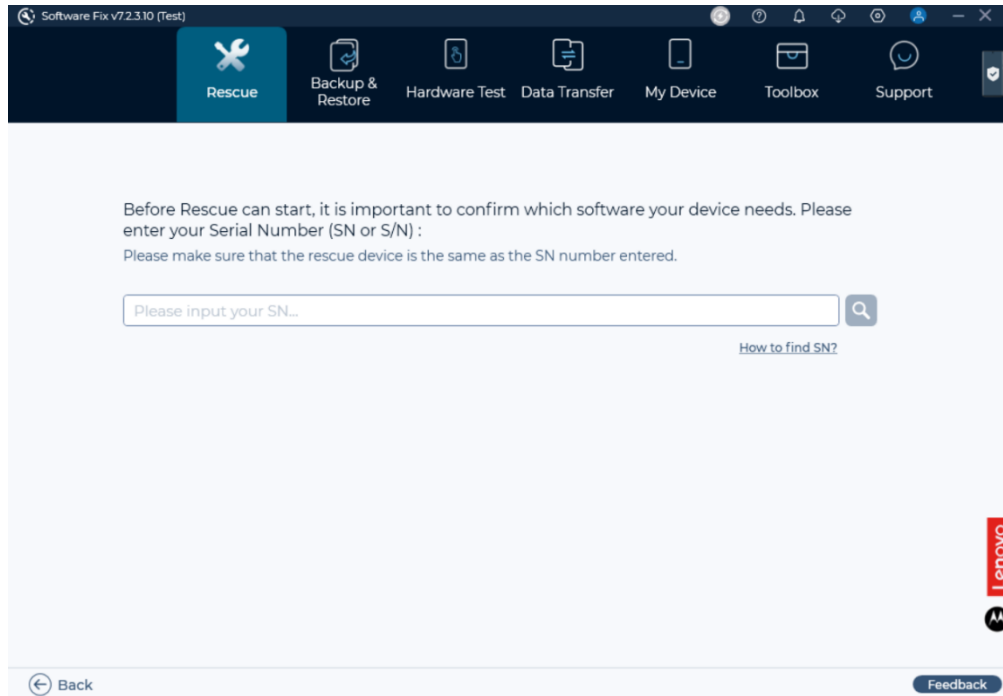


Click  to search, it will show the result of matching firmware.

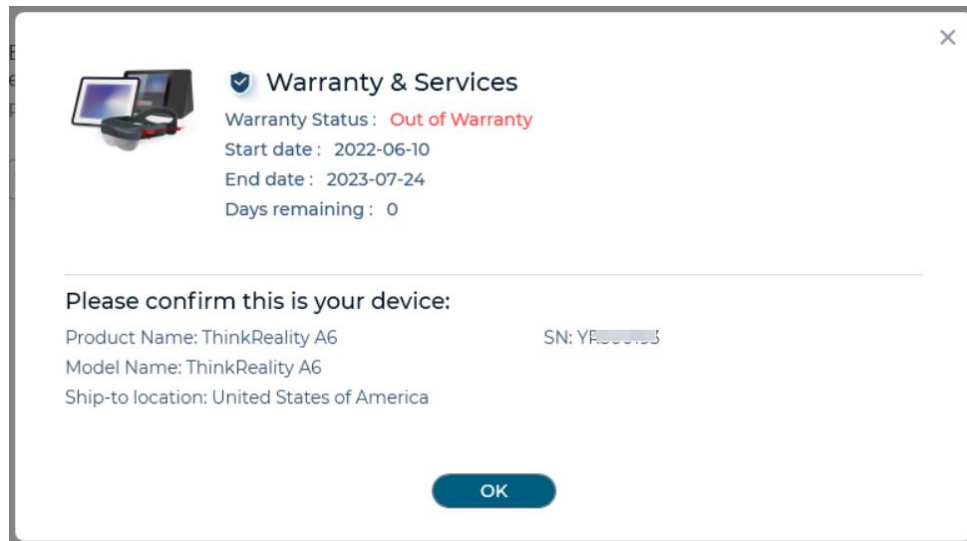


Click “OK” will enter the rescue page, click “Download” button to download the firmware.

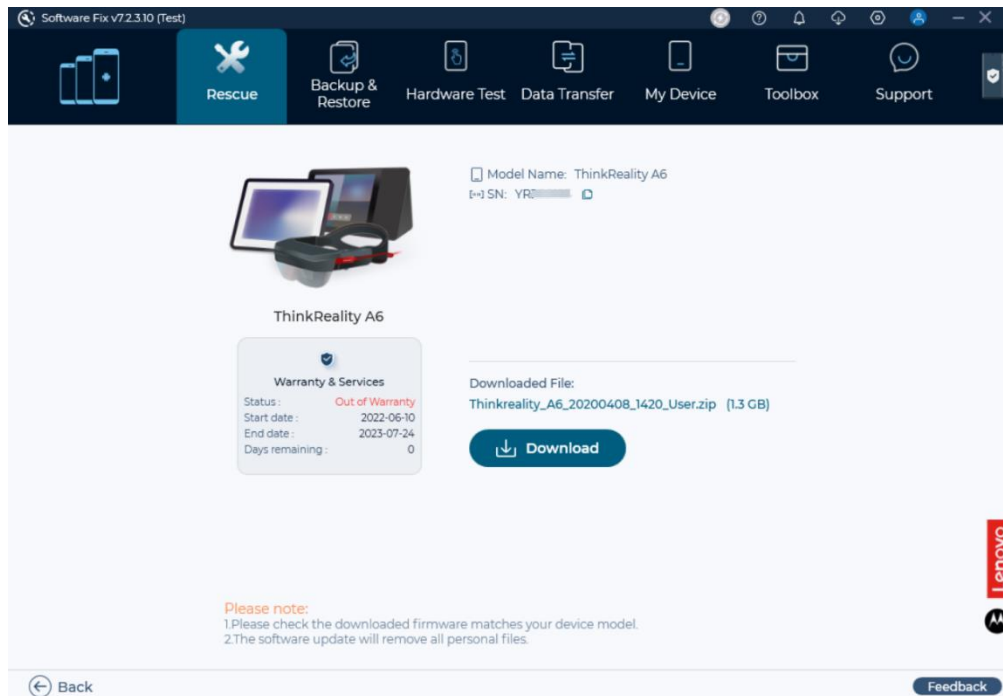


Downloading the firmware...

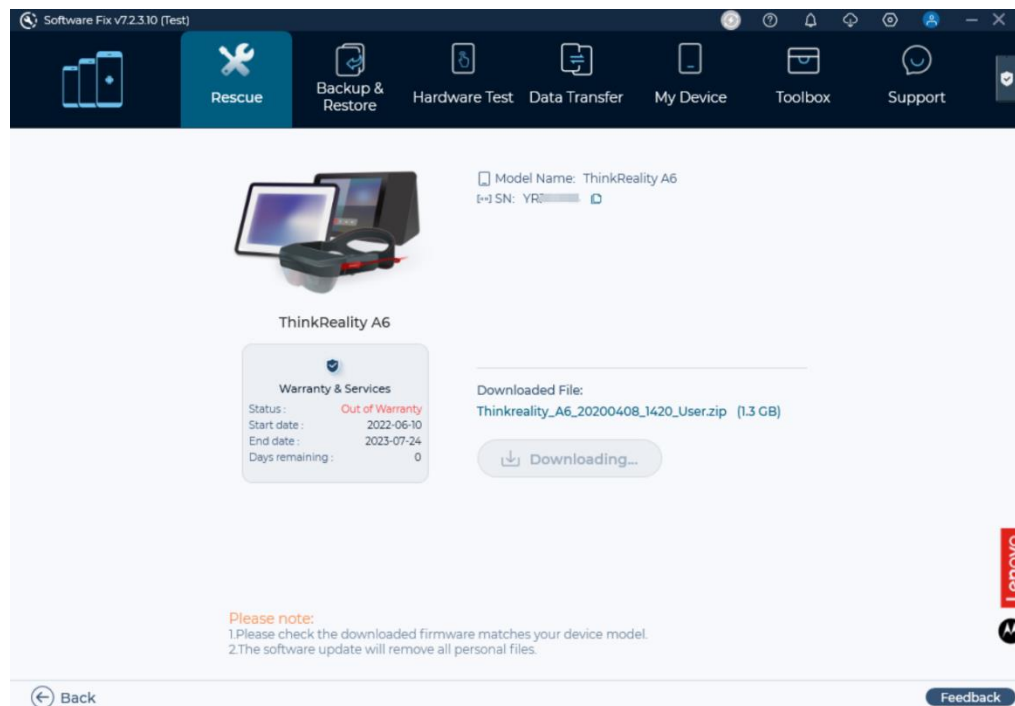


When firmware downloaded, the “Rescue” button will be displayed.

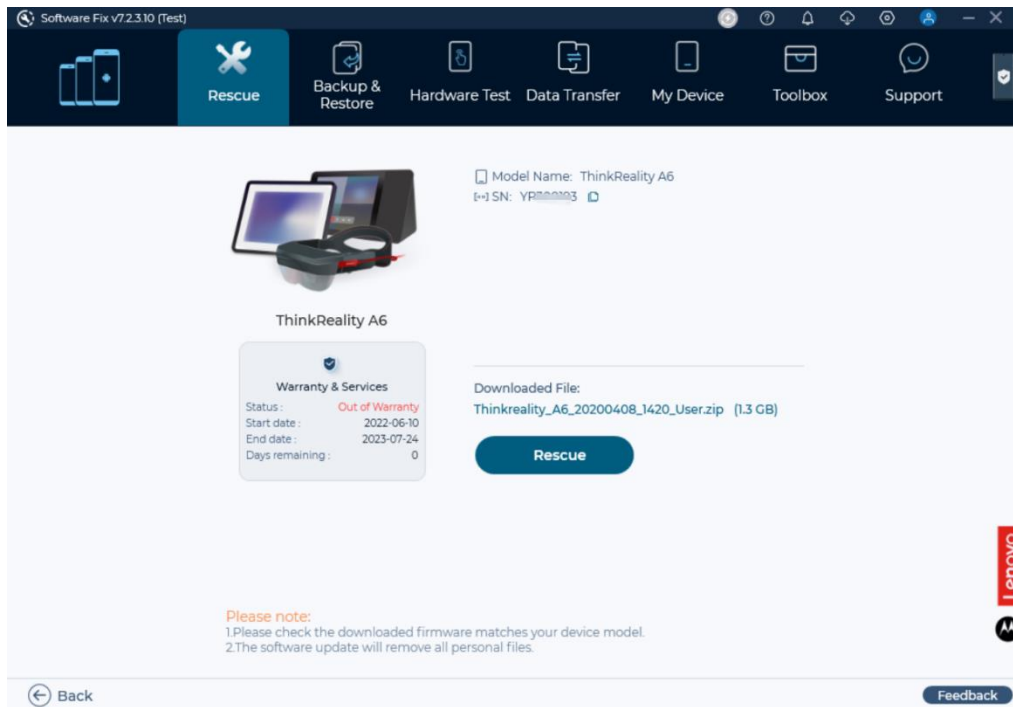

Click the “Rescue” button, it will begin to rescue. The progress bar will appear.

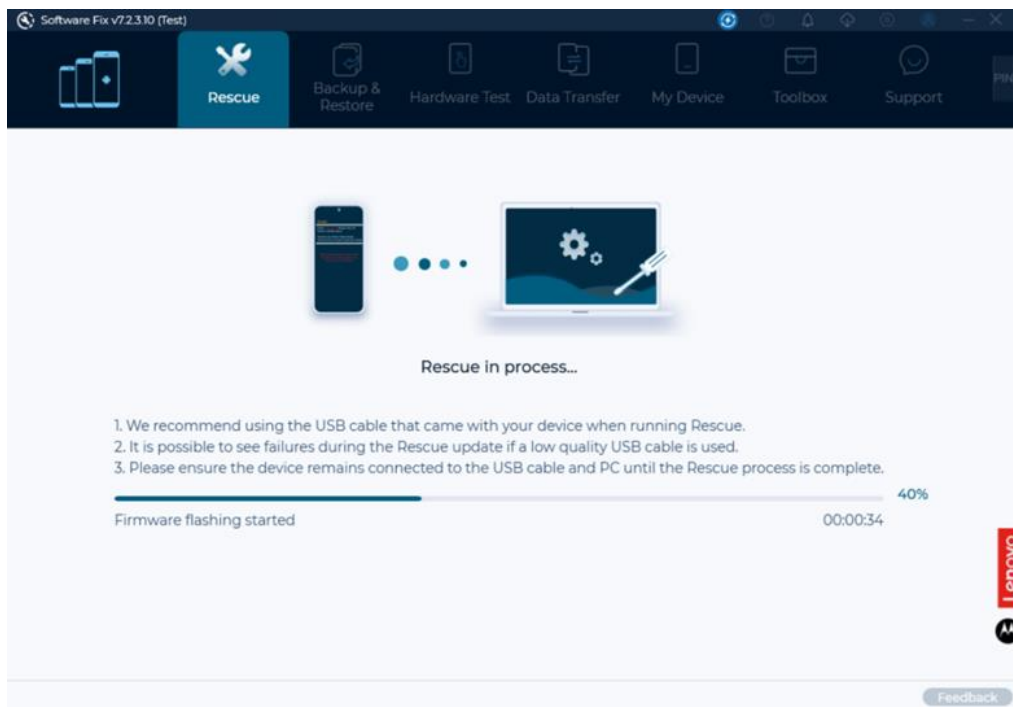


Once the rescue is completed, the following pop-up box will appear.

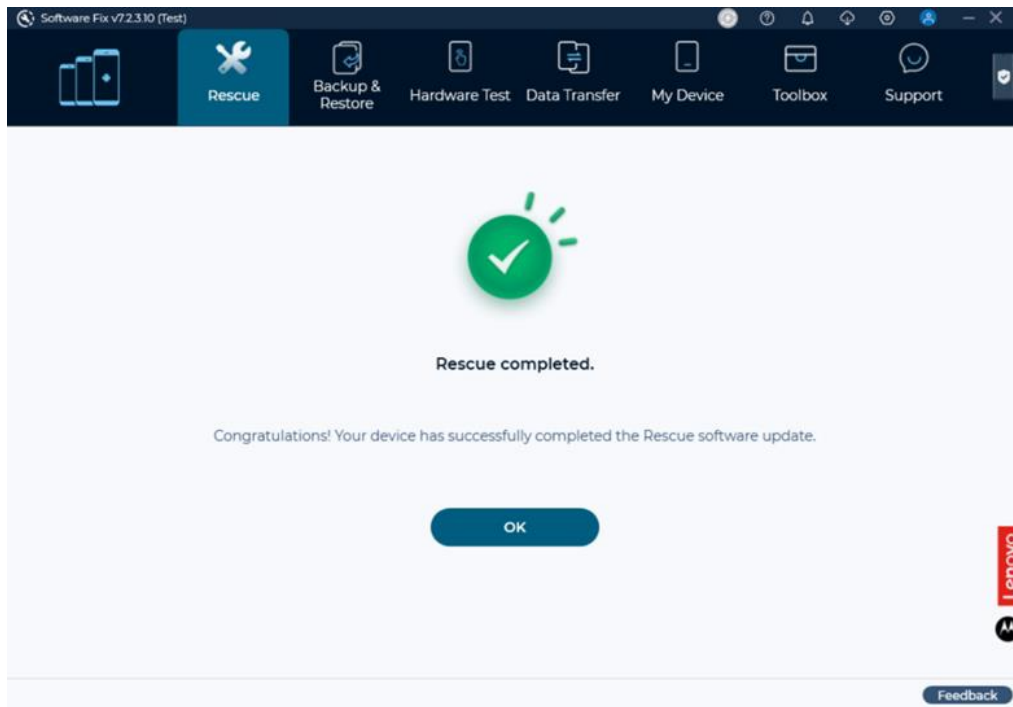

Manual selection rescue


Click “Smart Device” button, it will show the SN detection page. Click “How to find SN?” → “Manual Selection”, it will enter smart device manual selection page.

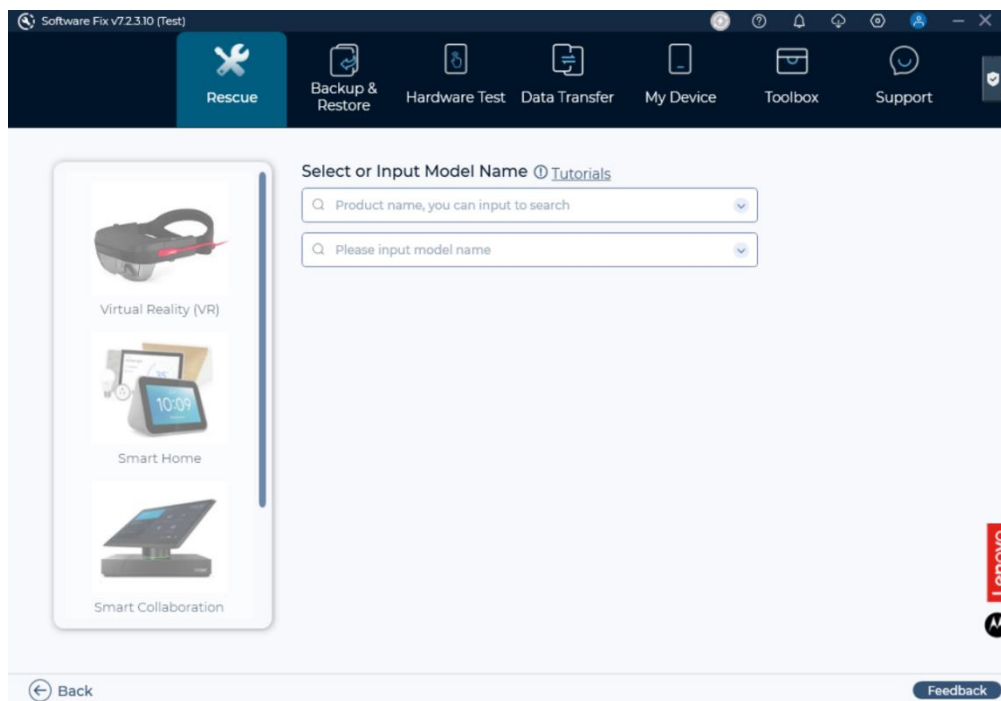

The rescue step is similar to the manual selection rescue feature found in phone rescue software. To select a device, simply click on its corresponding icon.


Moto Care

When entering the IMEI on the rescue page, the system will search for warranty information and match it with the ROM. If the warranty status is 'out of warranty', the client will be directed to the Moto shop at the bottom banner.

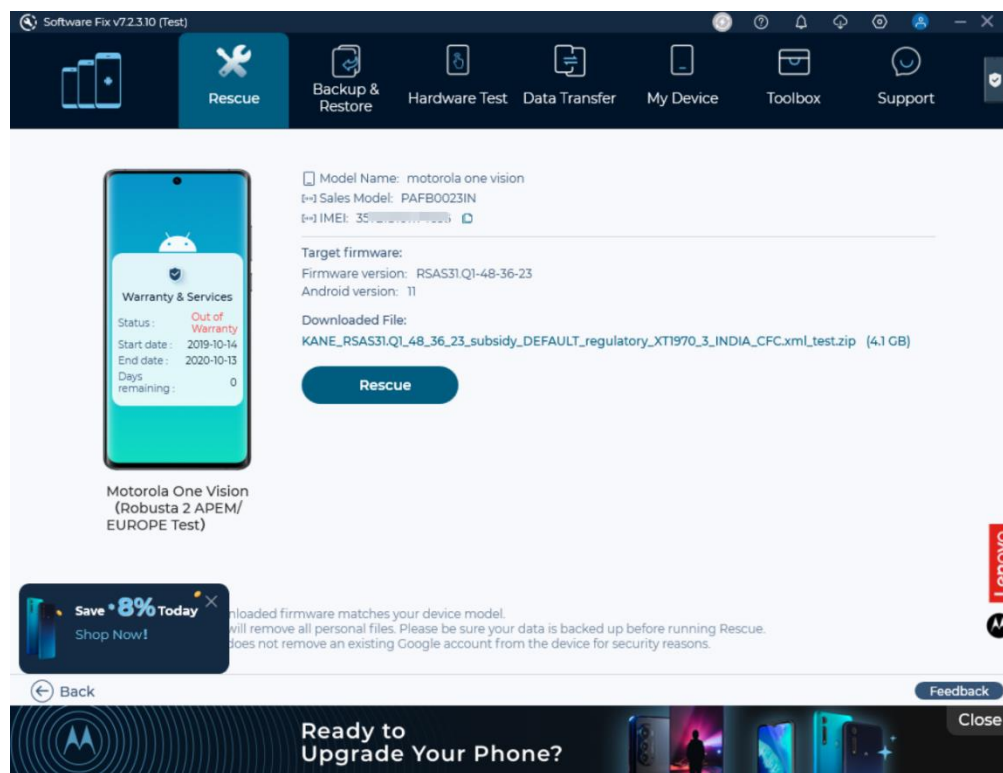

By clicking on the banner at the bottom of the client, you will be directed to the Moto shop on the web.


If the warranty status of the IMEI is 'in warranty' and the device has never been enrolled in Moto Care, the client will display the Moto Care at the bottom banner.

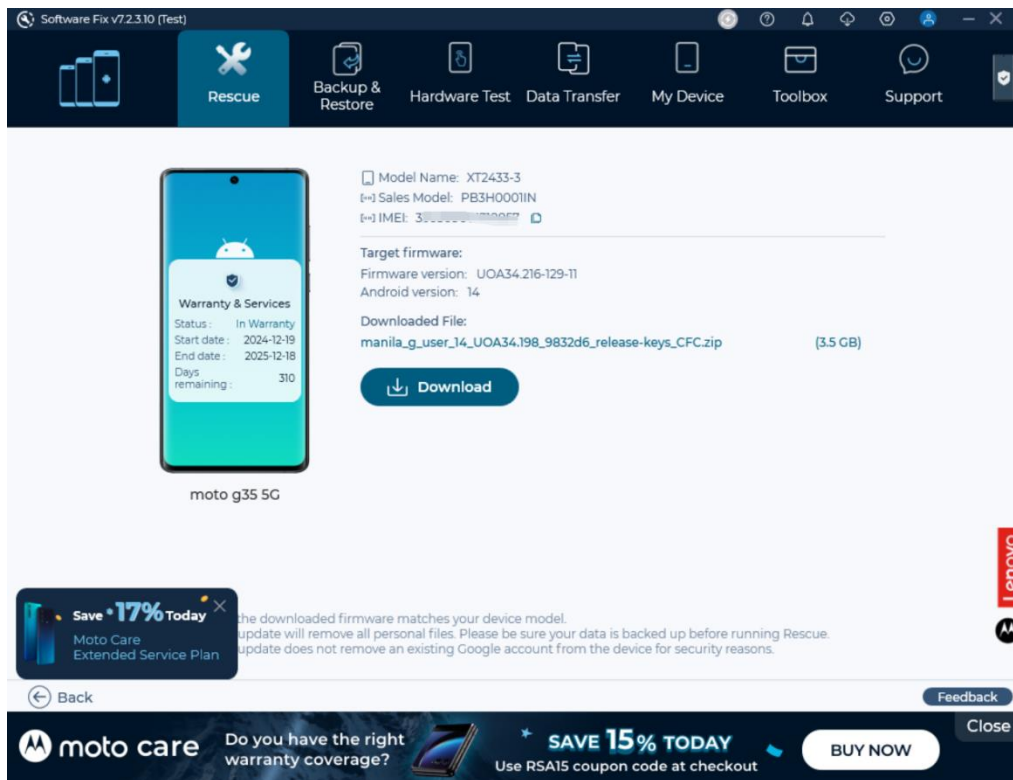


By clicking on the banner at the bottom of the client, you will be directed to Moto Care on the web.

Backup & Restore

Connect one device to Client by USB cable.

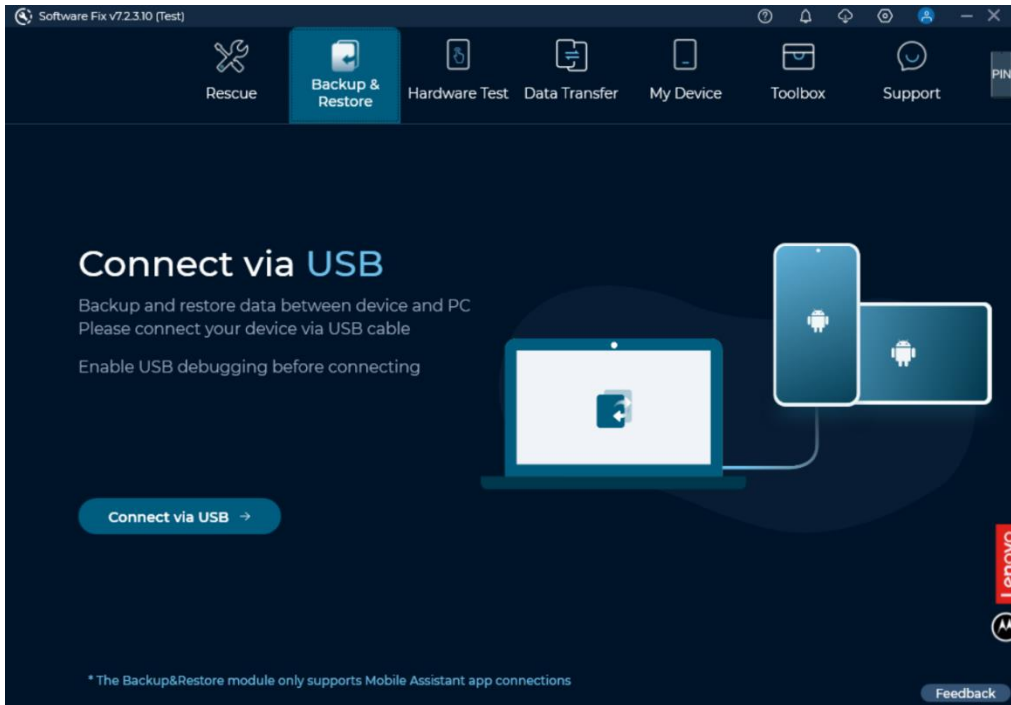

Backup

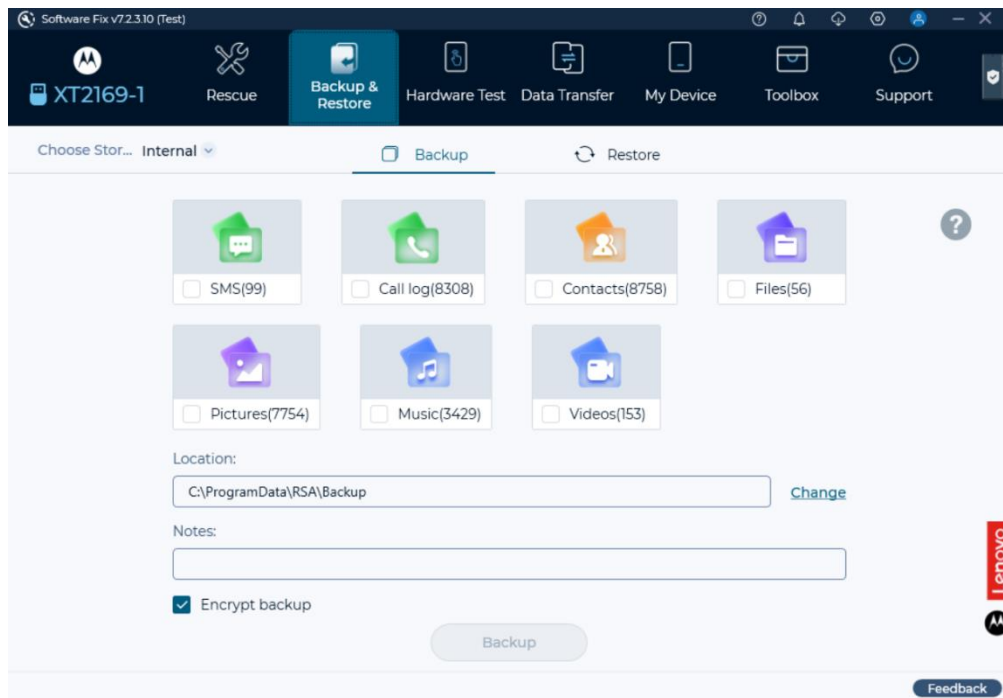

Click the 'Backup' icon and select Contacts, Pictures, Music, Videos, Files or SMS icon, and then click Backup button to backup.

Click Change icon to change the save path for backup file.


Click Open icon to enter the save path.

Check “Encrypt backup” option, you can set the backup file’s password.

Notice: If connect the device to client via Device Help, it does not support the Files and SMS backup. And it won’t show the ‘Choose Storage’ button.

Restore

To restore your backed up data, click on the 'Restore' icon and you will be directed to the Restore page. The page will display the Model Name, Size, Backup date, and Notes of your backup file. From there, you can select the desired file and start the restoration process.

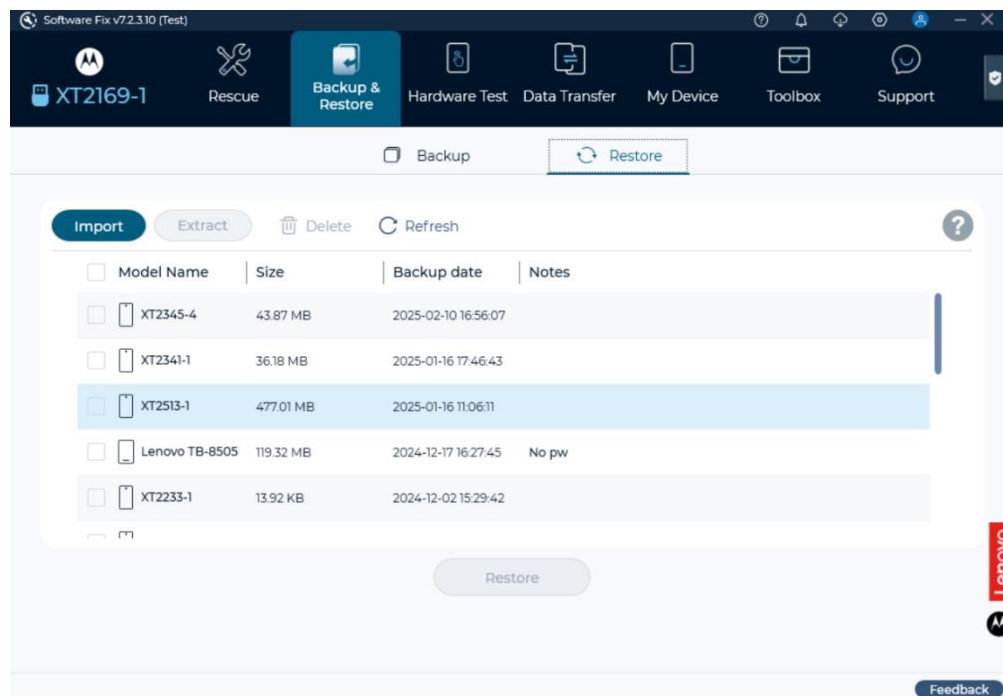


Click “Import” icon to import backup file.

Select backup file and click “Extract” icon to extract the backup file, and then import them one by one.


Select backup file and click “Delete” icon to delete the backup file.

Click “Model name”, “Size”, “Backup date” or “Notes” to sort by backup file.

Select a backup file, then click “Restore” button to enter detail restore page. And then select the needed restore item and click “Continue” to restore.

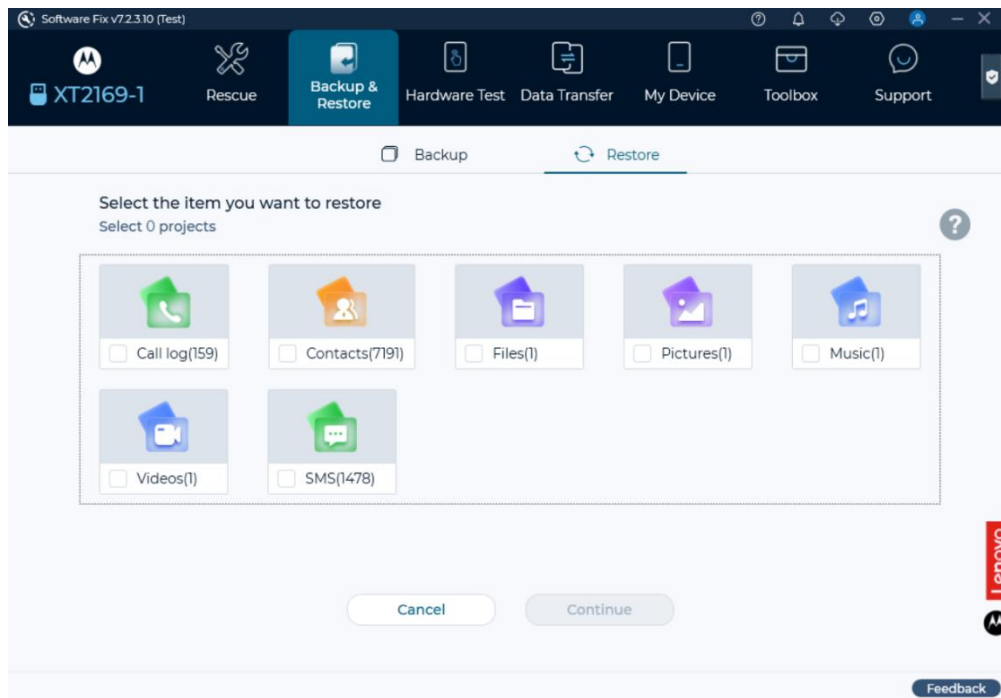


Restore completed, the following page will appear:

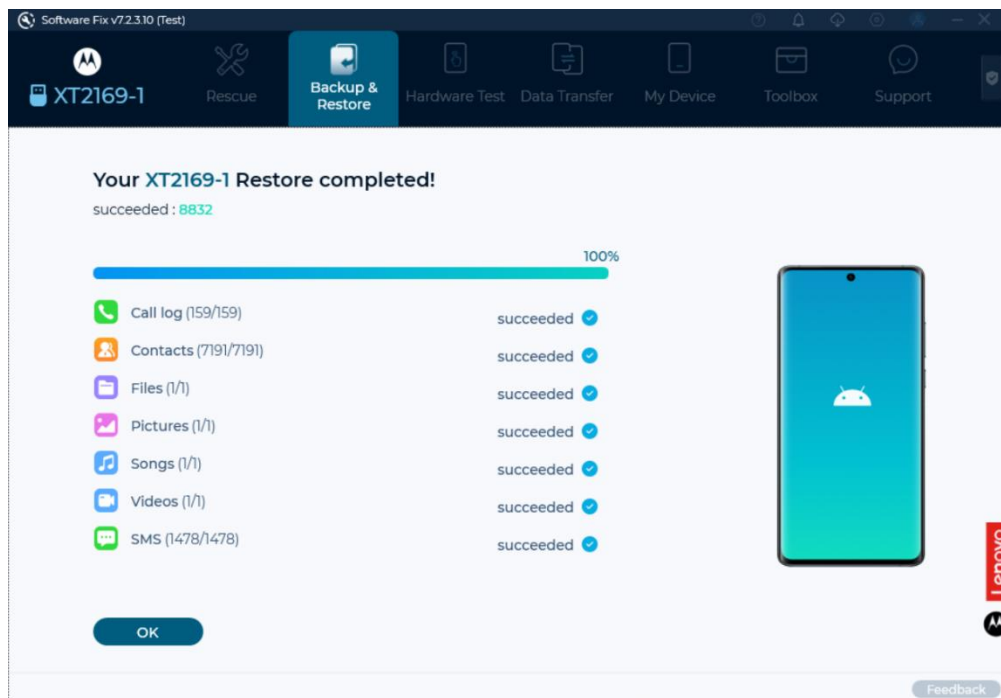


My Device

The "My Device" module is a tool designed to help users manage the media content on their mobile devices, including pictures, videos, songs, and contacts. In order to use this feature, the device must be connected either via USB cable or Wi-Fi.

Click on the "My Device" icon to launch the plugin and get started.

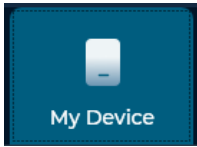


Home

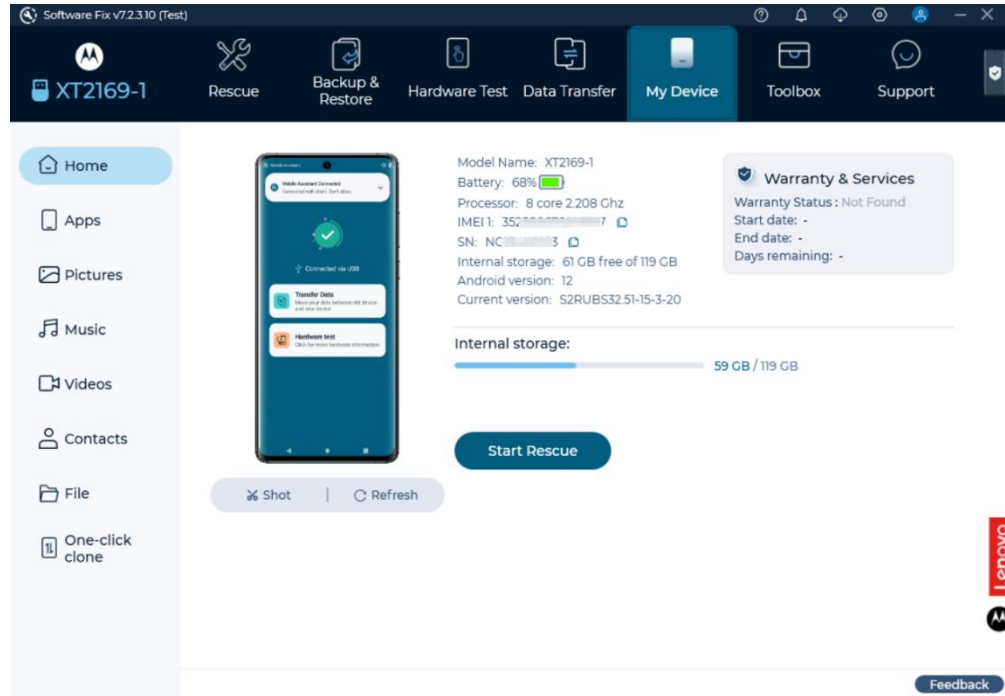

- Device info: Display the devices information including model name, battery power, IMEI, SN, Internal storage capacity, external storage capacity, Android Version and Current Version.
- Shot: Shot the device's picture.
- Refresh: Refresh and display current device's picture.
- Start Rescue: Go to Rescue module.
- Warranty & Service: If the connected device is a mobile phone, search for warranty information through IMEI, otherwise search for warranty information through SN.

Android App Management

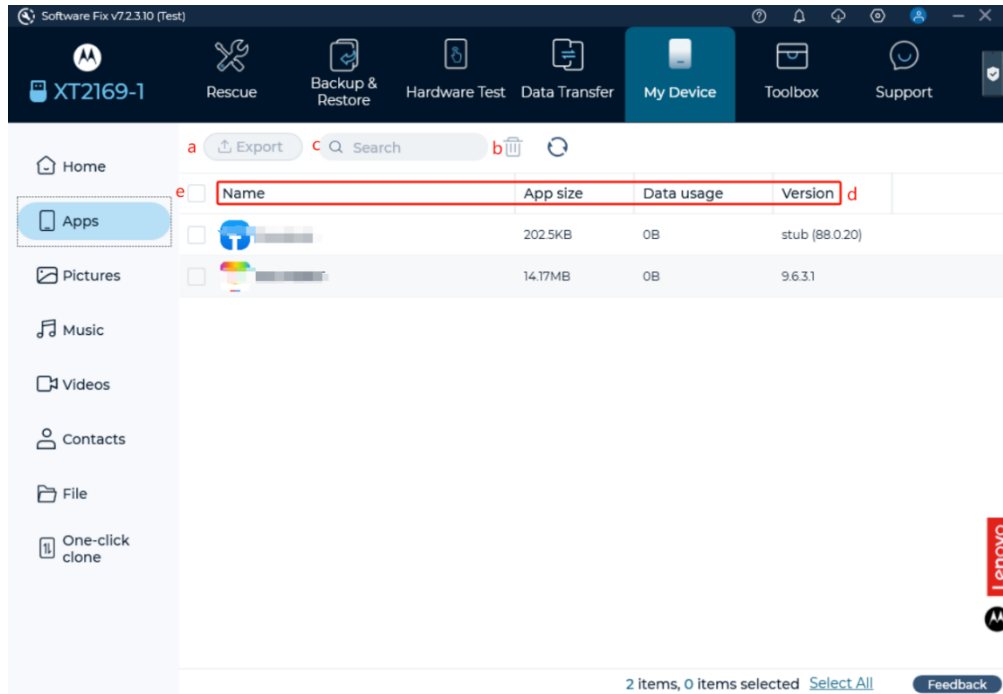


- Export:** Select an App, then click “Export” and select a PC path. The app’s APK file will be exported to the specified path.
- Uninstall:** Select an app, and then click “Uninstall” to uninstall it. Or click the Uninstall button behind the application.
- Search:** Input keywords to search for the name of an App from the list.
- Sort:** App supports sort function. You can sort them by “Name”, “Size”, “Data size” or “Version”.
- Select All:** You can use it to select all Android Apps from the list.


Pictures Management

Click the "Pictures" icon to access the pictures management page, which includes all albums and displays all the pictures stored on your device.

The Album page lists all the folders that contain pictures on your device, each represented by a different icon. When you select a folder, you can view all the pictures contained within it. You can also use the search bar at the top of the page to quickly locate specific pictures or folders.:

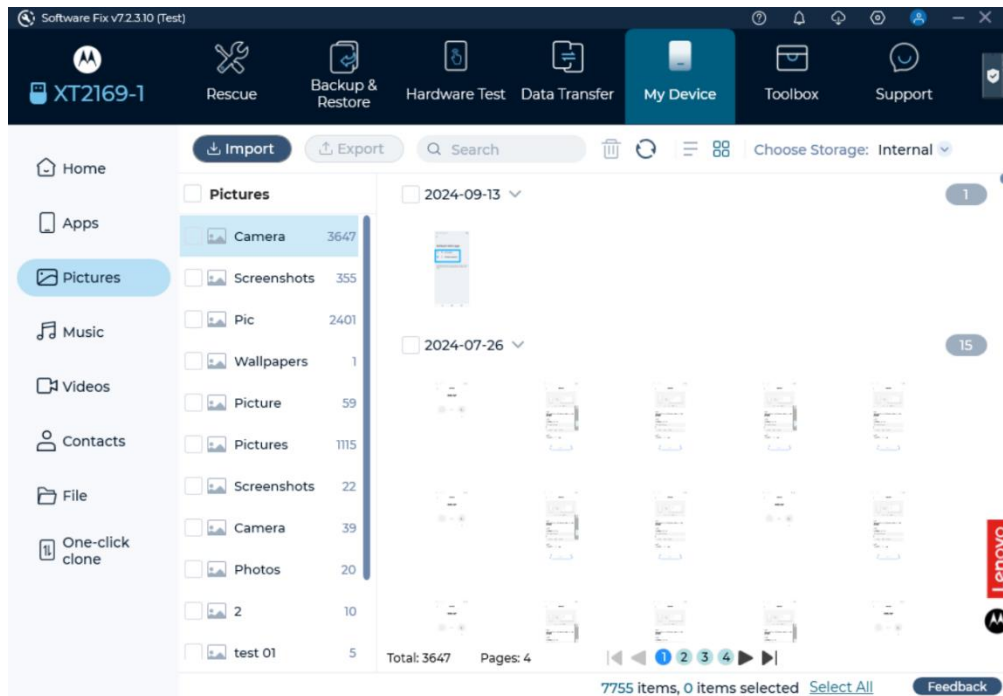


Double click a folder, the picture management page will appear:

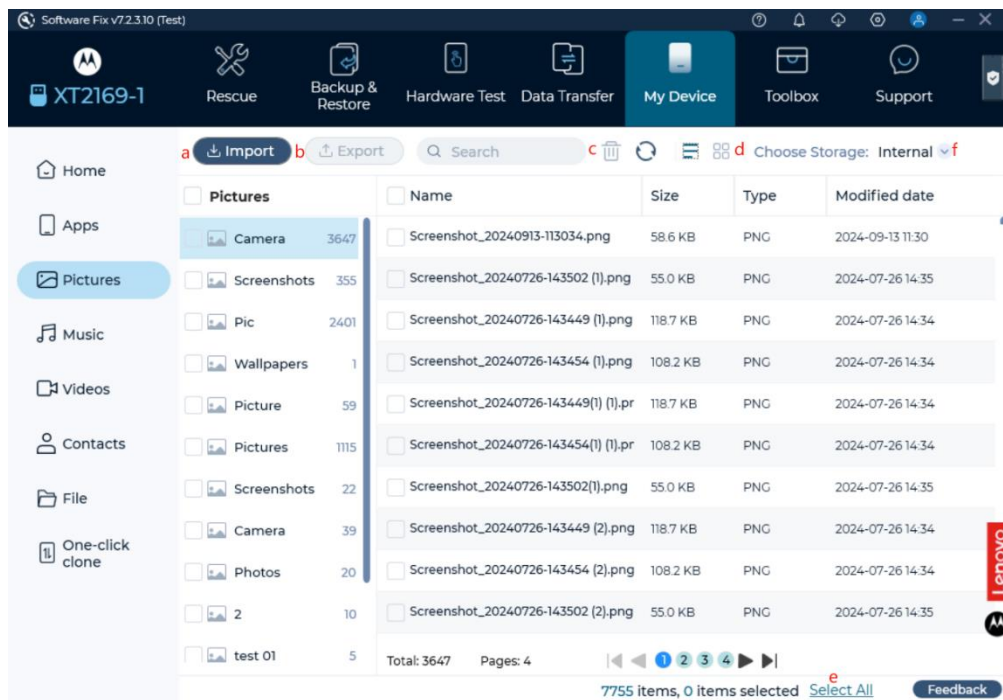


- Import:** Import pictures from a specified PC path by click “Import” button.
- Export:** Select picture(s) from the list, then click “Export” and select a PC path. The selected picture(s) will be exported to the specified path.
- Delete:** There are three methods to delete picture(s) from device.

- Select picture(s), then click “Delete” button to delete selected pictures.

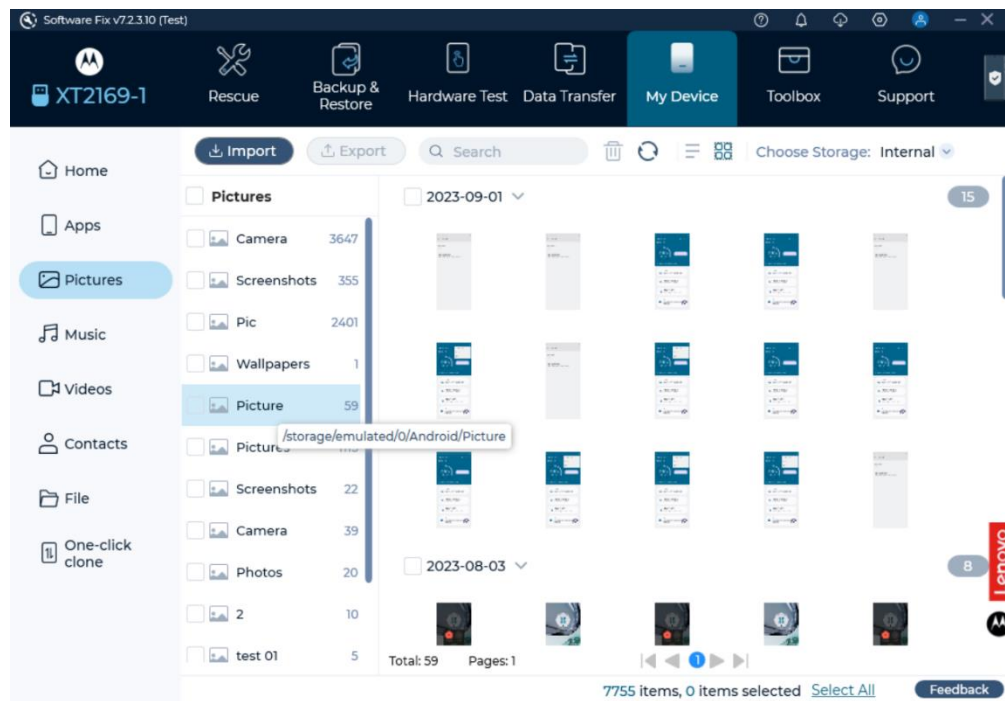


- Double-click one picture, the original image will display. And then click the “Delete” icon at bottom.

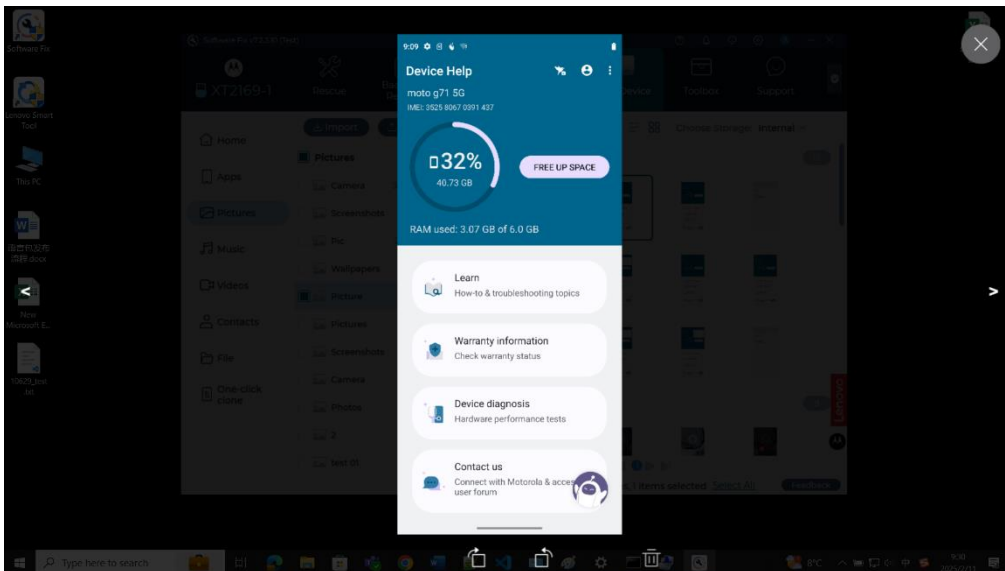

- View:** Pictures support two view modes: Time and Grid. You can click icon to switch to list mode, click icon to switch to grid mode. You also can double-click the picture to view the original picture. And then click the rotate icon to rotate the picture. Click the “<” or “>” to view previous or next picture.
- Select All:** You can use it to select all pictures from the list.
- When you connect the device to the client with MA, you can choose the file storage location as SD card or internal.

Music Management


Click “Music” icon to access the Music management page.

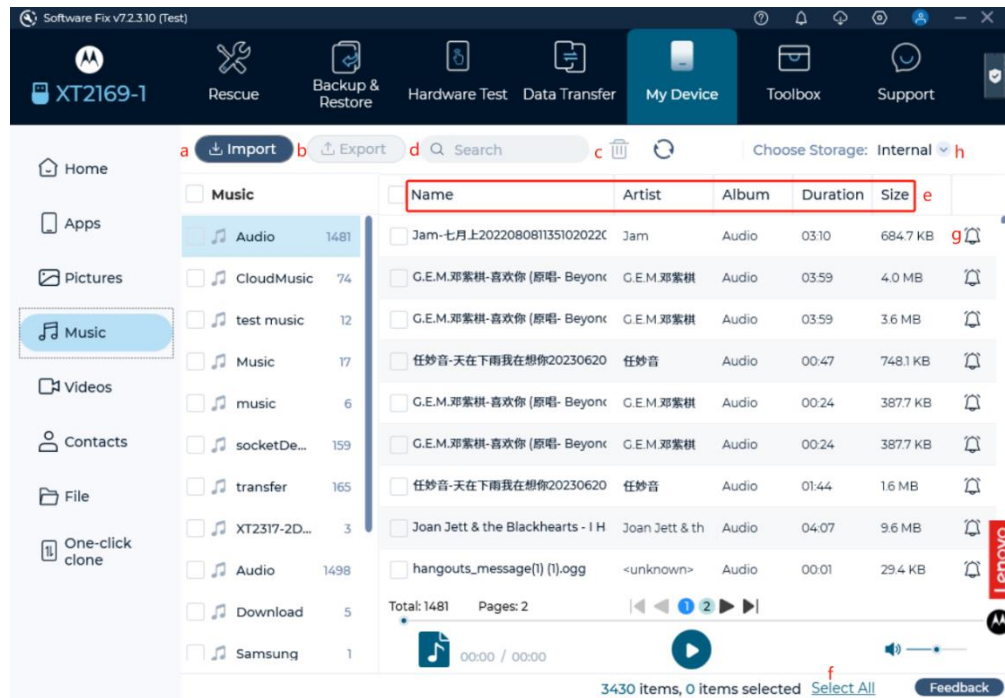

- a) **Import:** Import music from a specified PC path by click “Import” button.
- b) **Export:** Select music, and then click “Export” button and select a PC path. The selected music will be exported to the specified path.
- c) **Delete:** Select music, then click “Delete” button to delete selected one(s).
- d) **Search:** Input keywords to search for the name of music from the list.
- e) **Sort:** You can sort the music list by clicking on the column names: “Name”, “Artist”, “Album”, “Duration”, “Size” or “Modified date”.
- f) **Select All:** You can use it to select all music from the list.
- g) **Set as Ringtone:** Click “Set as Ringtone” button to set the music as “Call”, “Notification” or “Alarm” ringtone.
- h) When you connect the device to the client with MA, you can choose the file storage location as SD card or internal.
- i) **Play:** Double-click music to play music and drag progress bar to change the progress. And drag volume-progress to adjust volume. Click ◀ icon to switch to play previous music. Click ▶ icon to switch to play next song. Click ⏸ icon to stop playing music.

Videos Management


Click “Videos” icon to access the videos management page.

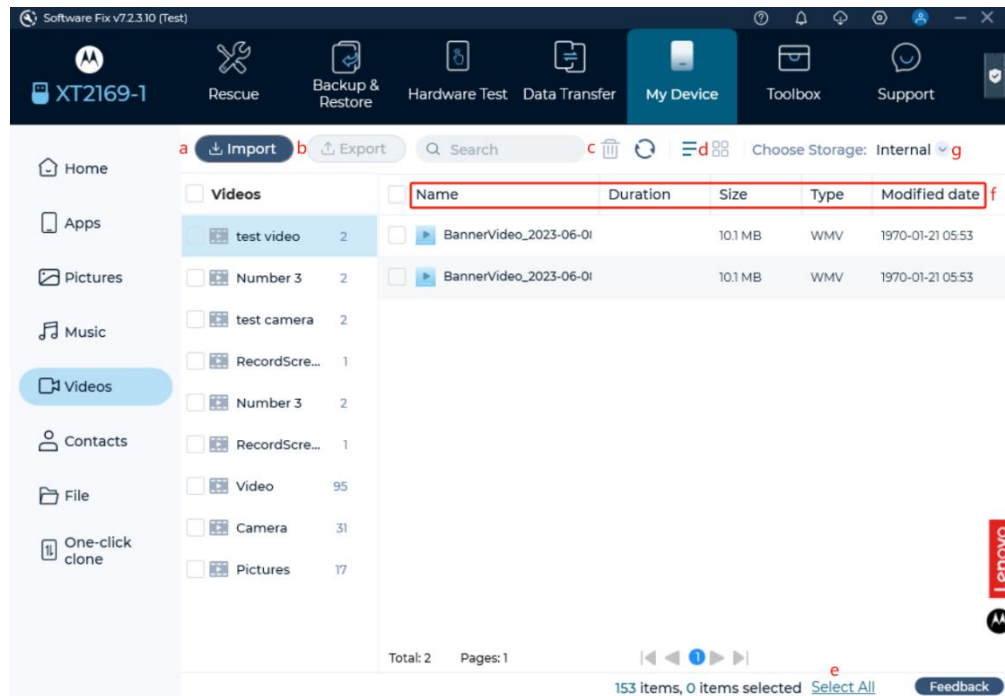

- a) **Import:** Import video file(s) from a specified PC path by click “Import” button.
- b) **Export:** Select video, and then click “Export” and select export path. The selected video will be exported to the export path.
- c) **Delete:** Select video, then click “Delete” to delete selected video.
- d) **View:** Video supports two view modes: Grid and List. Click  icon to switch to list mode, click  icon to switch to grid mode.
- e) **Select All:** Video supports select-all video function.
- f) **Sort:** Video supports sort function on list mode. You can sort them by “Name”, “Duration”, “Size”, “Type” or “Modified date”.
- g) When you connect the device to the client with MA, you can choose the file storage location as SD card or internal.

Contacts Management

Click “Contacts” icon to access the contacts management page.

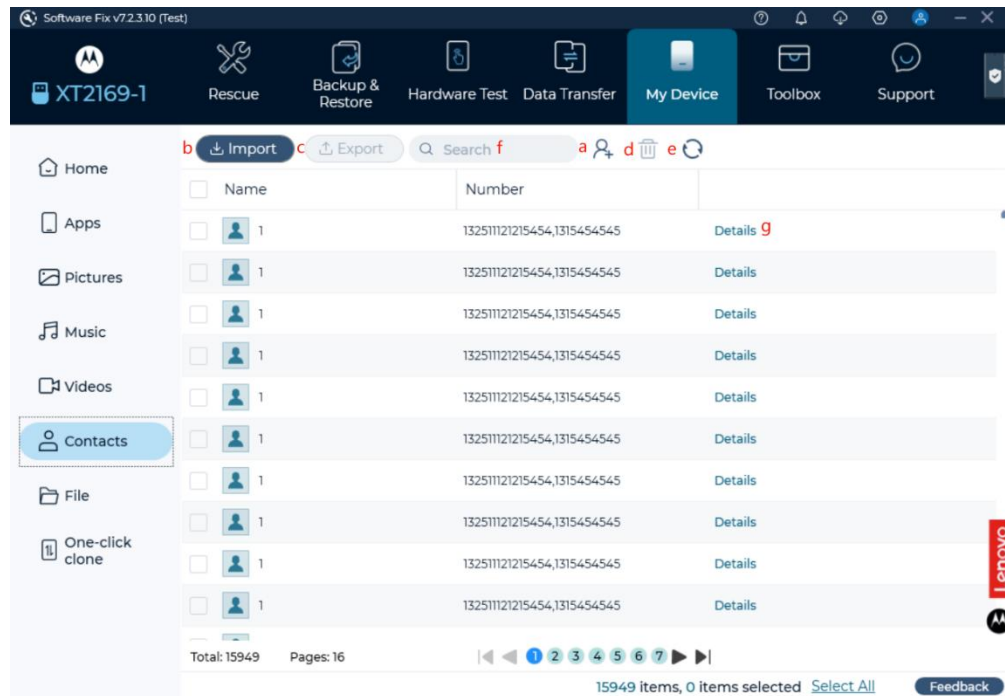


- a) **Add Contact:** Add new contact by click “Add Contact” icon.
- b) **Import:** Import contact from PC path by click “Import” icon.
- c) **Export:** Select contact, and then click “Export” and select export path. The selected video will be exported to export path.
- d) **Delete:** Select contact, then click “Delete” to delete selected contact.
- e) **Refresh:** When adding or deleting contact on Device/ Software Fix Client, click “Refresh” icon, it will display new contacts list.
- f) **Search:** Input keywords to search contact.
- g) **Details:** Click “Details” icon to show the detail information of the contact, and then click “Edit” in the popup box can change or and information for the contact.

File Management


To access the file management page, simply click on the "File" icon. This page displays the storage files on your device.

To open a folder, simply click on it. You can also use the search box at the top of the page to quickly locate a specific file or folder by typing in relevant keywords.

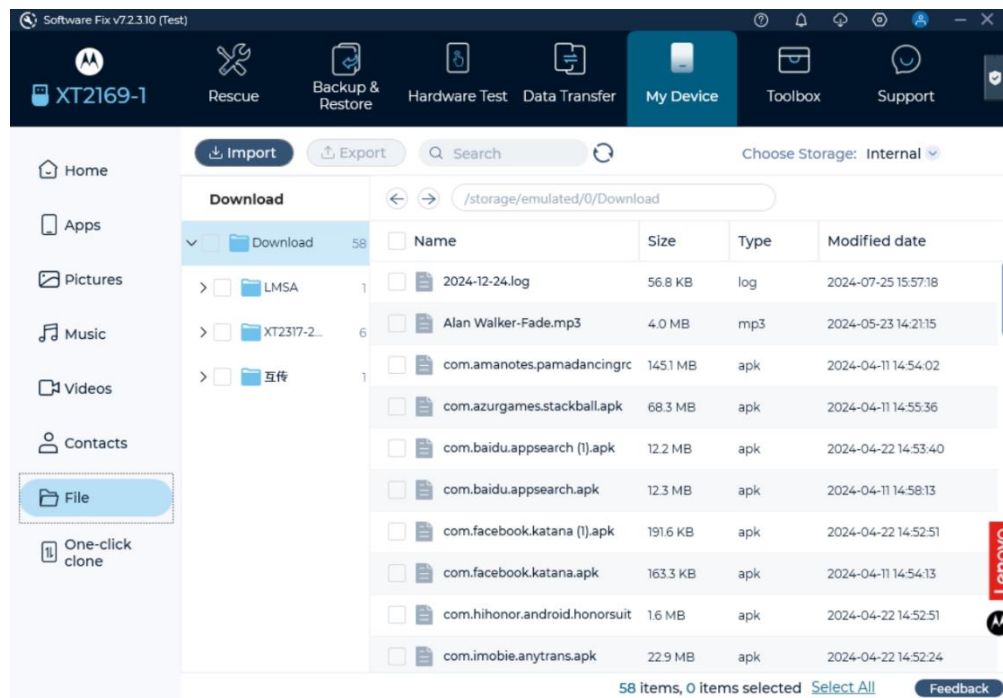


One-click Clone


Connect the two devices to the Client and click on the "One-click clone" option. This will take you to the One-click clone page, where you should select the older device as the "From" device and the new device as the "To" device.

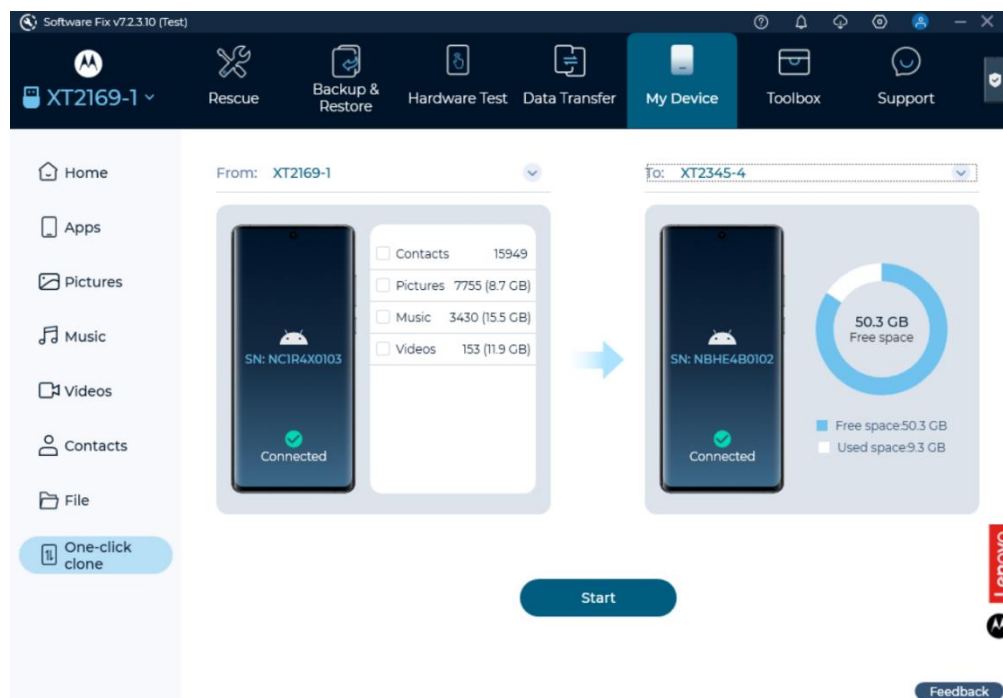

Select the backup file, then click 'Start' button, the "Transferring" page will be displayed.

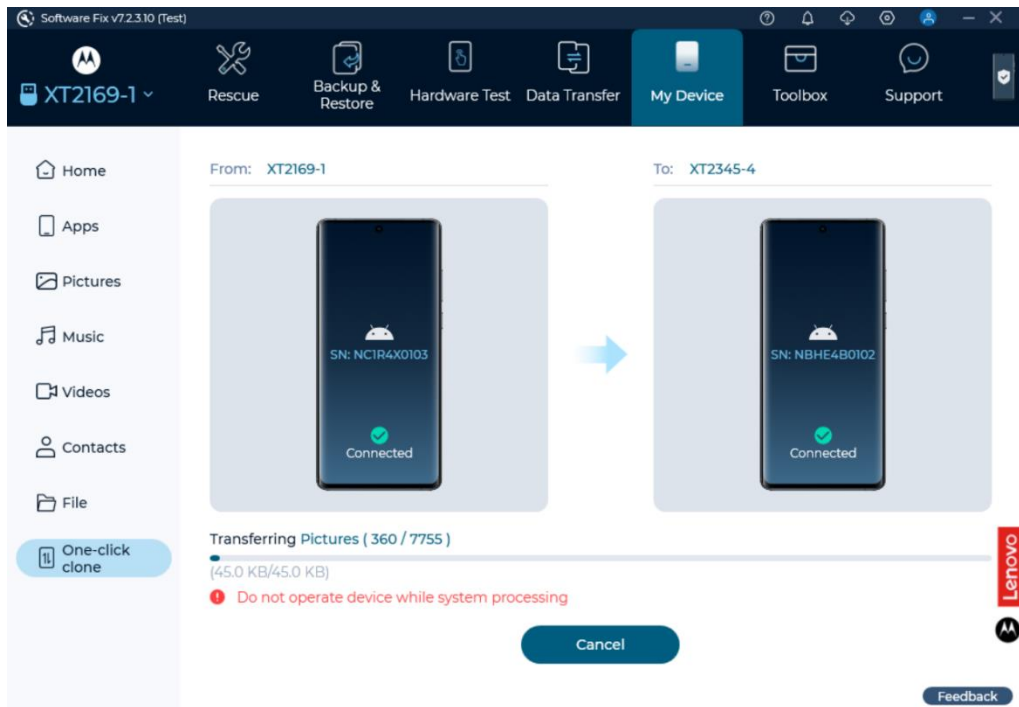


Cloning finished, and then it will enter the result page.

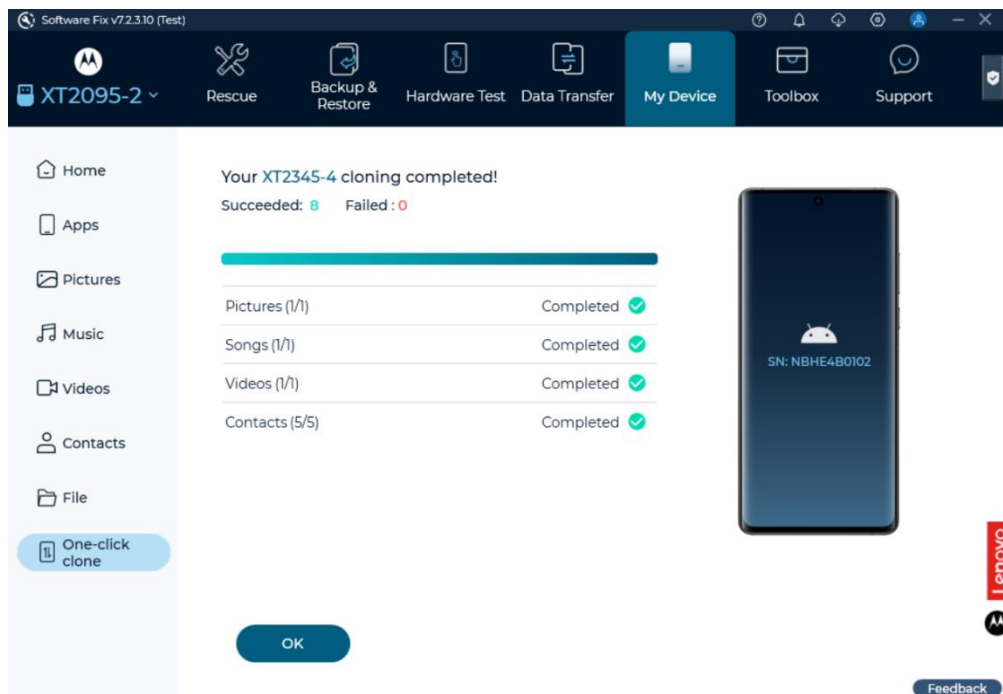


Toolbox

Click the "Toolbox" plug-in button:

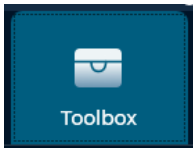


There are four functions: Clipboard, GIF Maker, Ringtone Maker and Screen Recorder.

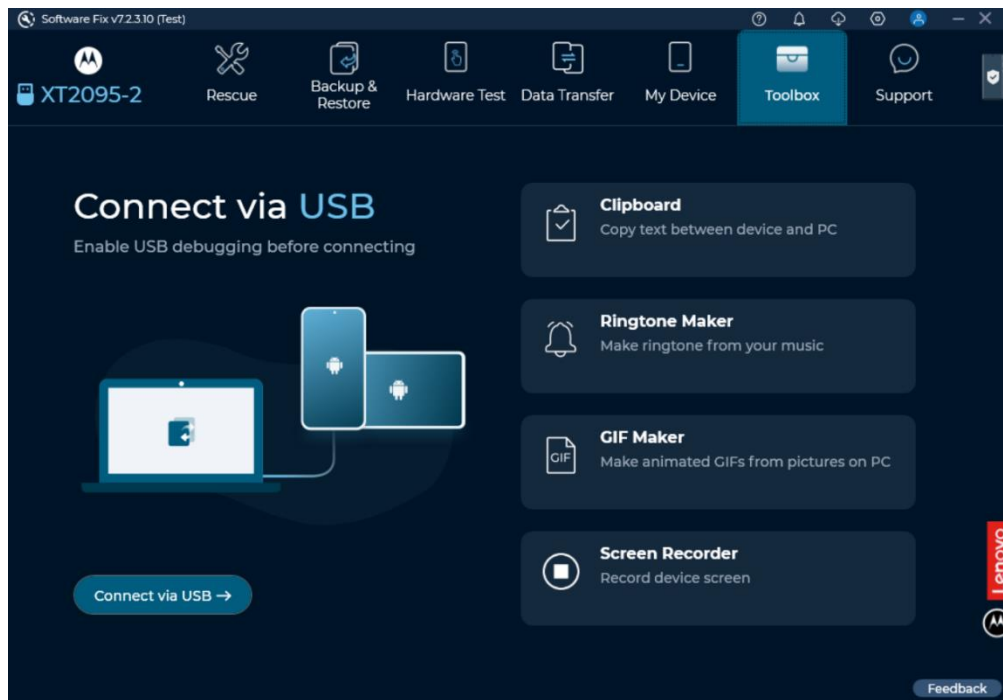

Clipboard

Click "Clipboard" to enter "Clipboard" page. Copy texts from/to device to/from PC.

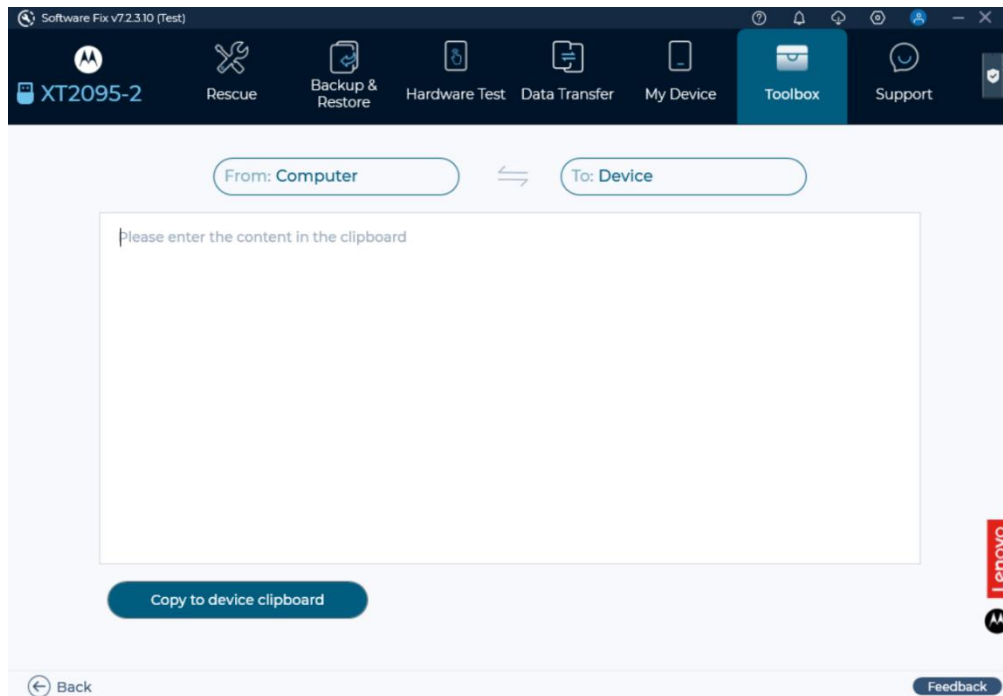


Copy to device clipboard: Enter “Clipboard” page, copy texts on PC, the texts will paste to clipboard on “Clipboard” page. And click “Copy to device clipboard”. The texts will be sent to the device’s clipboard.

Paste from device clipboard: Copy texts on device, and then click the “Paste from device clipboard”, the device’s texts will to “Clipboard” page.


GIF Maker

Click “GIF Maker” to enter “GIF Maker” page. It supports making gifs from pictures on PC.

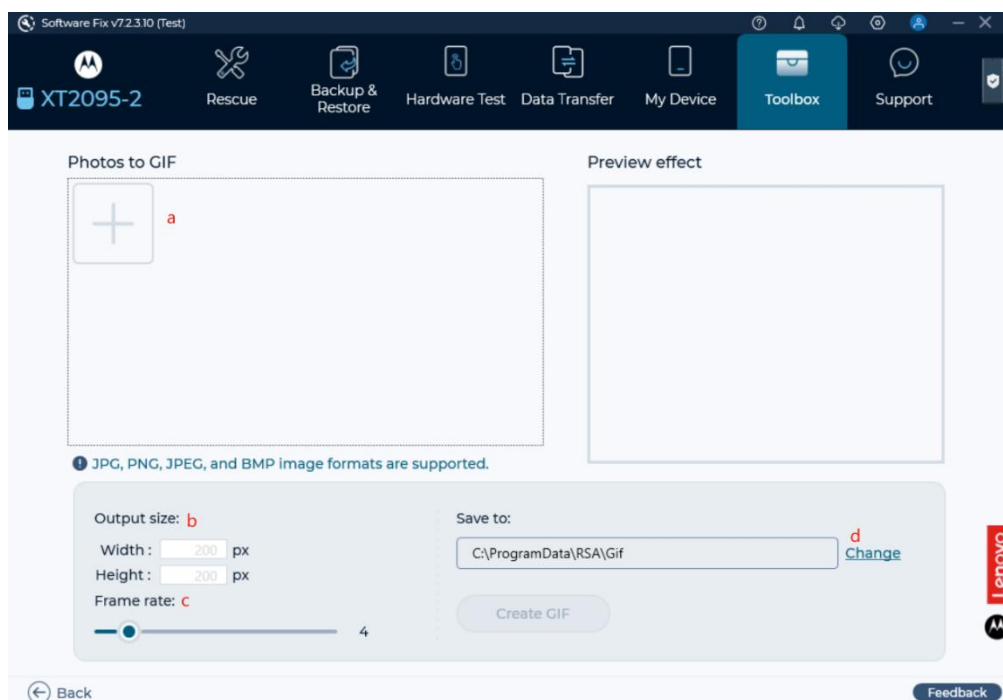


- Click “Add” to add picture.
- Modify the “Output Size” to set the gif’s size.
- Modify “Frame Rate” to set the gif’s frame rate.
- Modify the “Save to” to set the gif’s save path.

Move the mouse over the picture. It will appear the “Delete” and “Edit” icon.

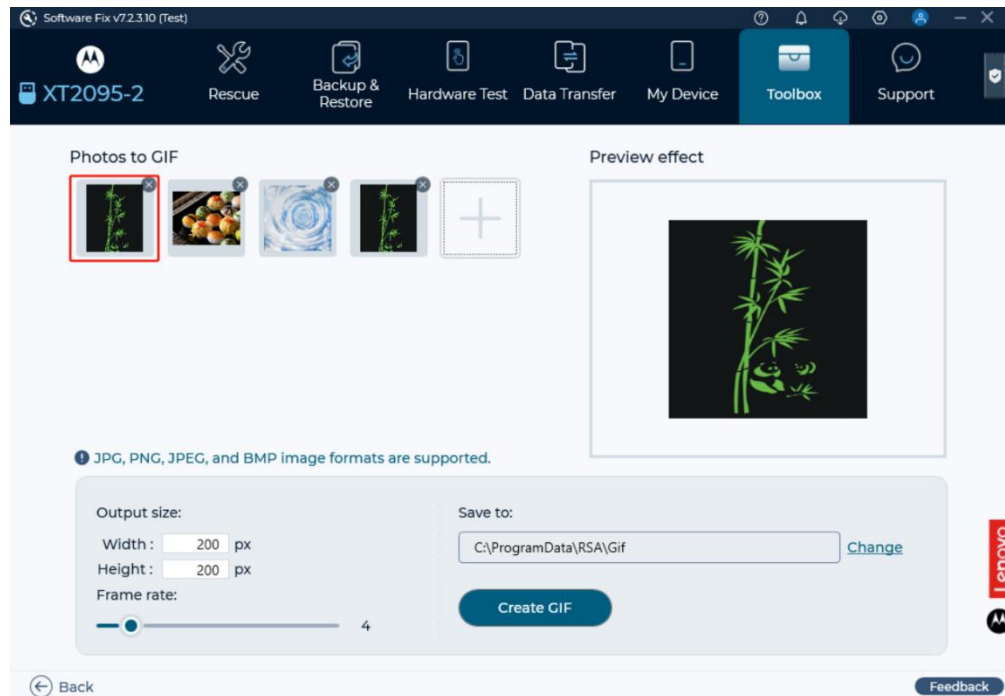


Click the “Delete” icon to delete the picture.


Click the “Edit” icon to enter Edit page. You can edit the picture and save it.

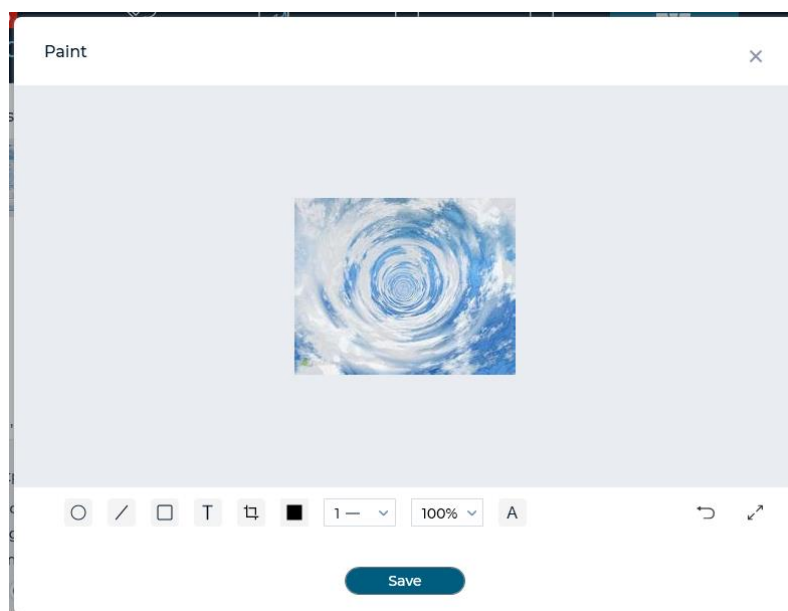

After adding the pictures, and then moving the mouse to the preview area, the play icon will appear. Click 'play' button to preview the GIF.

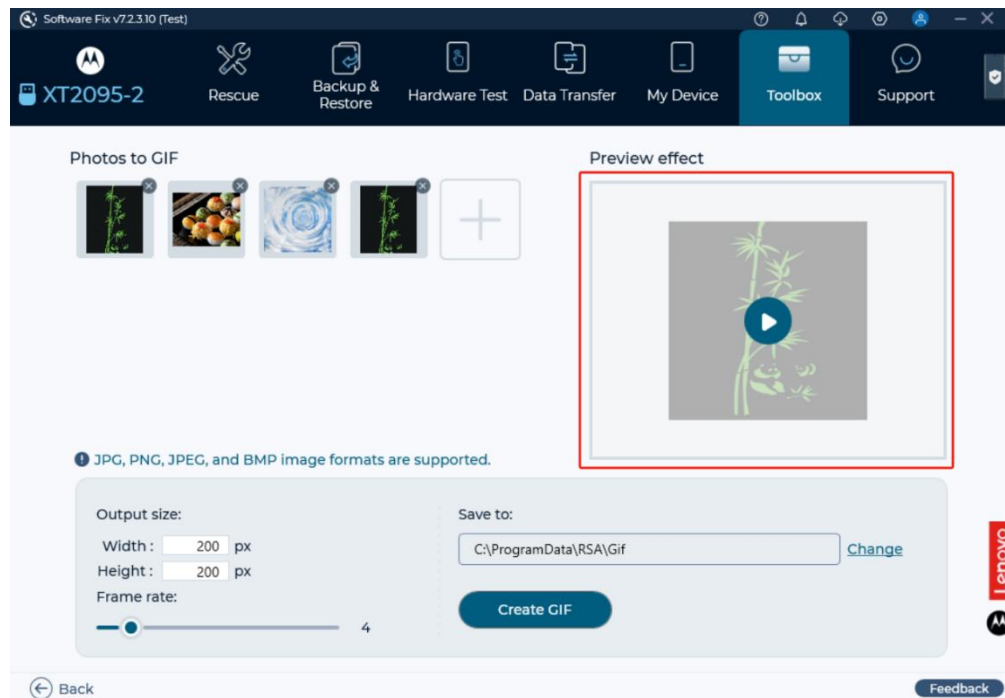


Click "Create GIF" button after adding pictures, it will be creating gif. The created gif will save to the storage path.

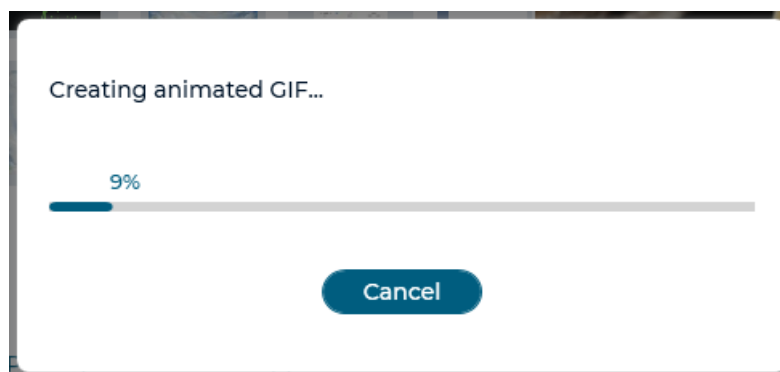


Ringtone Maker

Click "Ringtone Maker" to access "Ringtone Maker" page. It supports making ringtone from your music. If you need to make ringtone, please follow the steps as below.

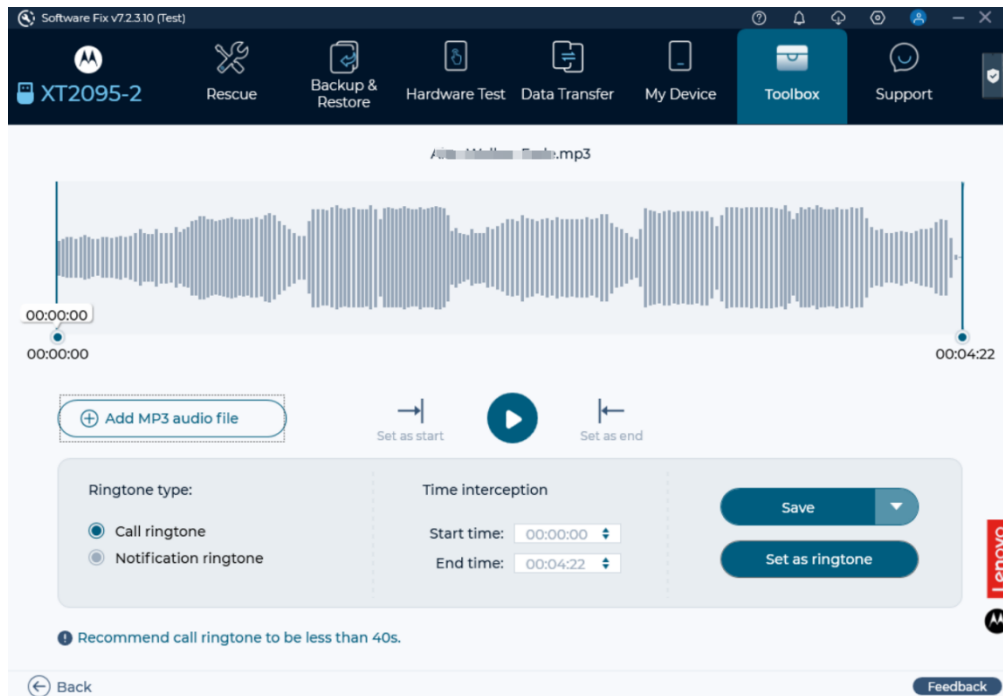


- 1) Click “Add MP3 audio file” button to select PC’s music.
- 2) Move the “start point” and “end point”, and then click “Play” icon to listen to the music.
- 3) Click the “Call ringtone” or “Notification ringtone” to set ringtone type.
- 4) Finally, connect device, and then click “Set as Ringtone” to set the music as device ringtone (“Call ringtone” or “Notification ringtone”). Or click “Save”, and then save the music to PC or save the music to device.

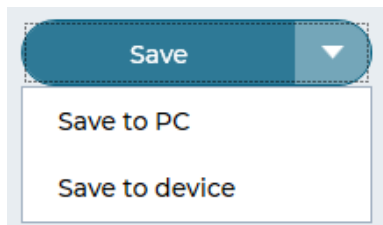


Screen Recorder

Click on "Screen Recorder" to access the "Screen Recorder" page. This feature allows you to record your phone's screen as a video. Once you have connected your device, the following page will appear. The page supports two functions: Screen Recorder and Recording video management.

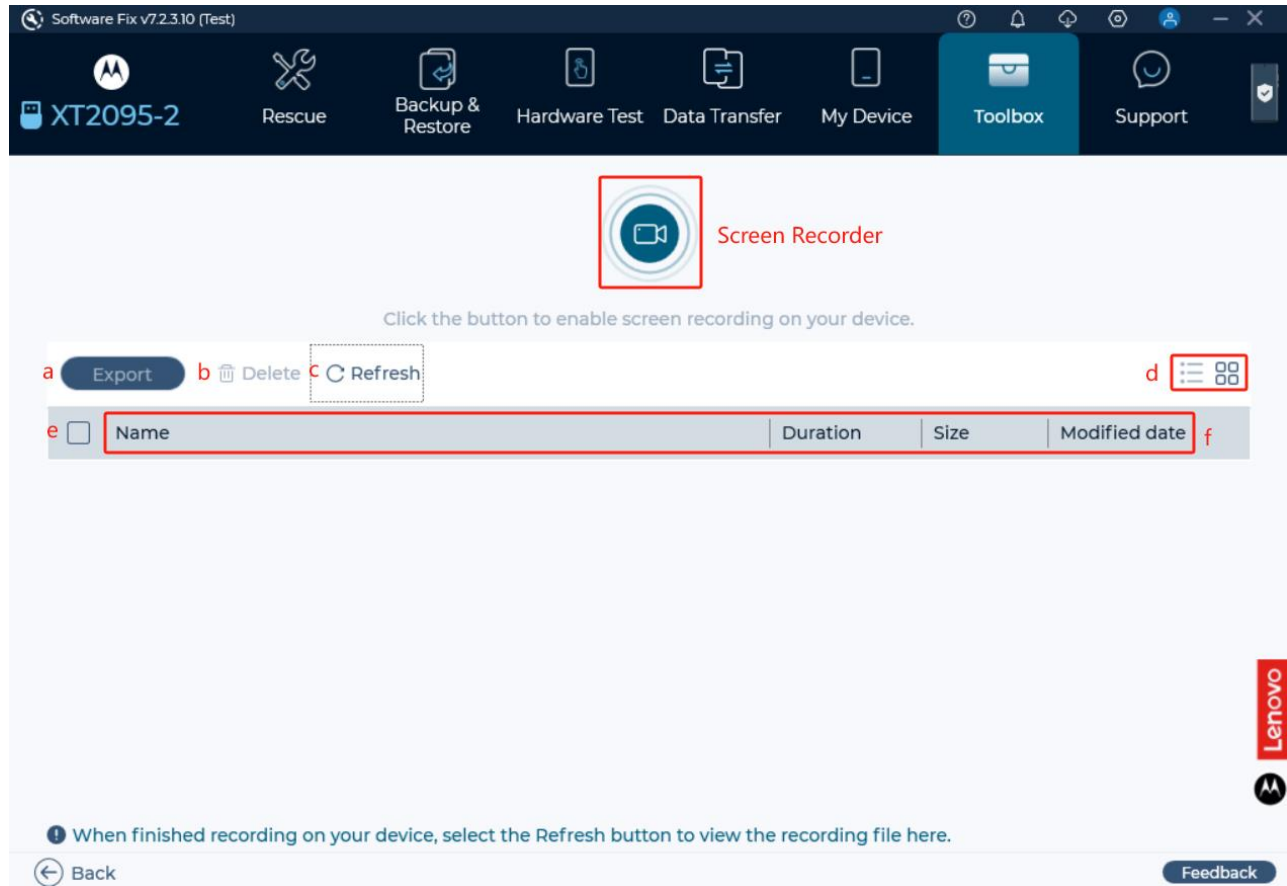

Record Screen of Mobile Assistant APP:


Connect your device to the client computer using a USB cable. Once connected, click on the "Recording" icon on your device. This will open a new page on your device that provides options for starting, pausing, and stopping the recording process, as well as viewing and managing recorded videos.

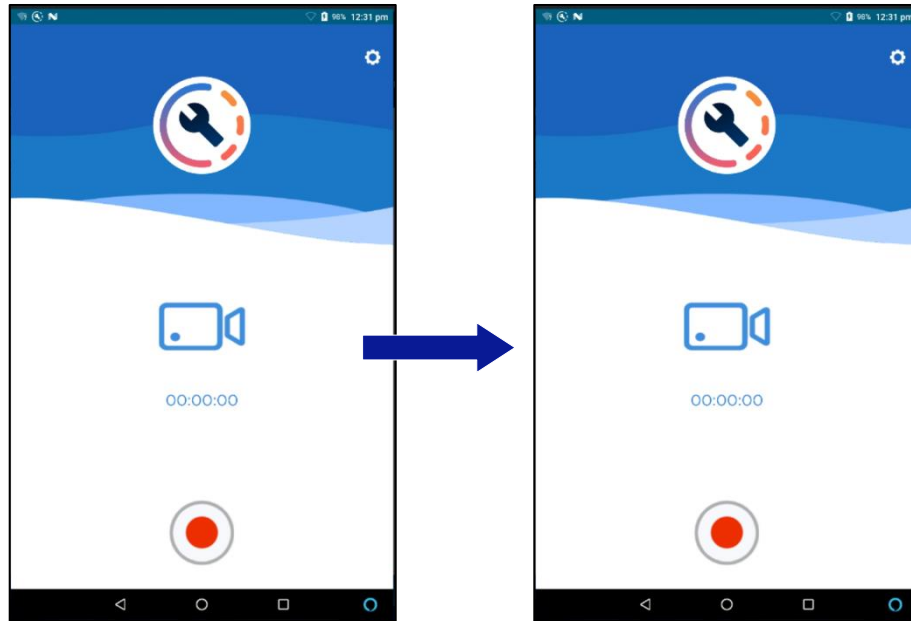

Click “Setting” icon at right top of page, it will enter setting page. You can set Resolution, recording direction and sound recording.

Click “Recording” button, it begins to record screen. You can pause or stop recording screen by those two ways as follow:

- Slip down the notification bar.
- Click device’s task key, and then Click Mobile Assistant app task.

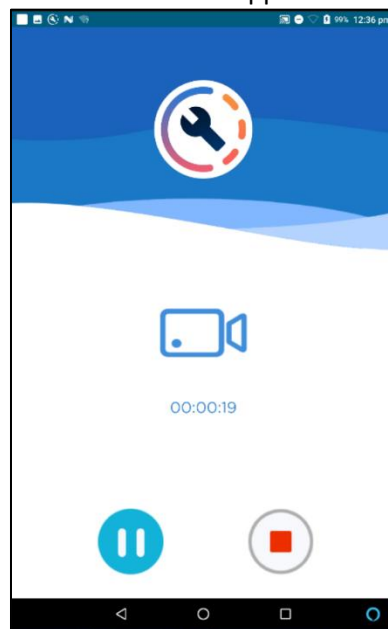


Video Management:


- a. Export: Select recording video, and then click “Export” and select export path. The selected video will be exported to the export path.
- b. Delete: Select recording video, then click “Delete” to delete selected video.
- c. Refresh: After recording video or delete recording video on device, click “Refresh” and loading latest video.
- d. View: It supports two view modes: Grid and List. Click  icon to switch to list mode, click  icon to switch to grid mode.
- e. Select All: Select all recording videos.
- f. Sort: Video supports sort function on list mode. You can sort them by “Name”, “Duration”, “Size” or “Modified date”.

Hardware Test


Click the ‘Hardware Test’ plug-in button.

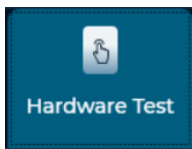


Connect the device follow the instructions on the page.

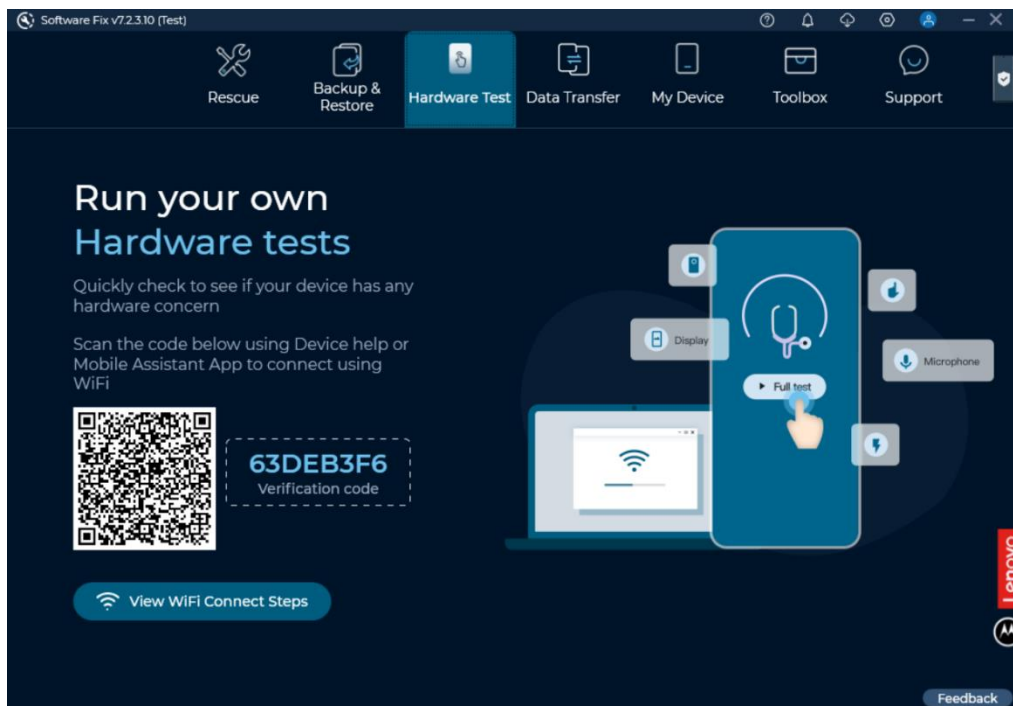


After connected device, the page will show the hardware test items.

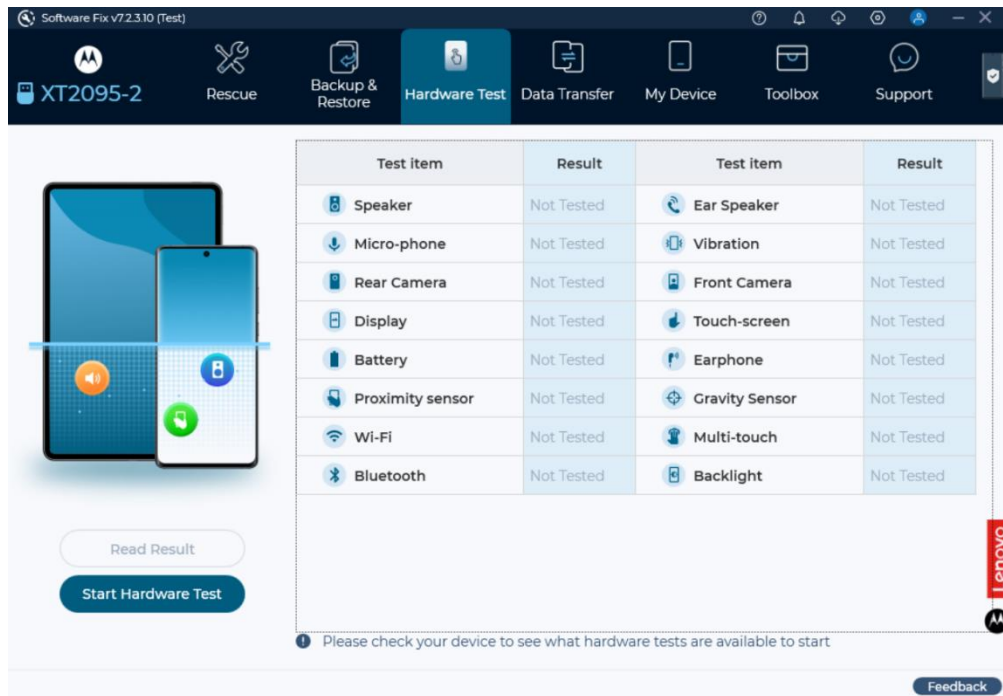


Click the 'Start Hardware Test' button to initiate the hardware testing process. Once the test has begun, the button will change to 'Finish Test'. At this point, you can click on the 'Read result' option to view the test results from your device.

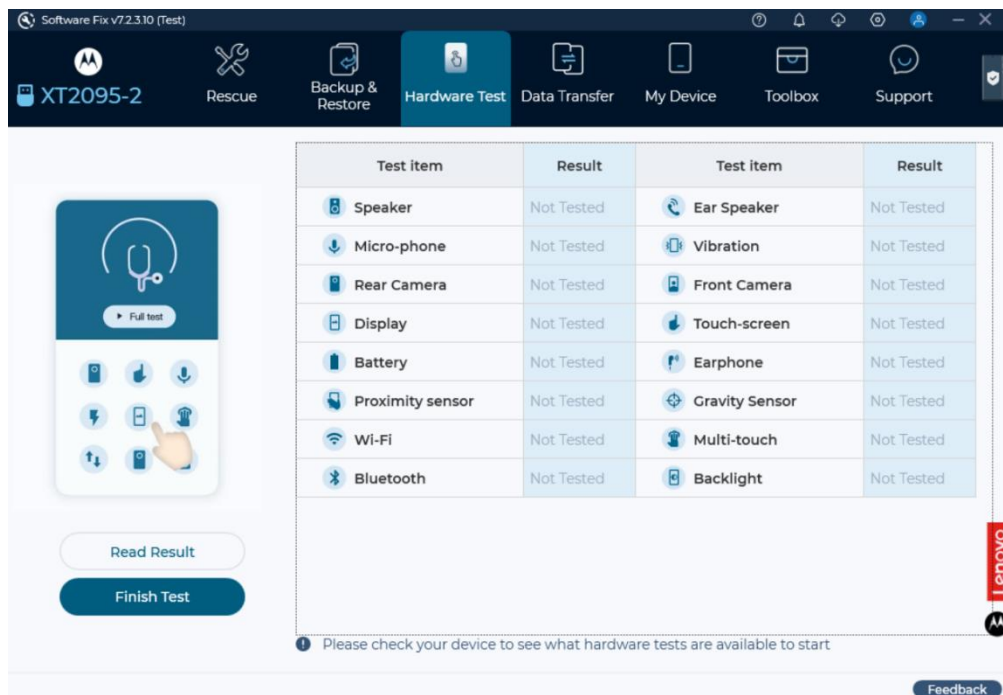

The APP in device will show as follow.

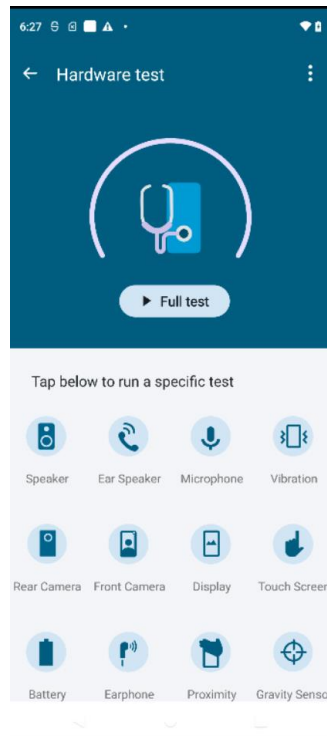


Do the hardware test and click 'Finish Test' or 'Read Result' in client, it will show the test result in client.

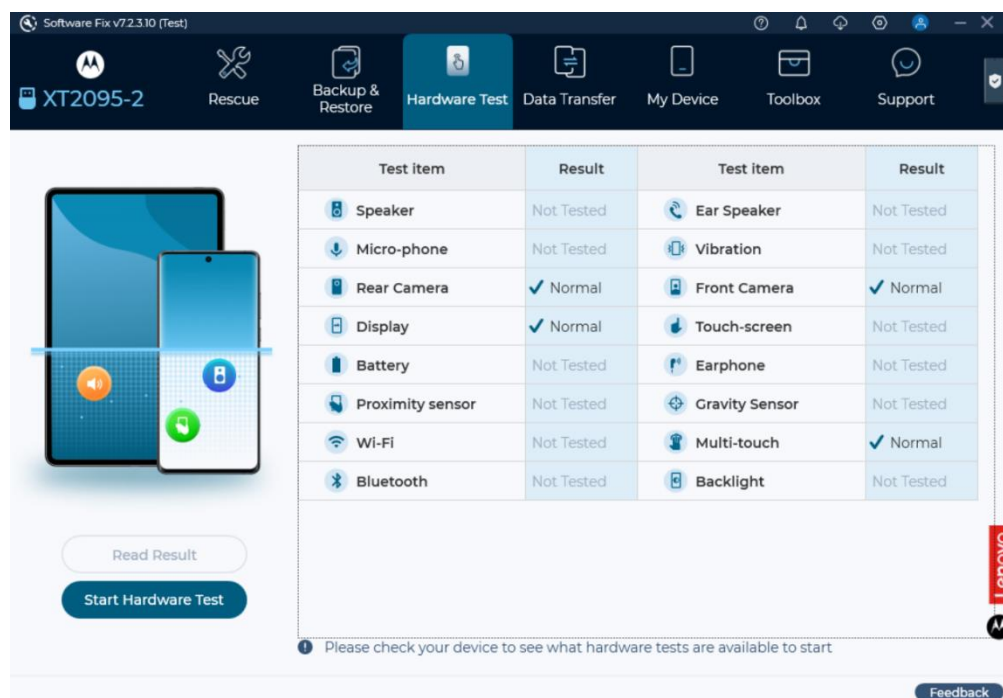


Support

Click the "Support" plug-in button.

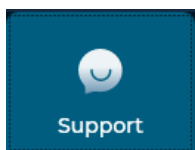

Select category (Lenovo Phones, Lenovo Tablets or Moto Phones), there are four functions: Tips, Forum, Moli \Lena and Warranty.

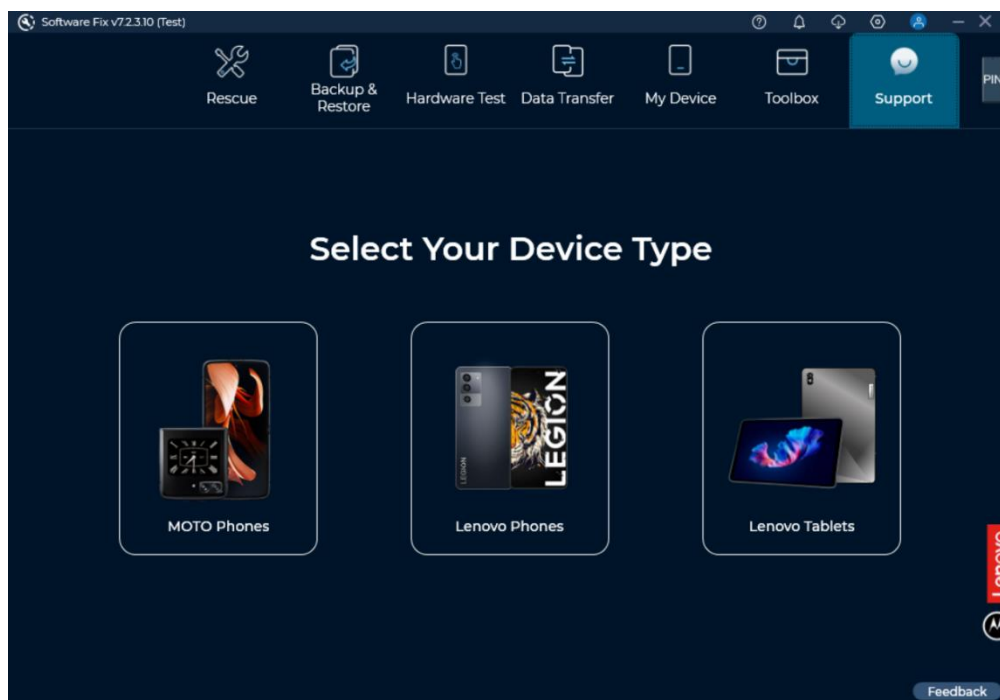


Tips

Click the "Tips" button:




Tips Online provides How-to & solutions for Lenovo and Moto devices based on the user's selection. For instance, if Lenovo Tablets is chosen, once the page has loaded, the following page will be displayed. Users can then reselect a category to view tips for either Moto phones or Lenovo Phones.

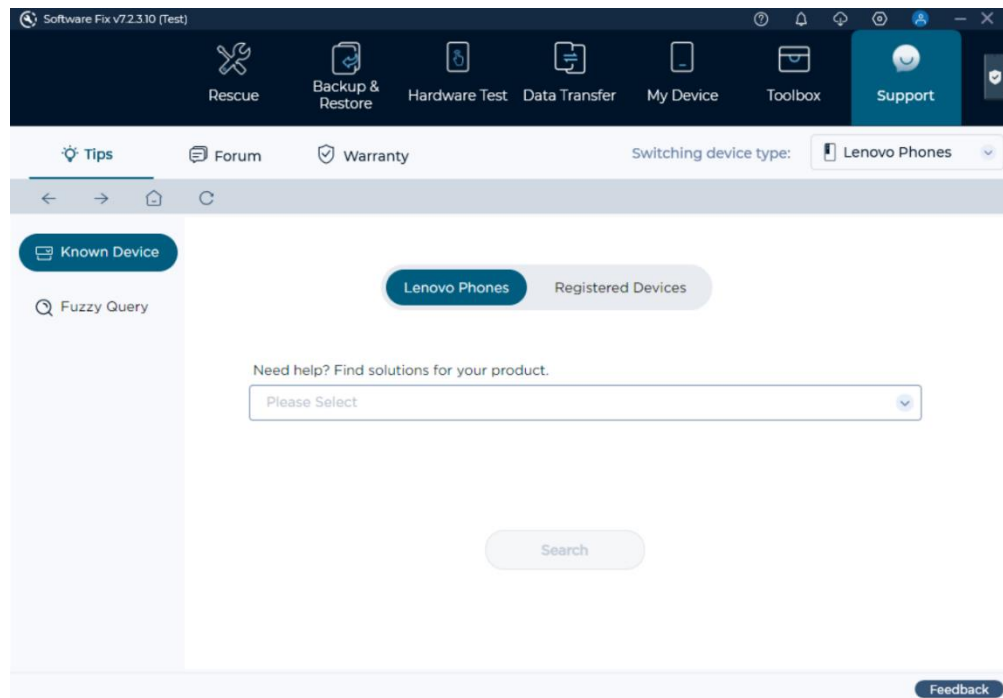


It will display the Lenovo Tablet and Registered Device buttons. There are two ways to find a product's solution.

- Click on the Lenovo Tablets or Registered button, and then select the sub-series and product. This will take you to the product solution page automatically.
- If you know your product name, you can enter it into the "Search by Product Name" input box to search for the product's solution. If you have connected a device, it will also be displayed in the "Search by Product Name" input box.

After entering the keywords and clicking the search icon, it will retrieve relevant information regarding the solution.

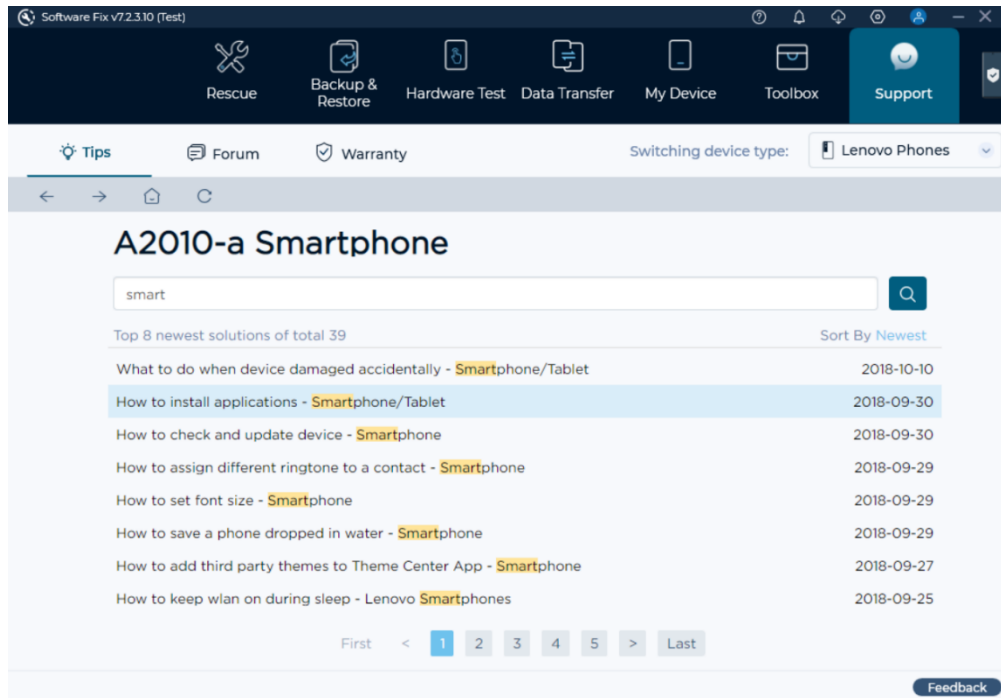

Click the link to view the solution details page.

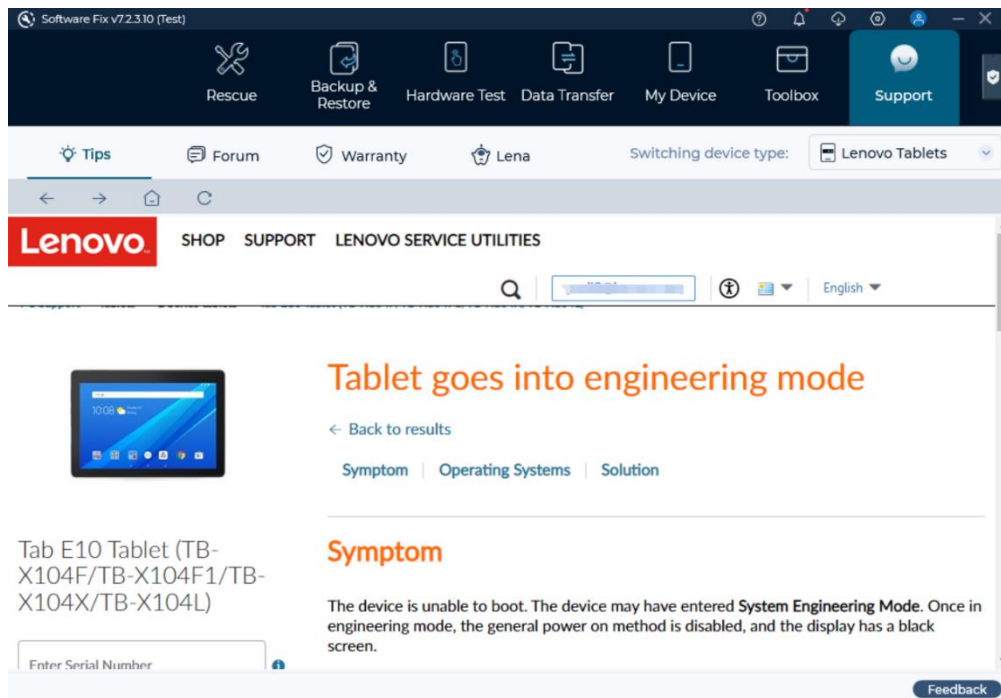


Forum

Click the "Forum" button:



For Example:

Lenovo Tablets category is selected, the following page will be appeared:

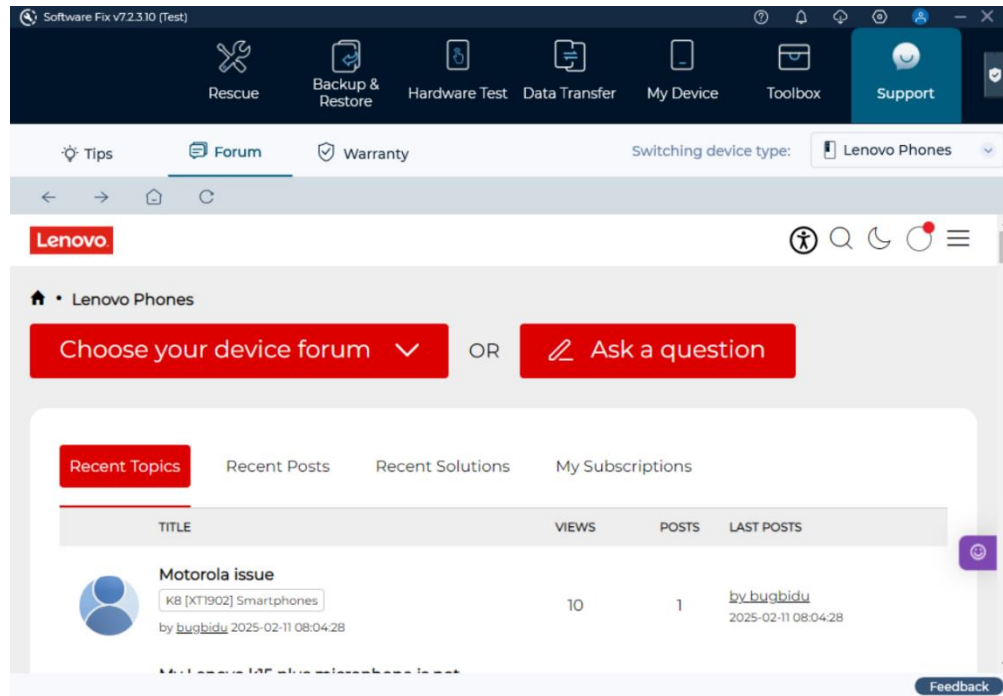


MIA/Lena

Click the “MIA” button:



For Example:

If the Moto Phones category is selected and the page has finished loading, the following page will appear. You can obtain assistance by communicating with Motorola Support.

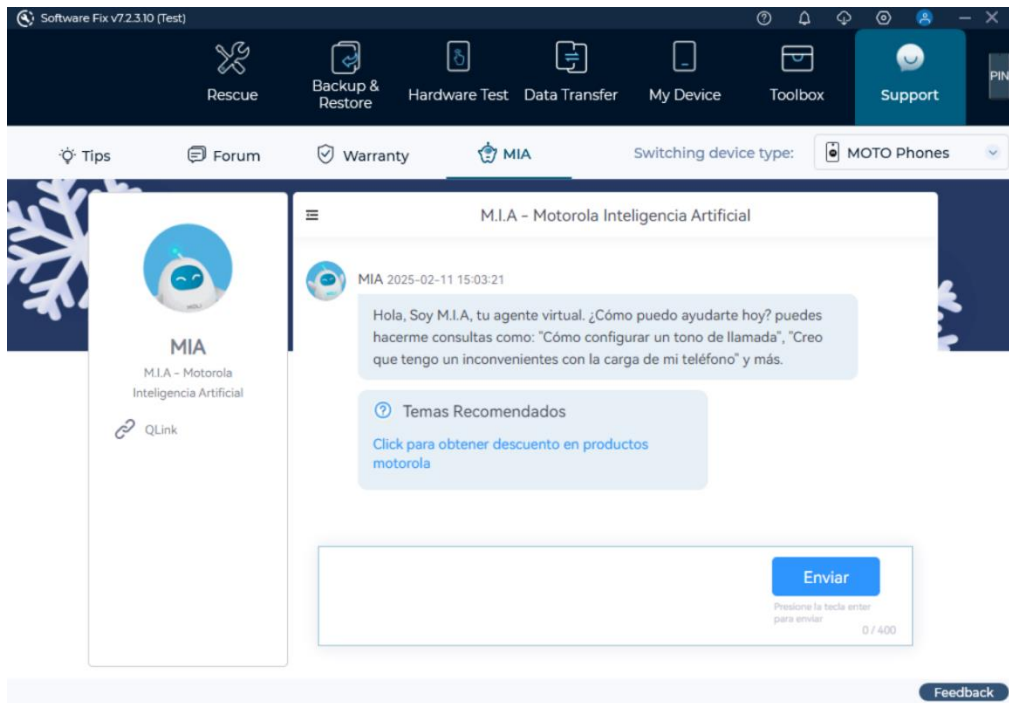


Warranty

Click the “Warranty” button:




Once loading is completed, the following page will be appeared. There are two ways to check your device’s warranty:

- The connecting devices and registered devices’ SN will be listed on the input box. Click the drop-down list, select one of the SN, and then check  icon to check.
- Input SN/IMEI on input box and then click  icon to check.

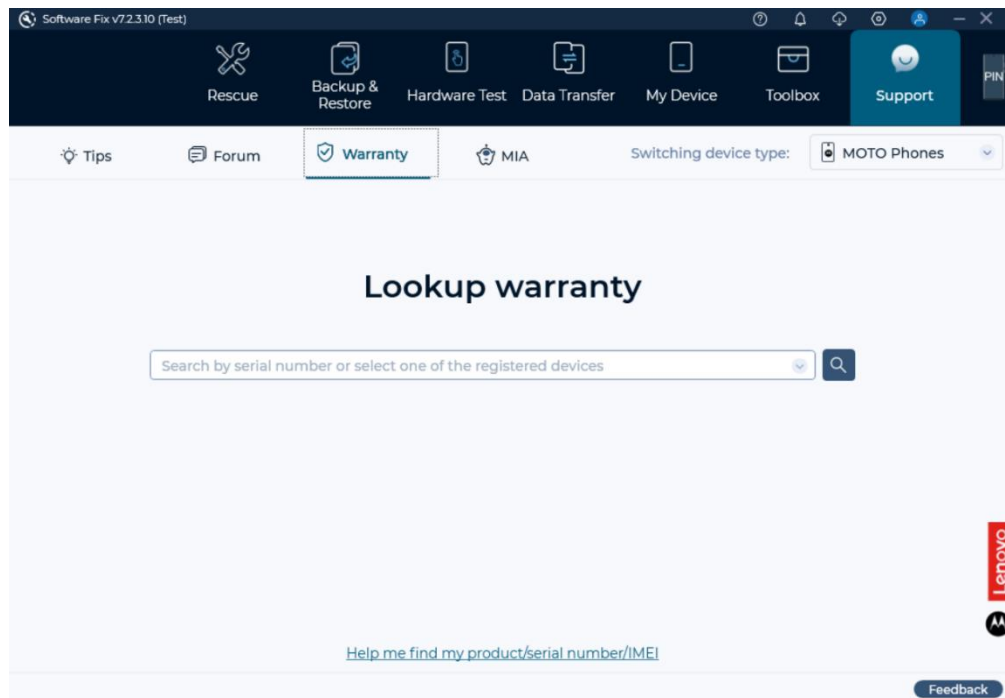

Data Transfer


The data transfer is a function of the MA in the device, and the interface mainly introduces how to use this function in the device to transfer data.

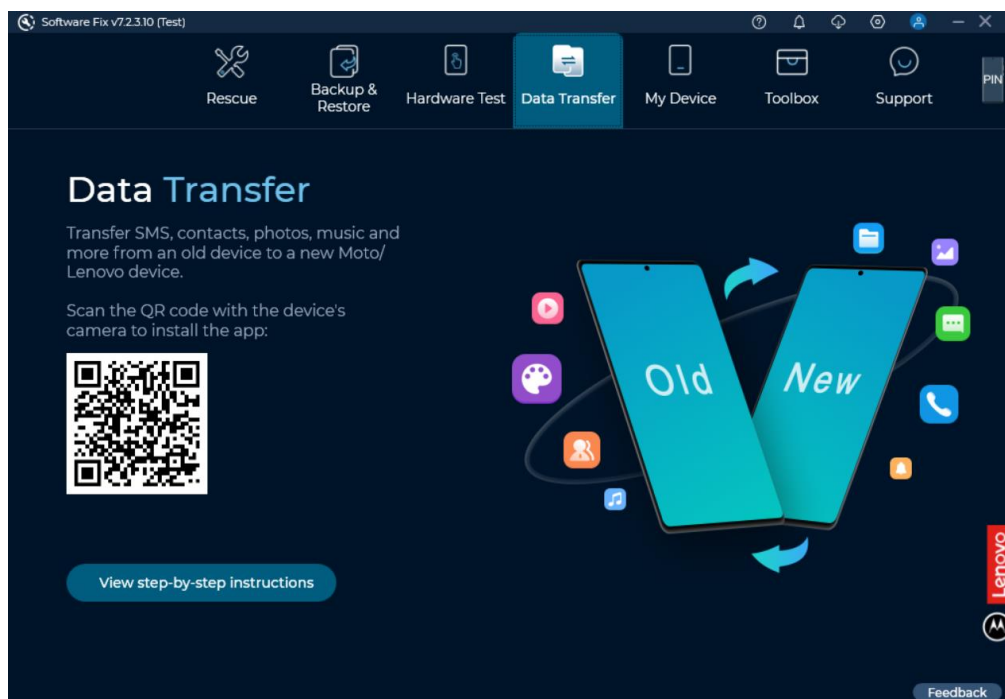

See 1.3.4 for details on how to use the function.

Feedback

Click on the "Feedback" button located at the bottom right corner to access the feedback page. You can submit your feedback, and it will be sent back to Lenovo.

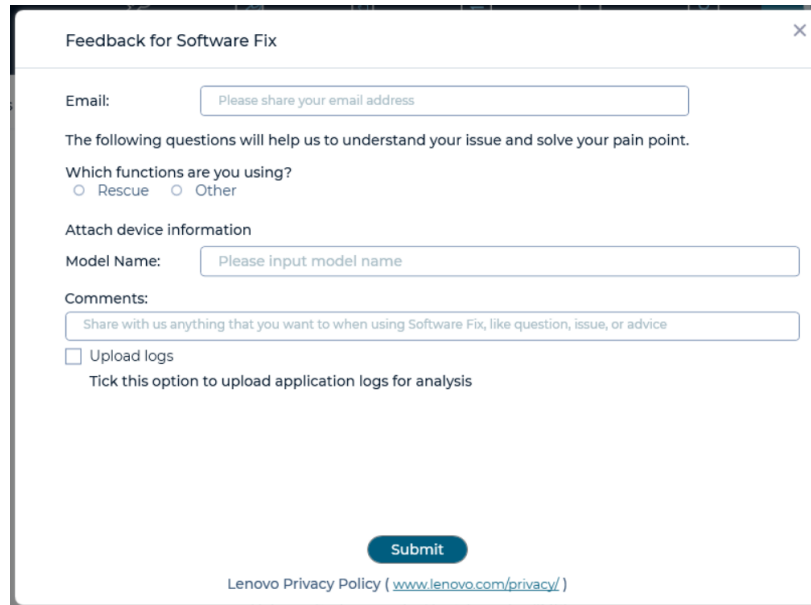


The screenshot shows a feedback form titled "Feedback for Software Fix". It includes an email input field with the placeholder "Please share your email address". Below this is a message: "The following questions will help us to understand your issue and solve your pain point." The first question is "Which functions are you using?" with radio button options for "Rescue" and "Other". The second section is "Attach device information" with a "Model Name:" label and an input field with the placeholder "Please input model name". The third section is "Comments:" with a text area containing the placeholder "Share with us anything that you want to when using Software Fix, like question, issue, or advice". Below the text area is a checkbox labeled "Upload logs" with the instruction "Tick this option to upload application logs for analysis". At the bottom is a blue "Submit" button and a link to the "Lenovo Privacy Policy (www.lenovo.com/privacy/)".

Survey

If you have minutes, we would greatly appreciate it if you could fill out the Software Fix survey. Your input will help us improve the app and make it even better for our users. Thank you in advance for your feedback!

Example survey:

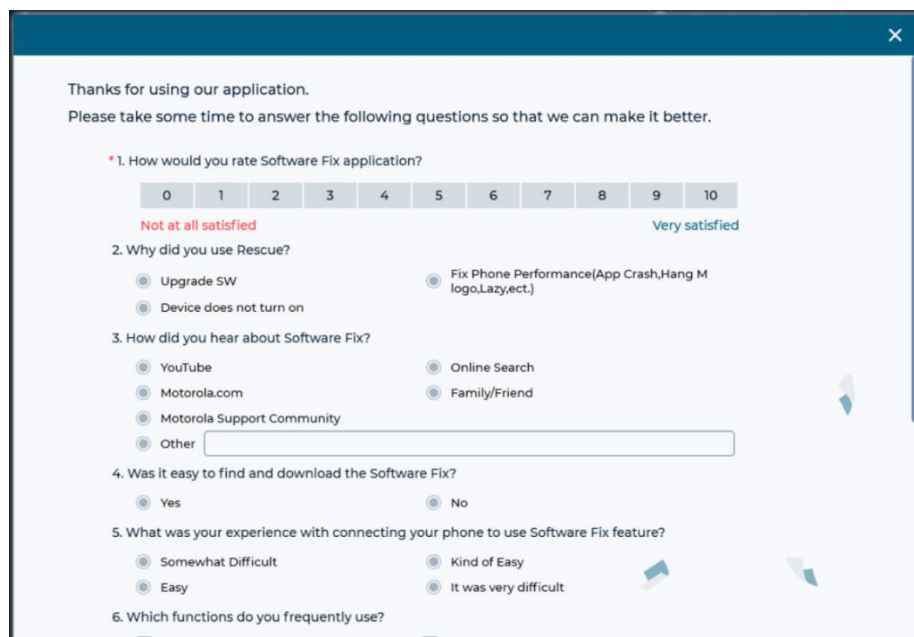

The screenshot shows a survey titled "Thanks for using our application. Please take some time to answer the following questions so that we can make it better." The survey consists of six questions:

- "How would you rate Software Fix application?" with a rating scale from 0 to 10. "Not at all satisfied" is written below 0 and "Very satisfied" is written below 10.
- "Why did you use Rescue?" with radio button options: "Upgrade SW", "Device does not turn on", "Fix Phone Performance(App Crash, Hang M logo, Lazy, ect.)", and "Online Search".
- "How did you hear about Software Fix?" with radio button options: "YouTube", "Motorola.com", "Motorola Support Community", "Family/Friend", and "Other" (with an input field).
- "Was it easy to find and download the Software Fix?" with radio button options: "Yes" and "No".
- "What was your experience with connecting your phone to use Software Fix feature?" with radio button options: "Somewhat Difficult", "Easy", "Kind of Easy", and "It was very difficult".
- "Which functions do you frequently use?"

7. Lenovo APP

You can download this APP by scan the QR code.



Also, can be downloaded at

<https://pcsupport.lenovo.com/us/en/lenovoapp>

Instruction of the APP:



Service FULL
Flow_Lenovo Help

8. Product Disassembly

8.1 Repair Tool

Tool Name	Picture	Tool Name	Picture
SIM Card Needle		Screwdriver	
Option 1 and 2 Heating Platform or Heat Gun		Option 3 Hair Dryer(1600W)	
Suction or Suction Cup		Guitar Pick	
Tweezers			

8.2 Common Repair Tips

There are some common repair videos for your reference, you can download and view them if needed.

1. How to assembly adhesive (such as TP module adhesive)

<https://osd.lenovo.com:443/kb/share/getShareFileListById?shareId=57315>

2. How to remove adhesive (such as TP module adhesive)


<https://osd.lenovo.com:443/kb/share/getShareFileListById?shareId=57316>

3. How to remove pulling battery adhesive

<https://osd.lenovo.com:443/kb/share/getShareFileListById?shareId=57317>

8.3 Key Tips


- Heating platform should be preheated to 80 degree Celsius for 5 minutes.
- Suction cup is required to pull out (open) the TPLCM.
- The black graphite foils and RF cable comes with the mainboard. No need to remove the black graphite and RF cable from the mainboard .

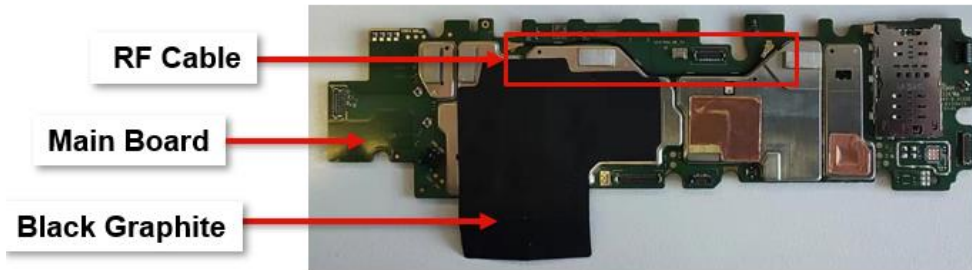

- The TPLCM FRU assembly includes the TPLCM adhesive. And the TPLCM adhesive can be ordered separately.
- Overall disassembly will take around 20 minutes.

8.4 Disassembly SOP

+ Disassembly

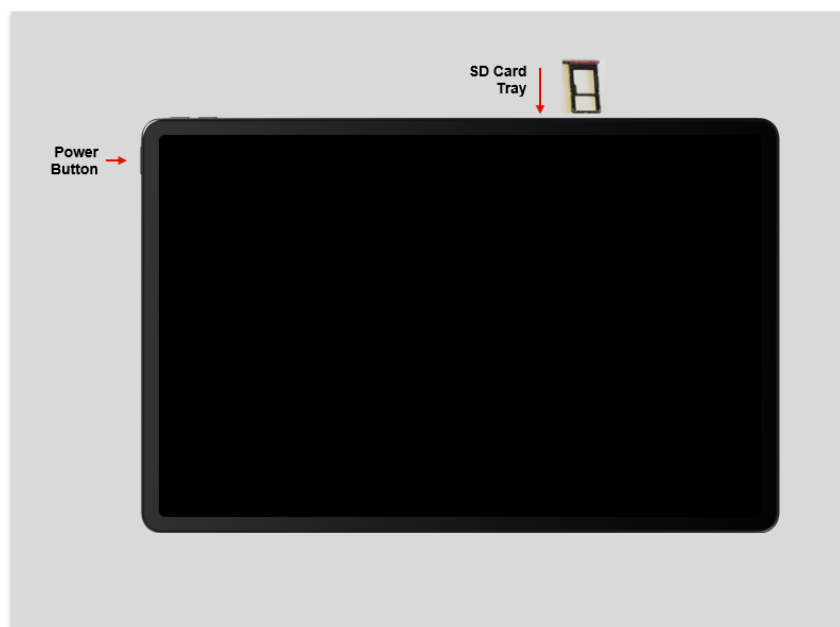

- Power off the device, wear ESD Bracelet before disassembly.
- Remove the **SD Tray** using a SIM Needle.

+ Disassembly



Option 1: Hair Dryer

- Place the tablet on a working table with the screen facing up.
- Adjust the heat gun to 60°C.
- Preheat for around 30 seconds before applying on device.
- Heat the four sides for 10 minutes.

+ Disassembly



- Preheat the heating platform* to 75°C, then put the device on the heating platform with the screen facing down.
- Heat for 5 minutes.

*Note:

Heating Platform can be ordered under Part Number **5948C18976**.



Lenovo T&SD WW SVC TS&PE

+ Disassembly




Lenovo T&SD WW SVC TS&PE

Option: Heat Gun

- Place the tablet on a working table with the screen facing up.
- Adjust the heat gun to 140°C at mid-level air speed.
- Preheat for around 30 seconds before applying on device.
- Heat the four sides evenly for 30 seconds each side, at 3 cm distance with 30 degree angle


Lenovo

+ Disassembly

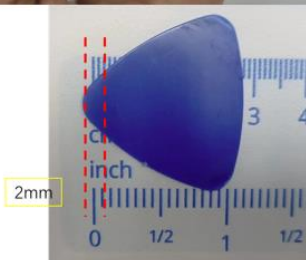

- Apply the suction cup to the front housing at the front facing camera.
- Then insert a guitar pick between the gap starting from the front camera, then slide around the edges following the direction of the arrows in the picture.
- Place one guitar pick in each side after sliding each side;
Note: the guitar pick should be inserted no deeper than 2 mm.


+ Disassembly

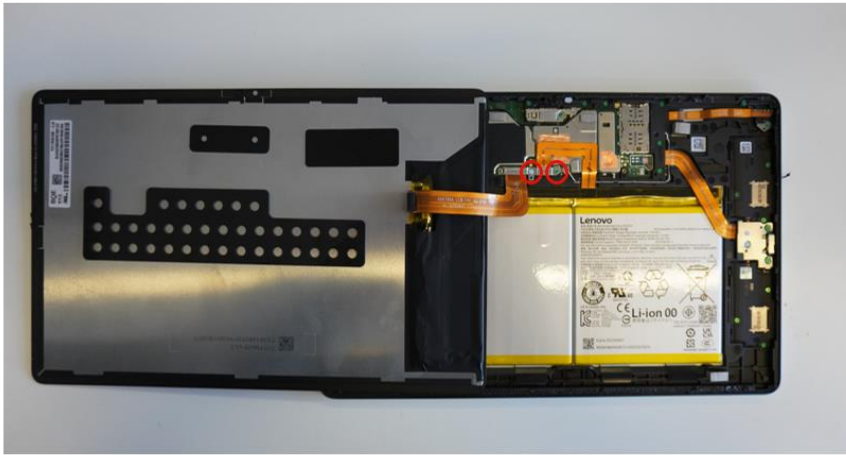

- Carefully open the TPLCM and place it on the rear housing screen facing down (left picture).
- Remove **2 screws** as circled in red.
- Remove the **LCM FPC Metal**.

Lenovo


+ Disassembly

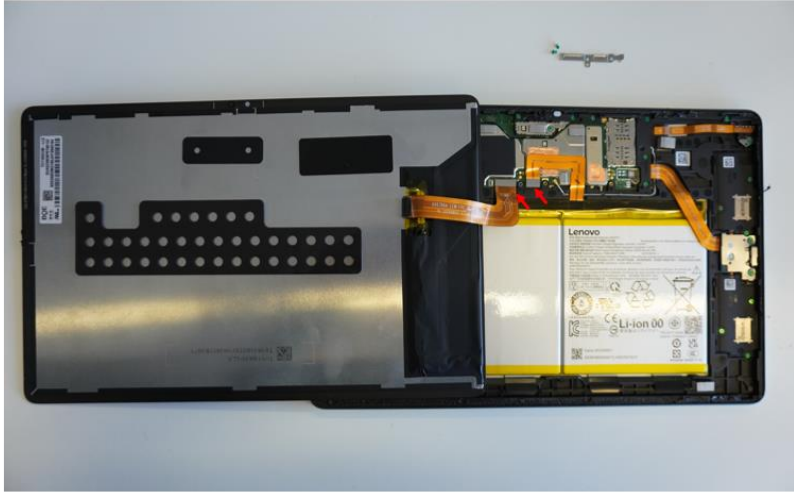

- Disconnect the Battery FPC connector;
- Disconnect TP LCM FPC connector;
- Remove the **TPLCM** from the device.

Lenovo


+ Disassembly

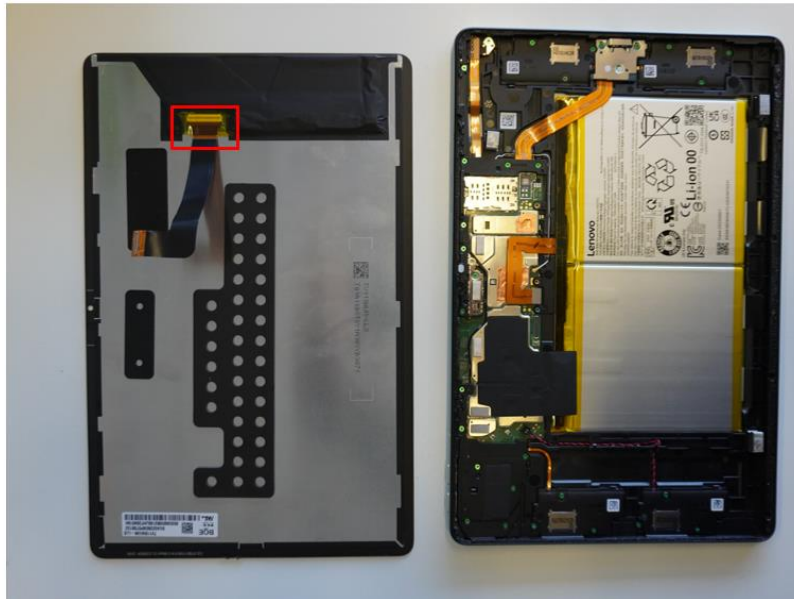

- Remove the **TP FPC Mylar**;
- Disconnect the ZIF connector and remove the **TP FPC**.

Lenovo

+ Disassembly

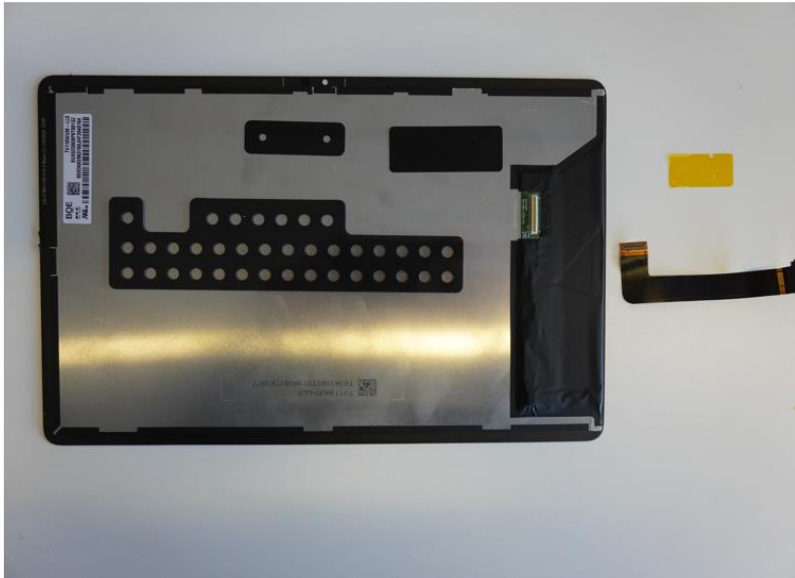

After removing the FPC and Mylar, the TPLCM is as left picture.

Lenovo

+ Disassembly



- Remove **3 Green Screws**;
- Remove the **Speaker box1**;

Lenovo


+ Disassembly



- Remove **6 Green Screws**;
- Remove the **R_CAM** frame;

Lenovo

+ Disassembly

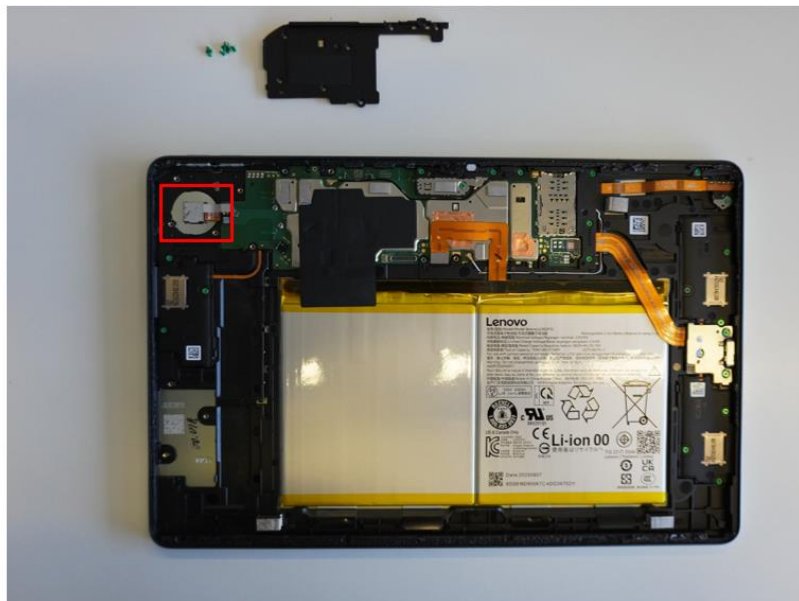

- Remove the **R-camera**

Lenovo

+ Disassembly



- Remove **7 Green Screws**;
- Remove **F-camera frame**;

Lenovo

+ Disassembly



- Remove **2 Green Screws**;
- Remove the **Headset Sub board**;

Lenovo

+ Disassembly



- Remove **3 Green Screws**;
- Remove the **USB Sub board metal**;

Lenovo

+ Disassembly



- Remove the **USB Sub board**

Lenovo


+ Disassembly



- Remove **USB sub board rubber**;

Lenovo

+ Disassembly

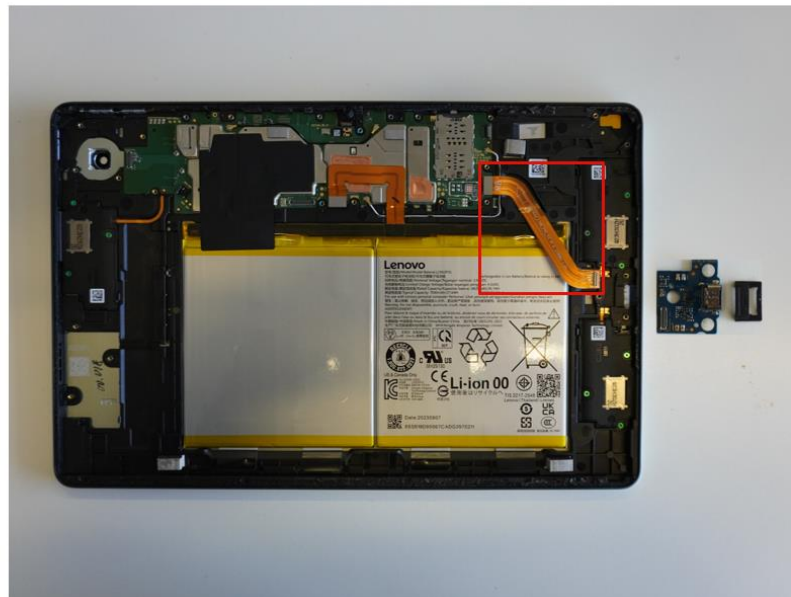

- Remove **MB to SUB FPC**;

Lenovo

+ Disassembly



- Remove **3 Green Screws**;
- Remove the **Speaker box3**;

Lenovo

+ Disassembly



- Remove **3 Green Screws**;
- Remove the **Speaker box4**;

Lenovo

TB330FUXU

+ Disassembly




- Disconnect the **RF Cable**;

Lenovo

TB330FUPXUP

+ Disassembly

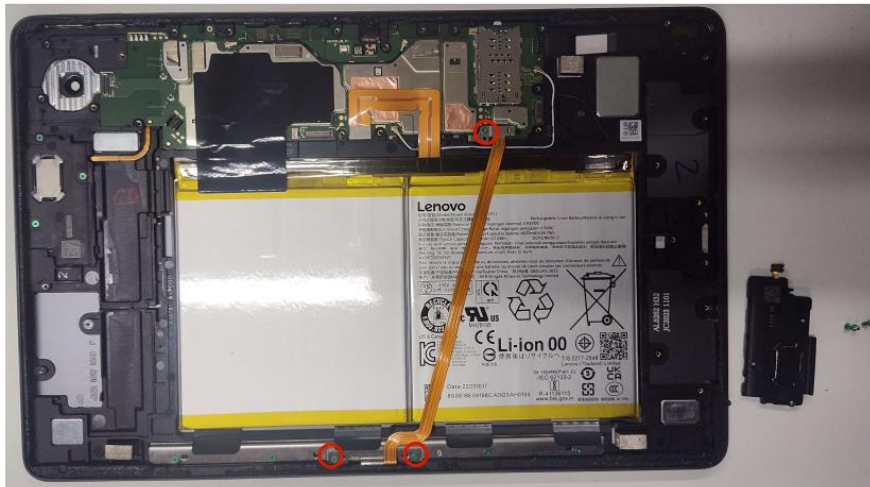

- Remove **3 Green Screws**;
- Remove the **Pogo PIN**;

+ Disassembly

- Disconnect the **RF Cable**;




+ Disassembly

Remove the **Front Camera** with the **Front Camera Rubber**;



Lenovo

+ Disassembly

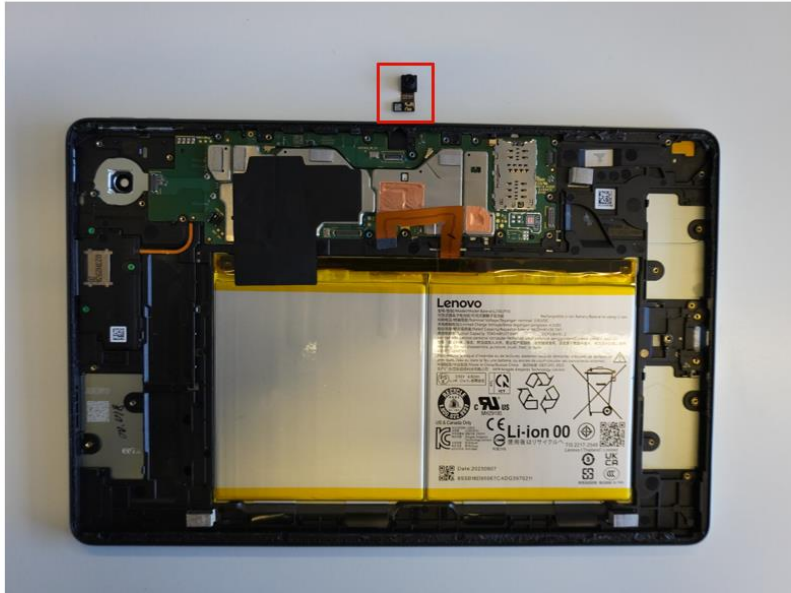

- Remove the **F-Camera rubber**;

Lenovo

+ Disassembly



1. Remove the **Main board**;

Lenovo

+ Disassembly



- Remove the **Power key** and **Volume key**.

Lenovo

+ Disassembly




- Remove the **3 Green Screws**;
- Remove the **Speaker box2**;

Lenovo

TB330FUXU

+ Disassembly

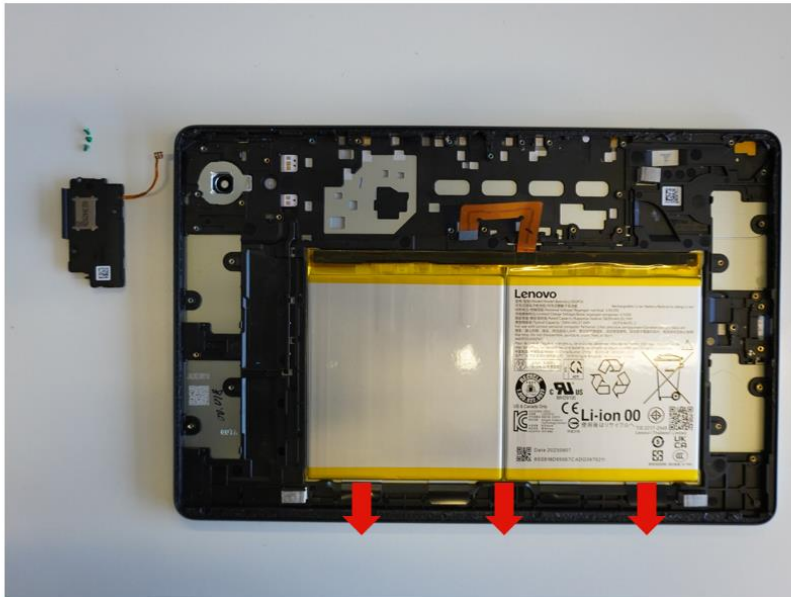

- Slowly pull the 3 Battery Adhesive Tabs using tweezers
- Remove the **Battery**.

Lenovo

TB330FUPXUP

+ Disassembly



- Slowly pull the 4 Battery Adhesive Tabs using tweezers
- Remove the **Battery**.

Note: Battery Adhesive Removal video available in OSD:

All

[Files » Universal » Solution » Adhesive Installation » Remove Pulling Adhesive Instruction.mp4](#)

+ Disassembly




After remove the Battery, it will leave the **Rear Cover**.



TB330FUXU


+ Screws Location

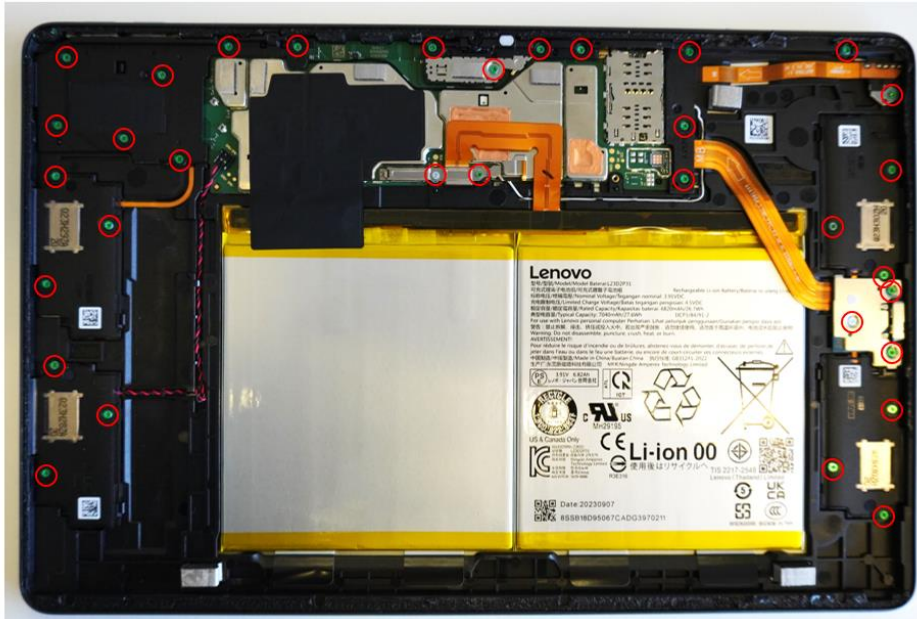

- 33 Green Screws
(Circled in red)

TB330FUPXUP

+ Screws Location

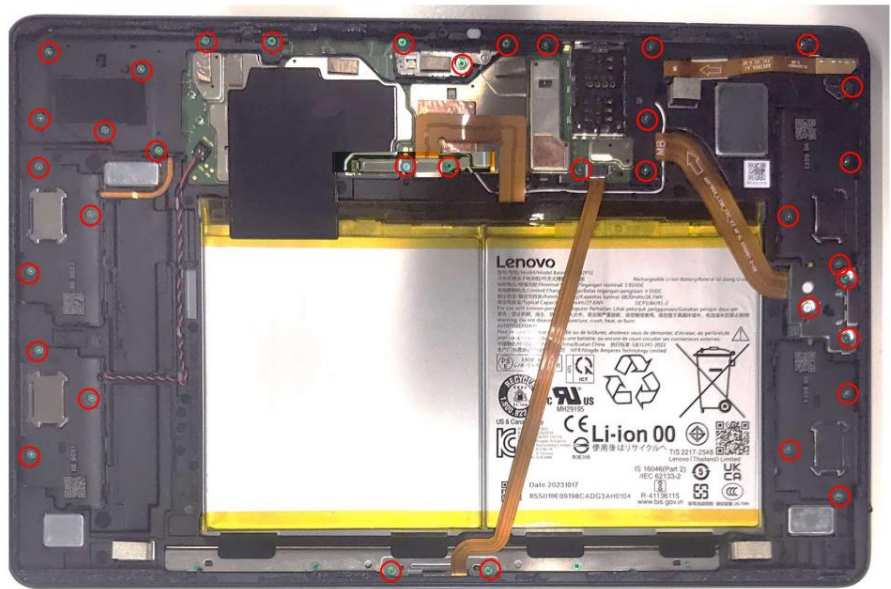


- 36 Green Screws
(Circled in red)

9. Part Replacement Repair

9.1 Explosive View

TB330FUXU


+ Explosive View

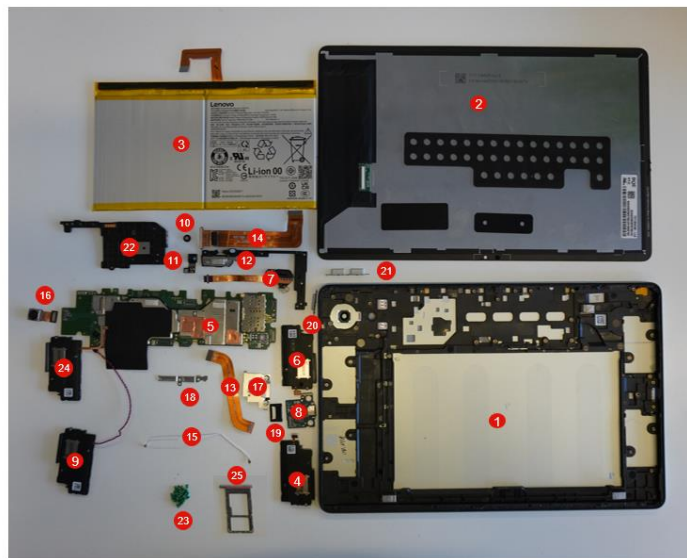

#	Part	#	Part
1	Rear Cover	14	LCD FPC
2	TPCLM	15	RF-Cable
3	Battery	16	Rear Camera
4	Speak Box4	17	USB board Metal
5	Main Board	18	Battery Metal
6	Speak Box3	19	USB board rubber
7	Headset Sub-Board	20	Power key
8	USB Board	21	Volume key
9	Speak Box1	22	Rear camera frame
10	Front Camera Rubber	23	Green Screw
11	Front Camera	24	Speak Box2
12	Front Camera Frame	25	SIM Tray
13	USB FPC		

TB330FUPXUP

+ Explosive View

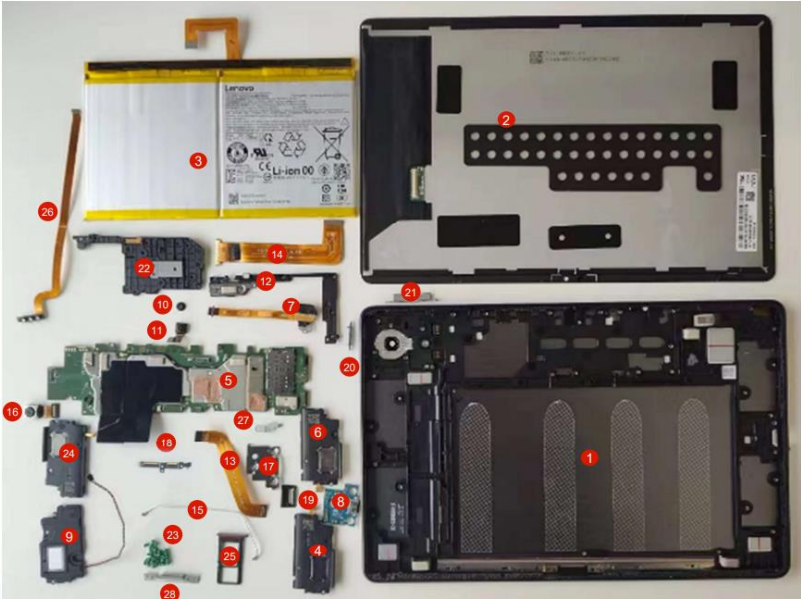

#	Part	#	Part
1	Rear Cover	15	RF-Cable
2	TPLCM	16	Rear Camera
3	Battery	17	USB board Metal
4	Speak Box4	18	Battery Metal
5	Main Board	19	USB board rubber
6	Speak Box3	20	Power key
7	Headset Sub-Board	21	Volume key
8	USB Board	22	Rear camera frame
9	Speak Box1	23	Green Screw
10	Front Camera Rubber	24	Speak Box2
11	Front Camera	25	SIM Tray
12	Front Camera Frame	26	Pogo PIN FPC
13	USB FPC	27	Pogo PIN FPC Conn metal
14	LCD FPC	28	Pogo PIN FPC fix metal


9.2 How to Order PN

We recommend you use our repair options during the in-warranty period for best results. However, if you would like to perform the repair yourself, you can find and purchase high-performance replacement parts on <https://support.lenovo.com>.

1. Look up


Identify your device, view parts info & availability

Click **View PC Support**:

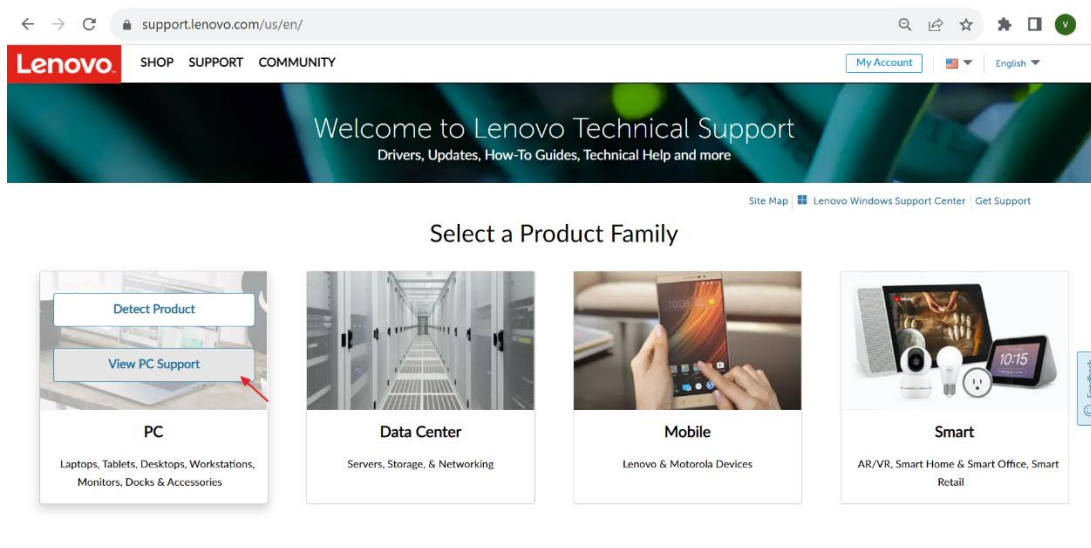

Input your tablet serial number (SN) then click search icon.

[How To Find Device's Serial Number \(SN\) For Android Tablets](#)

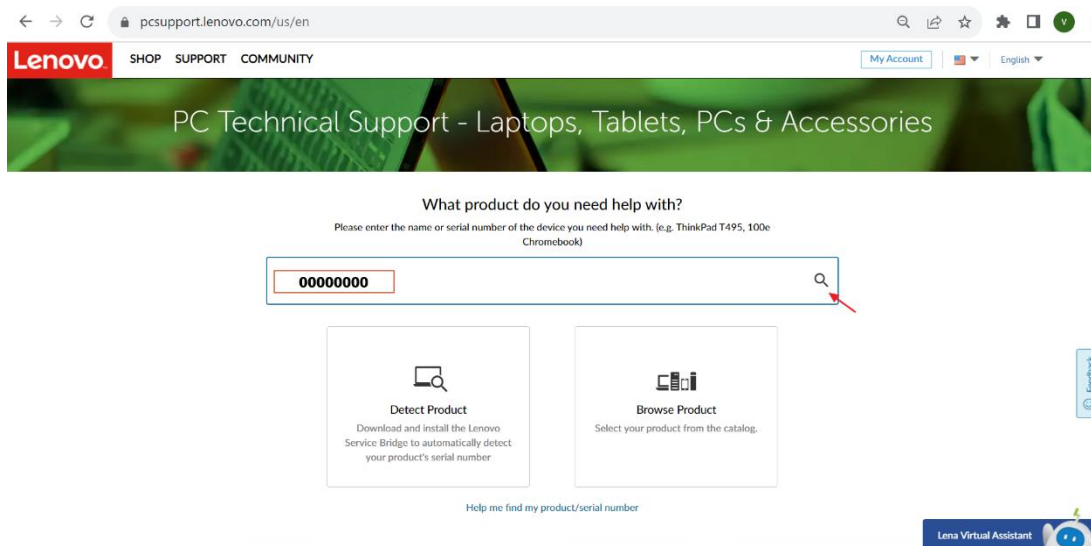

Then you can find the product's information, click "Purchase Parts" to find parts list.

PC Support > Tablets > M Series tablets > Lenovo Tab Plus (TB351FU) - Type ZADK

Product Home



Lenovo Tab Plus (TB351FU) - Type ZADK
Change Product

Serial Number 00000000
Machine Type Model ZADK0091SE
Spec Info View

In Warranty < 15 months remaining

[View Warranty](#)

[Upgrade Warranty](#)

How can we help you?


Troubleshoot & Diagnose


Guides & Manuals


How To's & FAQs


Lenovo Support Community


Warranty & Services


Check Repair Status


Purchase Parts


Contact Us

2 . Select Parts

Select the parts you want to purchase.

[Please](#) choose your country first. You could also select display language. Click on "Model", you can see the service parts information.

PC Support > Tablets > M Series tablets > Lenovo Tab Plus (TB351FU) - Type ZADK

My Account |  | [English](#) | 

Parts

Tutorial on [purchasing parts](#) | [Lenovo Parts FAQ](#) | [Parts Lookup](#)

As-Built **Model** Machine Type Schematic [Multiple Parts Order](#)

Out of stock

Out of stock

Out of stock

Out of stock

Out of stock

Out of stock

DISPLAY & LCD MODULE POWER ADAPTER BATTERY KEYBOARDS CABLE MEMORY

Select Commodity ▾

☐ In-stock parts only ☐ Special Offer [Best Seller ▾](#)

Found 0 results:

Sorry, no matching data is found

Total: 0 1 Show Rows 10 ▾

For parts installation enquiry and assistance, please kindly contact our [technical support](#).
The above parts are filtered for your specific system. To find more parts for this machine type, please check the Machine Type tab.

[Product Home](#)

[Troubleshoot & Diagnose](#)

[How To's](#)

[Guides & Manuals](#)

[Warranty & Services](#)

[Repair Status](#)

[Parts](#)

[Contact Us](#)

Click on parts category pictures or select commodity pull down list to choose the parts you want.

PC Support > Tablets > M Series tablets > Lenovo Tab Plus (TB351FU) - Type ZADX



Parts

Tutorial on [purchasing parts](#) | [Lenovo Parts FAQ](#) | [Parts Lookup](#)

Search by parts name or number

Search is limited to this model.
[Click here](#) to find parts for a different device.

As-Built **Model** Machine Type Schematic [Multiple Parts Order](#)



DISPLAY & LCD MODULE BATTERY CABLE MISC. PARTS POWER ADAPTER KEYBOARDS

Serial Number: 00000000 [Detect Product](#) [Change Product](#)

- Product Home
- Troubleshoot & Diagnose
- How To's
- Guides & Manuals
- Warranty & Services
- Repair Status
- Parts**
- Contact Us

Searching for parts by entering a serial number provides the most accurate list of parts for your device configuration.

Select Commodity ^

☒ All Batteries - NB AND CMOS (BIOS) (1)
☐ Covers All Second LCD, LED Displays (1)
☐ Covers All Types Of Cabling. (1)
☐ COVERS VARIOUS BUTTON, SUCH AS BUTTON, S (2)
☐ COVERS VARIOUS METAL COMPONENTS, SUCH AS (7)
☐ Die-Cut Pieces\Double-Sided Adhesive And Foam (8)
☐ FLEXIBLE PRINTED CIRCUIT (3)
☒ Graphics/Video Cards (2)
☐ Housing \ Housing \ Battery Cover (4)
☐ Monitors External (3)
☐ Motherboard, Planar (1)

☐ In-stock parts only ☐ Special Offer ☒ Best Seller

0001-000 CS

RDS

Est 3-7 days delivery

£31.57

[Add to Cart](#)



Calla Speaker Box;JBLHEA060X1029X004;2W

Part No SSB8E17B62

Commodity SPEAKER - SB

[View More](#)


[-](#) **1** [+](#)

Substitutes (0) Bundles (0)

3. Check Out

Complete your order and check out.

Add parts to cart and check out.

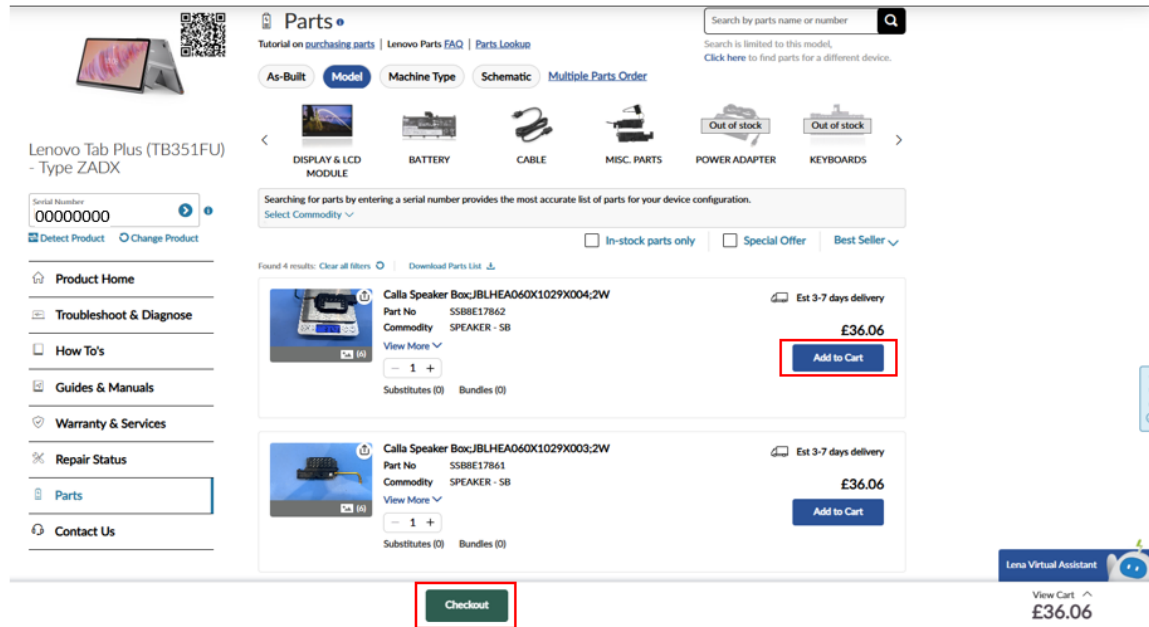

Fill in address and pay for the order

Your Cart (1 item(s))

Note: Stock will not be held until you check out. Please do so at your earliest convenience.



Calla Speaker Box: JBLHEA060X1029X004:2W

Part No: SSB8E17862

£36.06

1

Remove

Conditions of Parts may be New or Refurbished (like new) and equivalent in performance and reliability.

Shopping cart bill

Sub-Total	£36.06
Savings of	-£0.00
Shipping	Free
Estimated Total	£36.06

Checkout


Est 3-7 days delivery

If you buy Lenovo tablet from authorized retailer and would like to do self-repair, Lenovo also provide the parts ordering channel where e-support website parts list is not available.

You could contact the retailer or Lenovo recommended repair provider or repair center who can help with purchasing the correct parts from [LenovoEsales | LenovoEsales](#) (Find the support country list as below).

To find a repair center or service provider, go to the following site and enter the required information - [Find a Lenovo Service Provider](#). For more information, click: [How to Locate a Repair Center or Service Provider](#)

Input Model Name in search box to find the part list, contact your retailer or recommended repair provider to help you select and order spare parts.

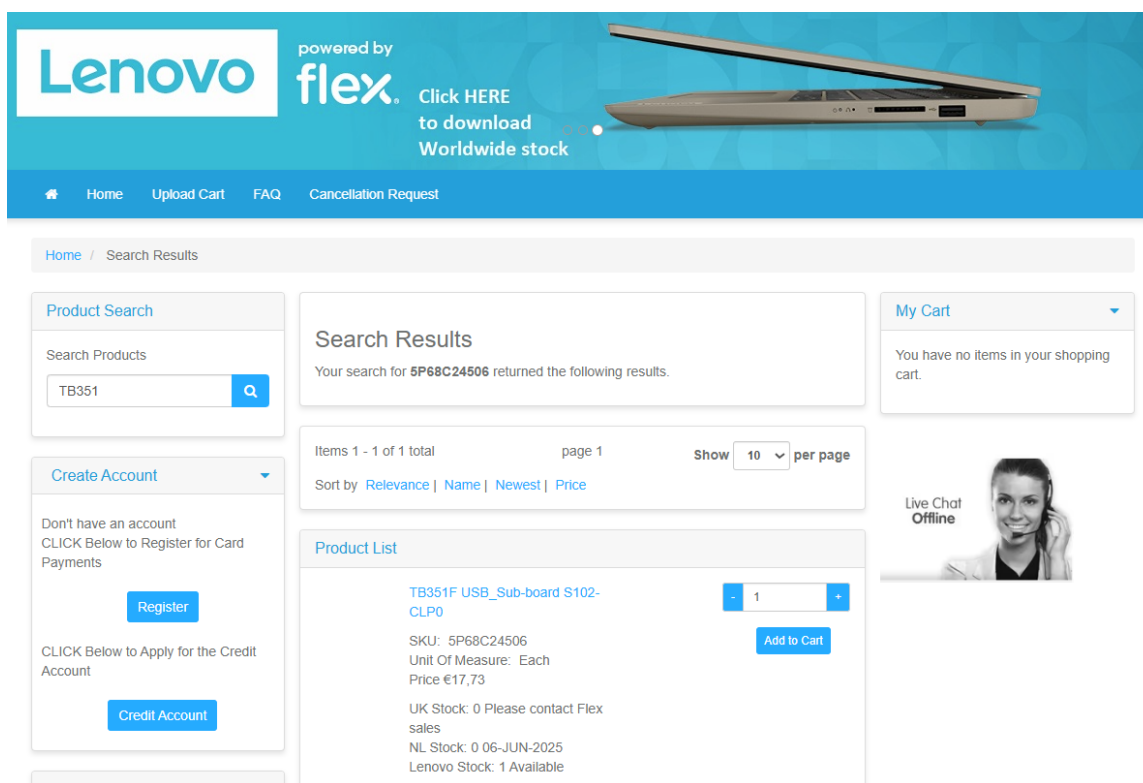

Note: [LenovoEsales](#) | [LenovoEsales](#) support country reference for indirect sale order: Bulgaria, Cyprus, Czech Republic, Estonia, Greece, Hungary, Latvia, Lithuania, Poland, Romania, Slovakia, Slovenia, Iceland, Türkiye.

10. Accessories

1. Block Diagram & Circuit Schematic



2. Component Layout

